



Remove wire from canopy by unthreading cap (A) from threaded nipple (B) and then pulling wire through.

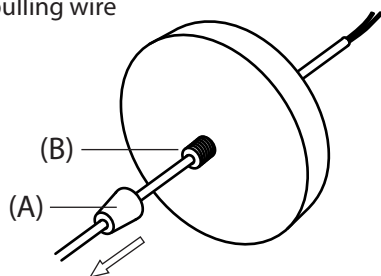


1

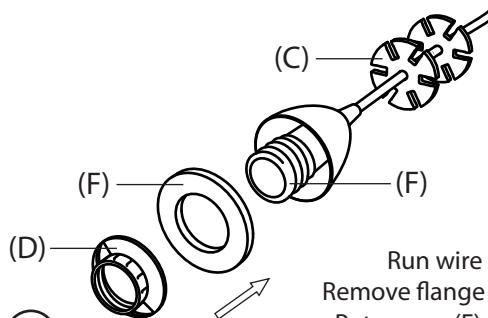

2


Run wire through two center disks (C). Remove flange (D) from threaded socket (E). Put spacer (F) onto threaded socket (E) and thread flange (D) back onto threaded socket (E).

Fit the third center disk (G) into one on the chandelier arms (H) by interlocking their corresponding notches. Fit the two center disks (C) in the socket/wire assembly into the two notches in the top of the chandelier arm (H).

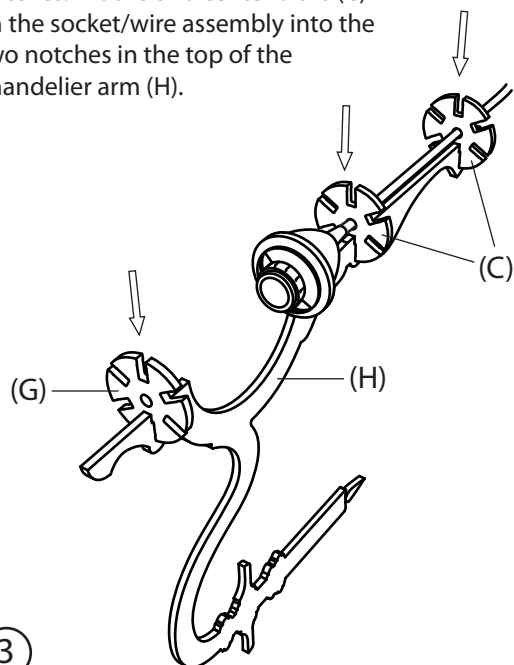


3

Install the five remaining chandelier arms in a similar fashion

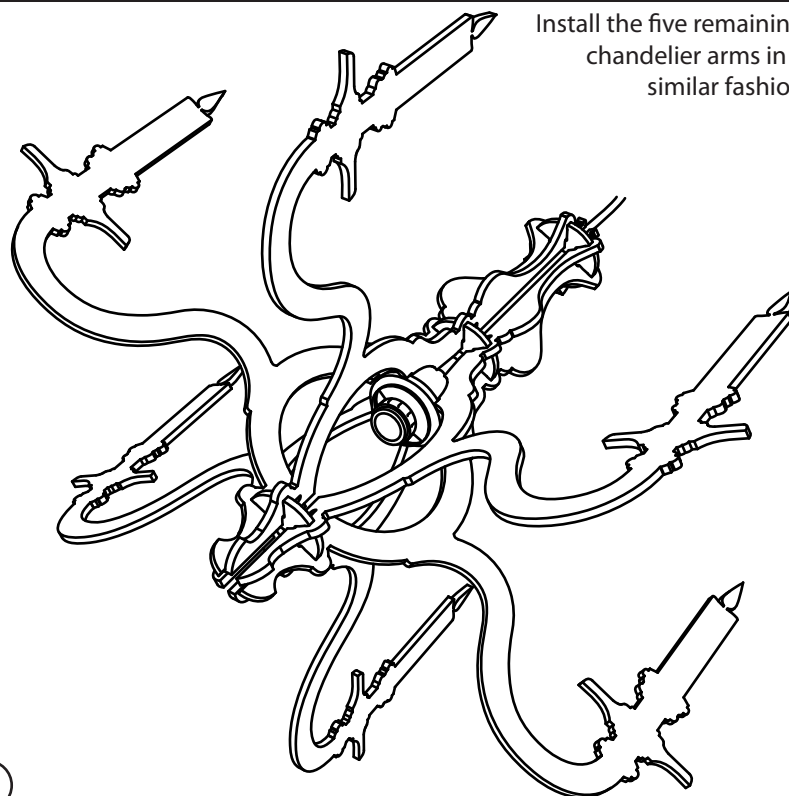


4

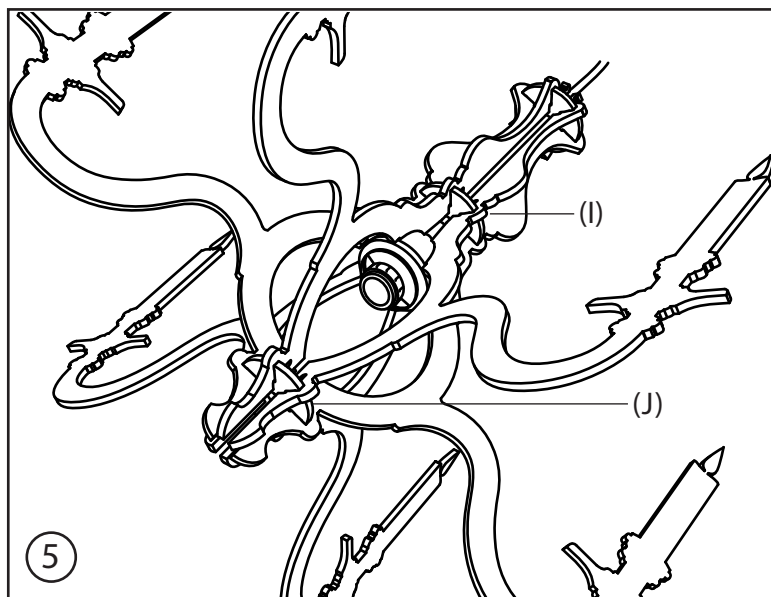

5

Secure chandelier arms together by threading cable ties (included) through the holes in each arm located in areas (I) and (J).

Trim excess material from the end of the cable ties as shown in image 6

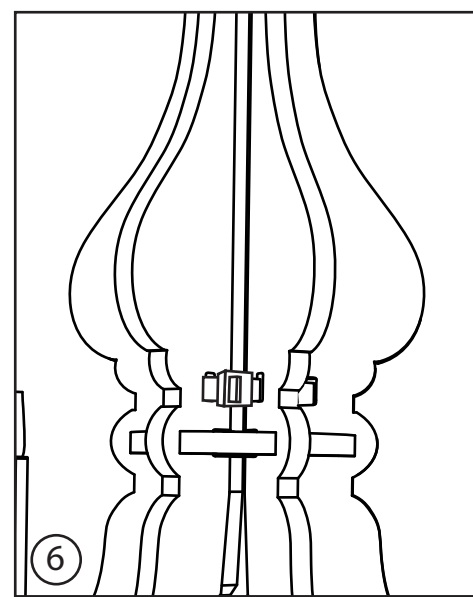

6

We recommend using a 40W MAX G16.5, candelabra base bulb.

To install the fixture, please refer to instructions included with canopy/socket kit.