


Note - Strut attachment slots are in different locations for Top and Bottom wings

Use 1mm x 2mm slot for entire trailing edge. No need for

Top Wing Half - Left Side
Cut entire wing from one piece
of 3mm depron. Use this wing
half as a template.

Bottom Wing Half - Left Side
Cut entire wing from one piece
of 3mm depron. Use this wing
half as a template.


3mm Flat Carbon Rod along the
top edge of top and bottom wing.
3mm Flat Carbon Rod along leading edge.

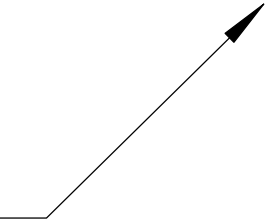


Wing Half - Right Side
re wing from one piece
depron. Use this wing
template.





Note - Strut attachment slots are in different
locations for Top and Bottom wings

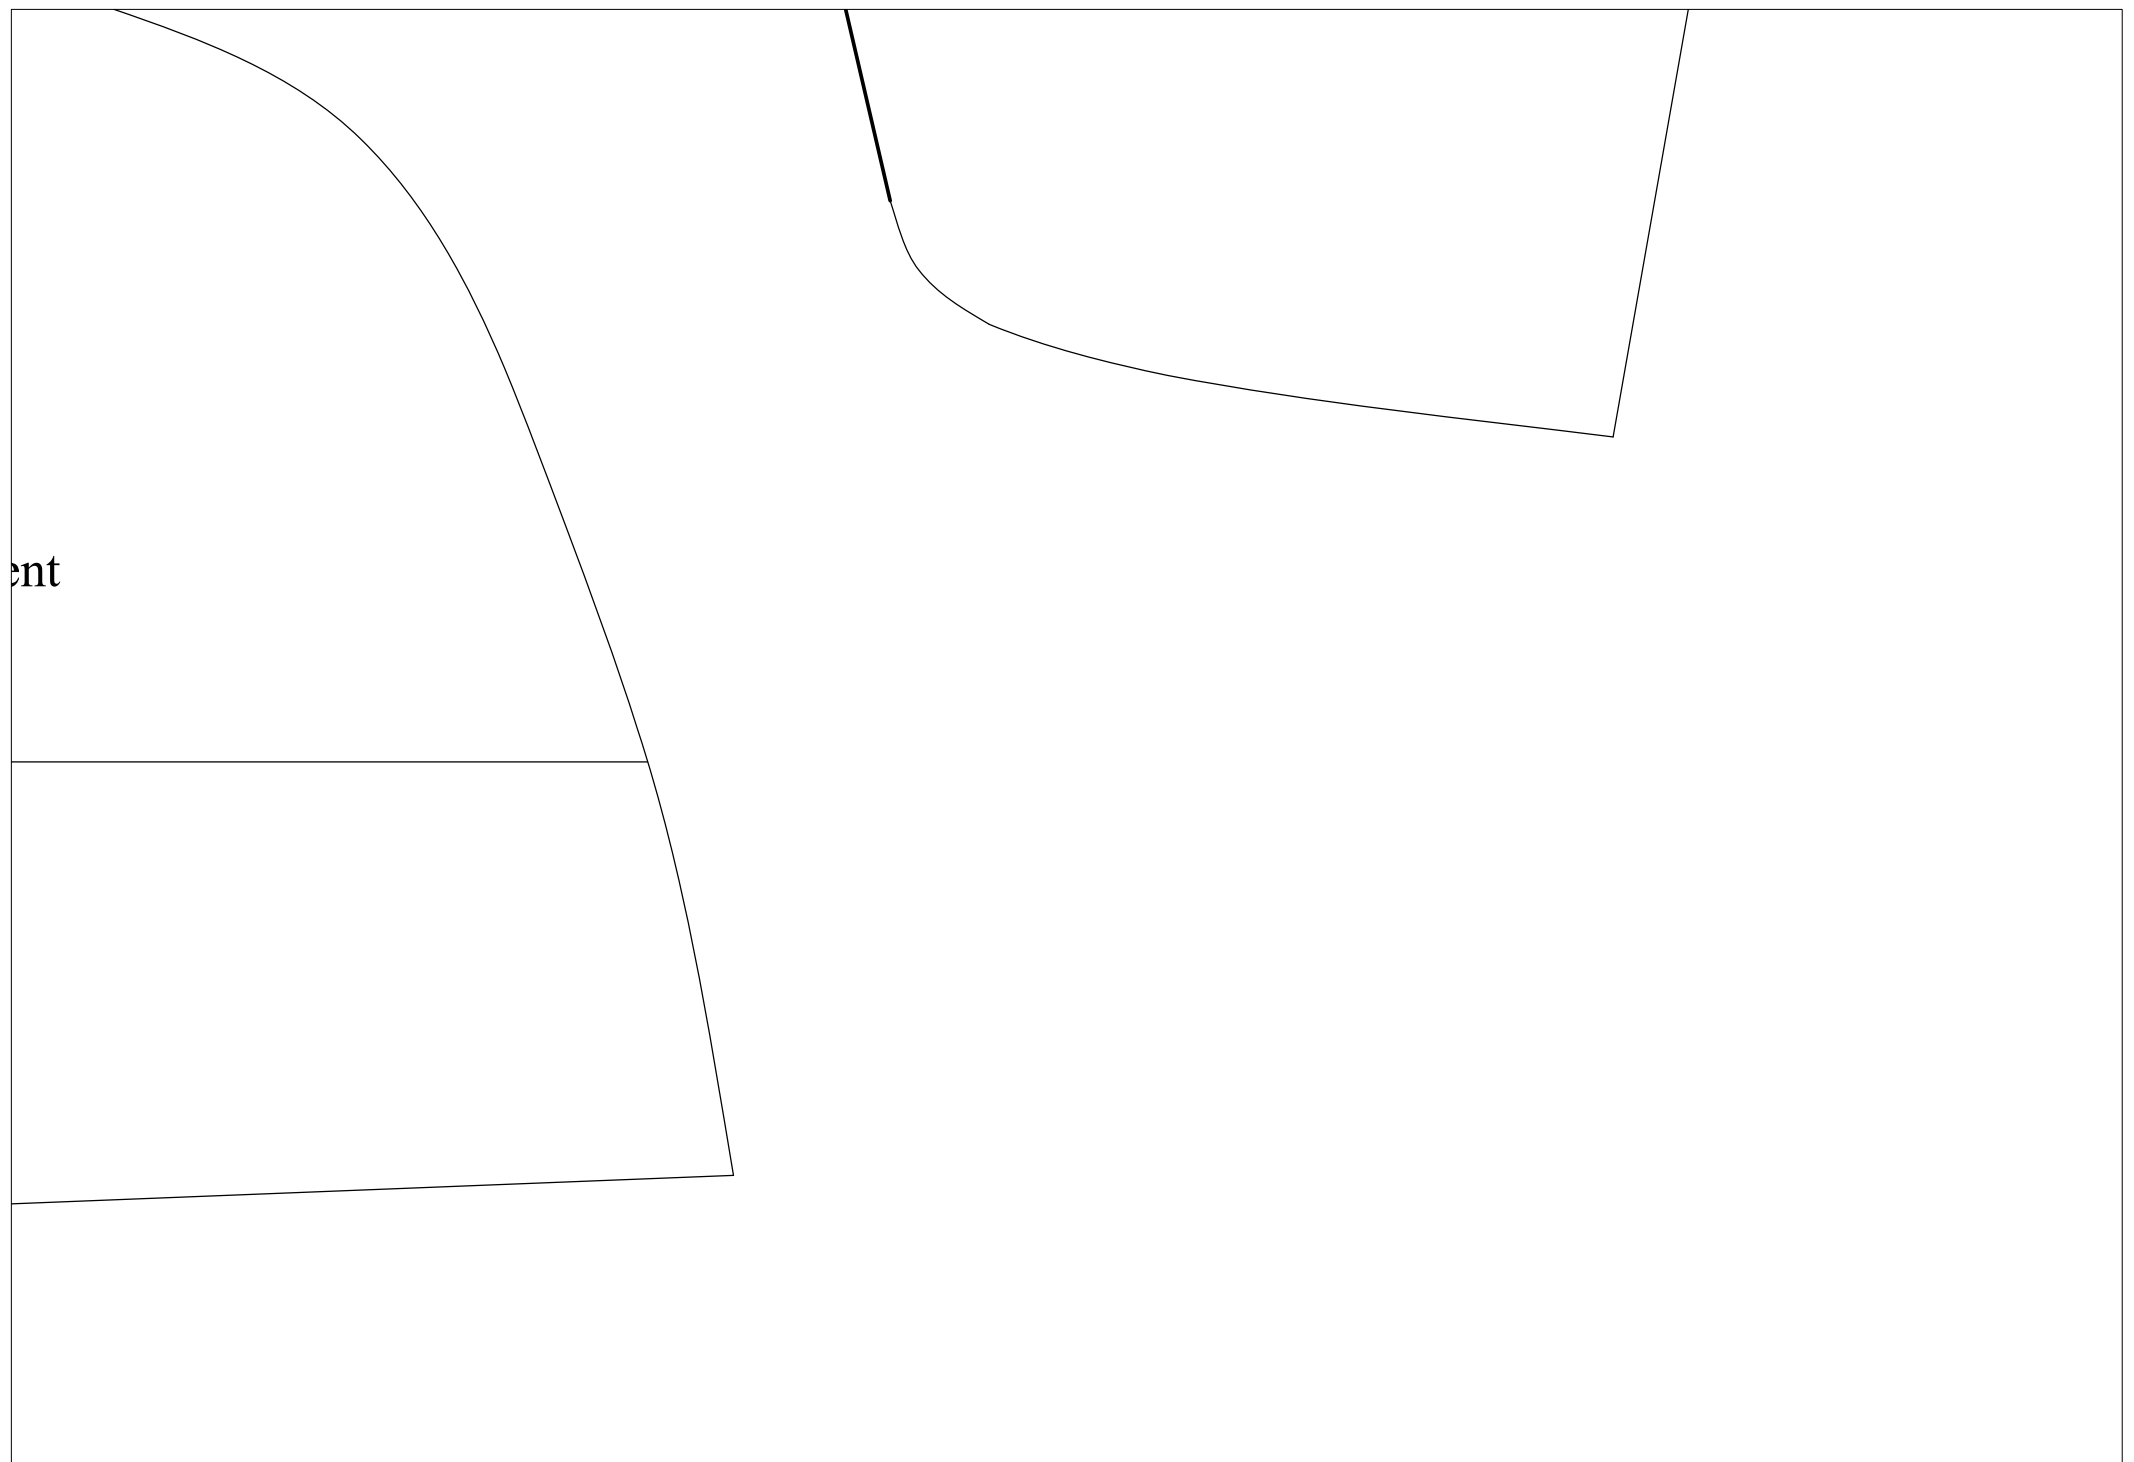


ent

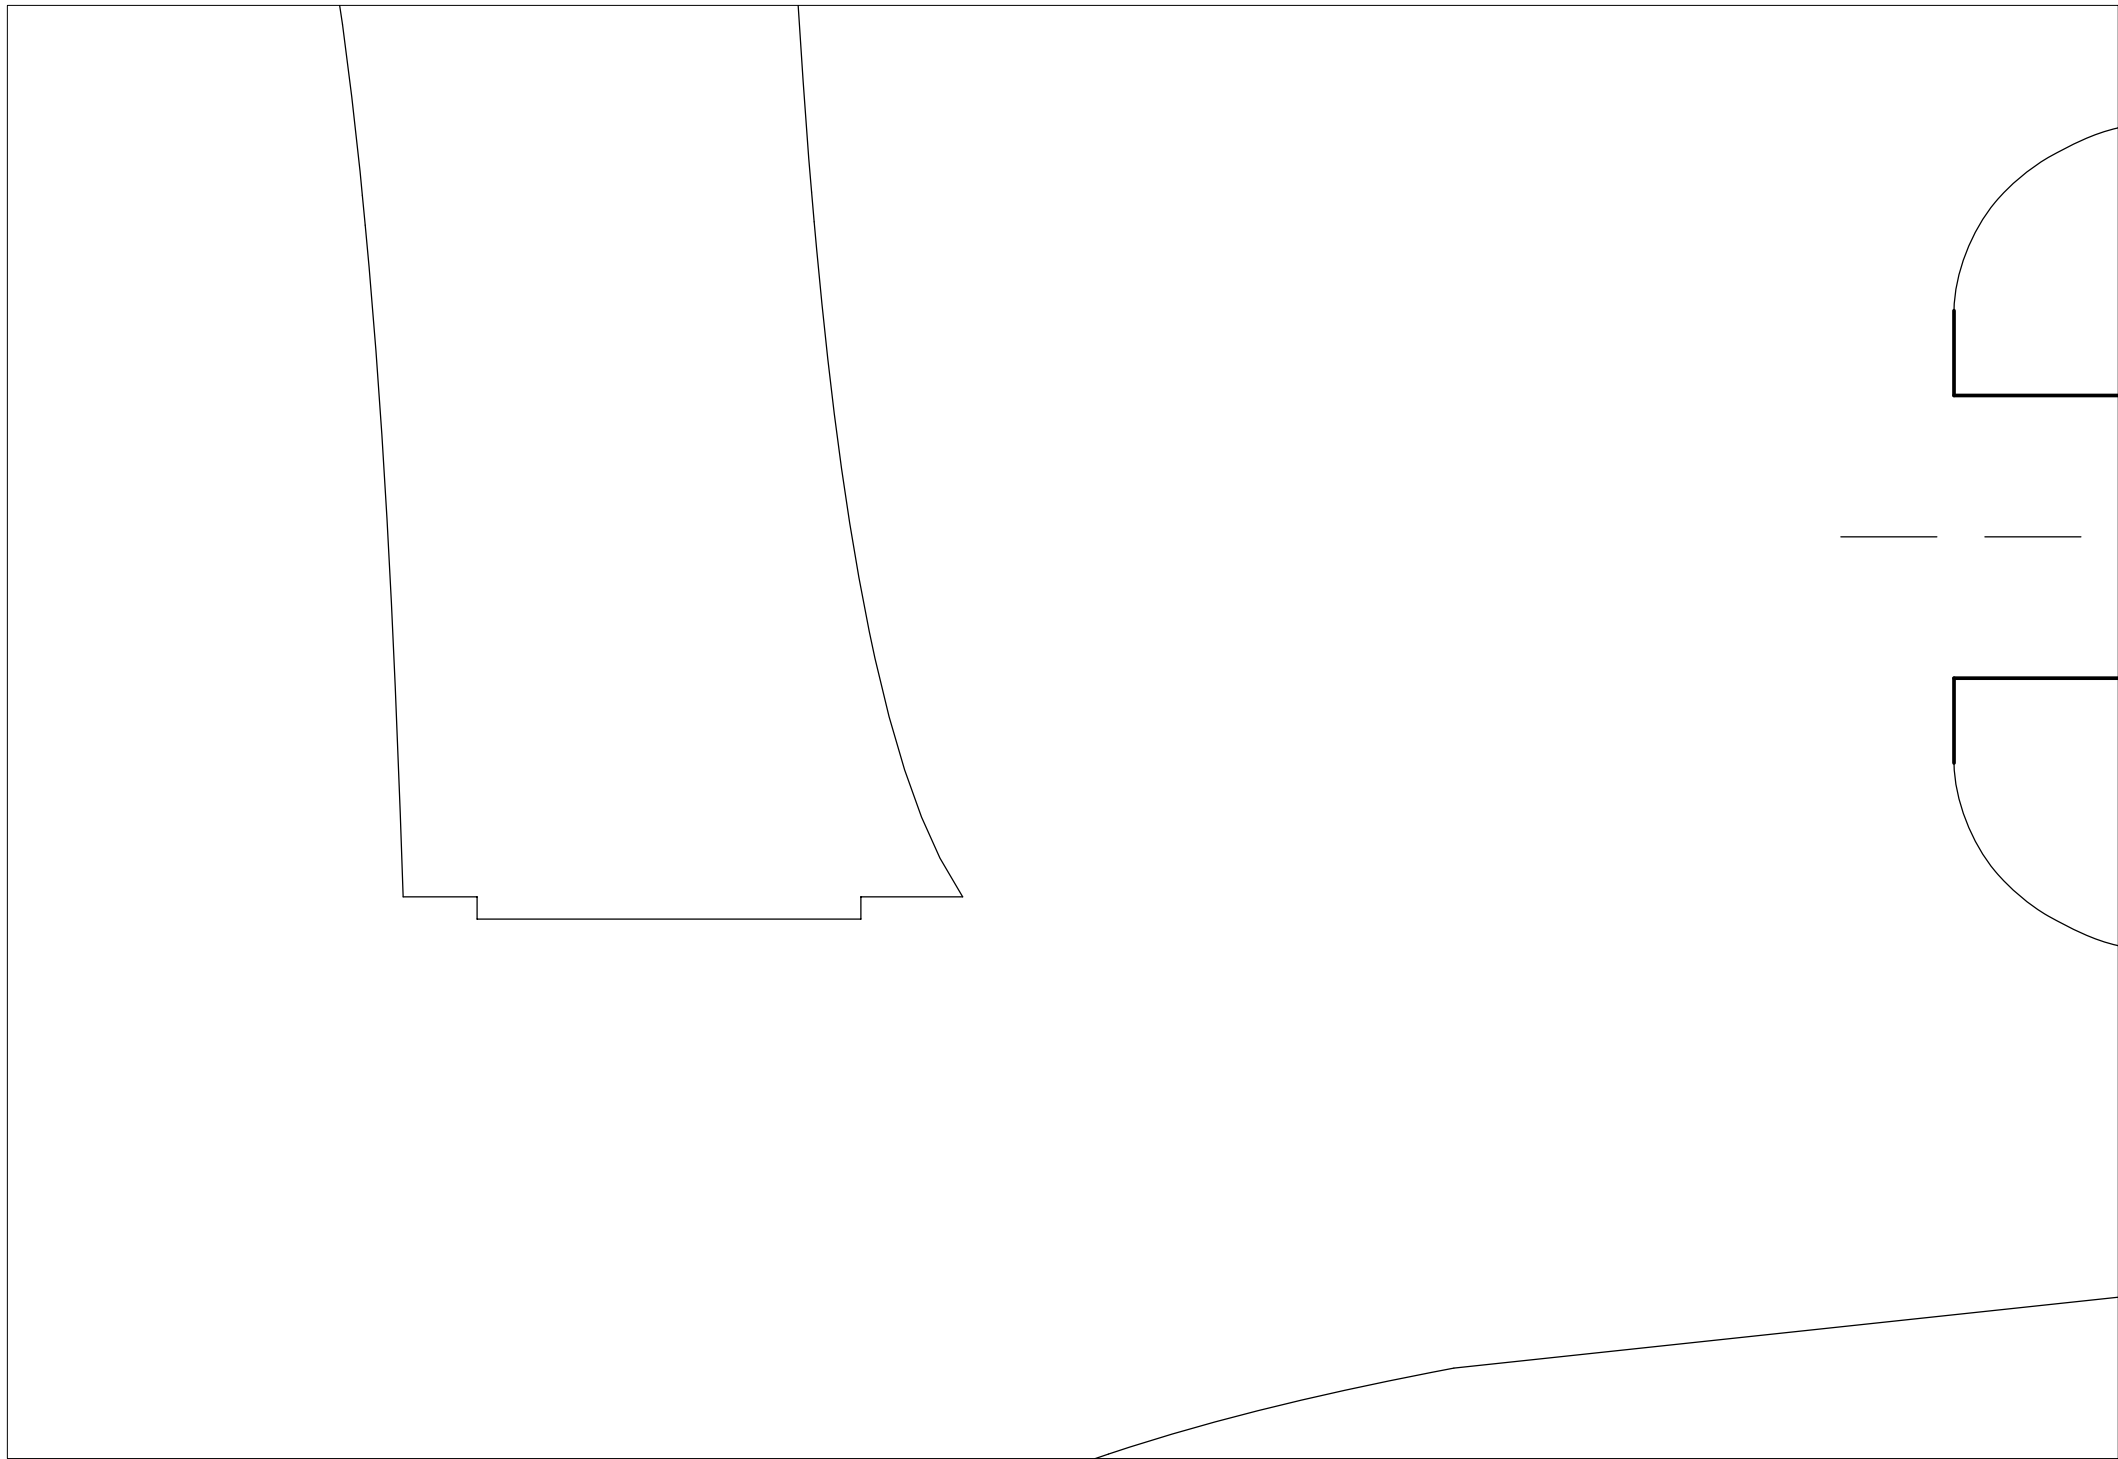


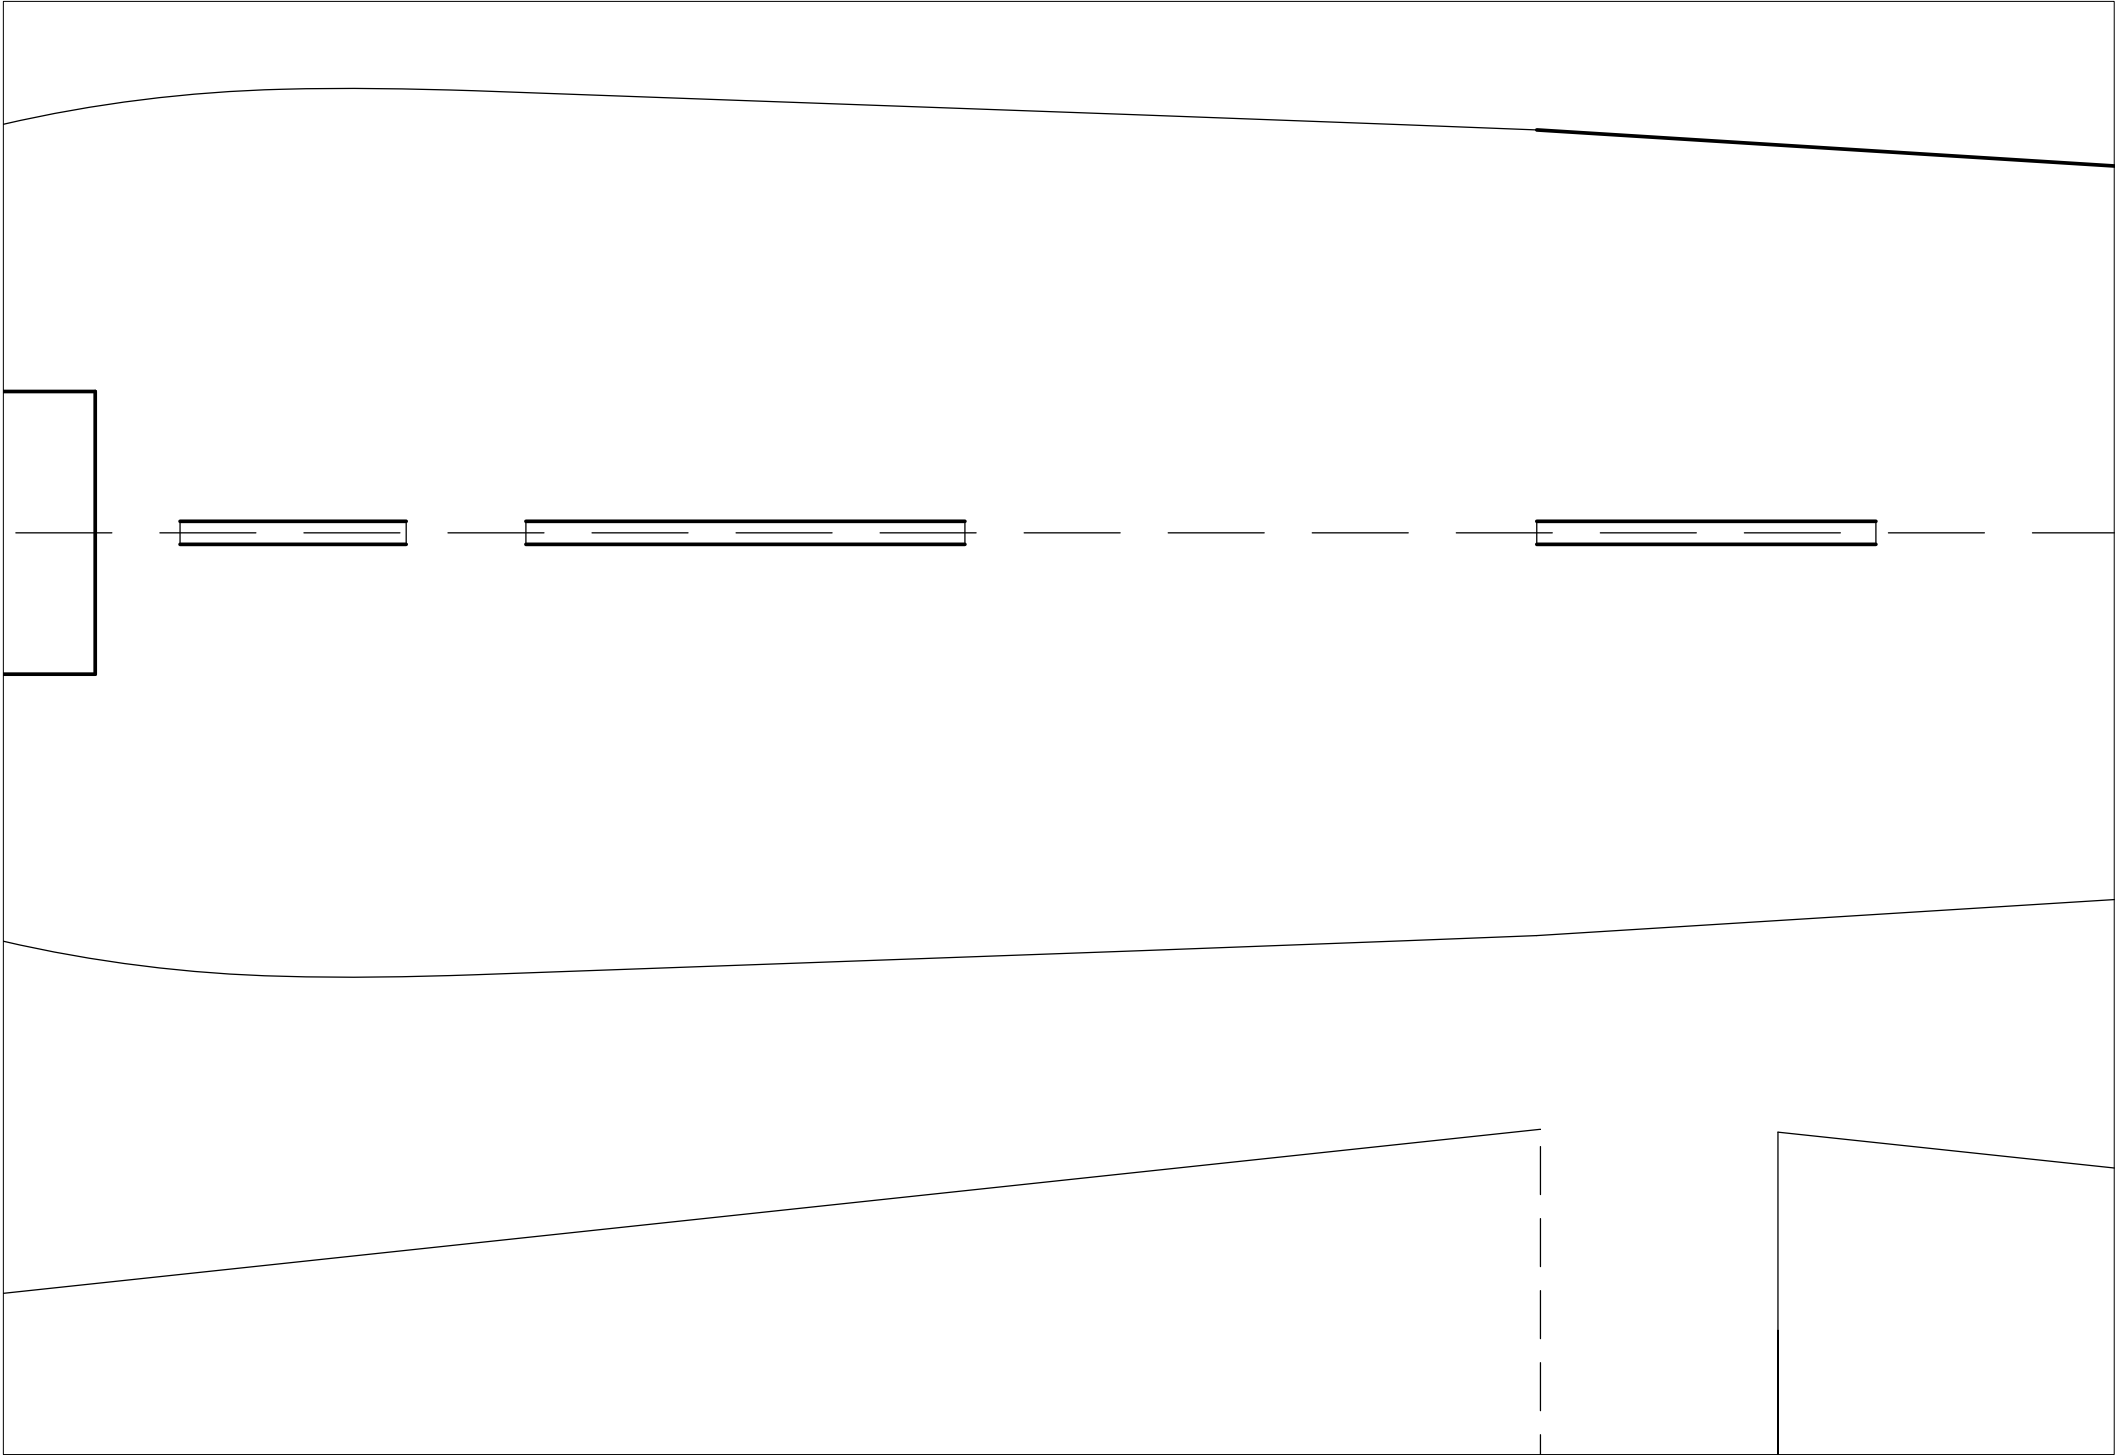


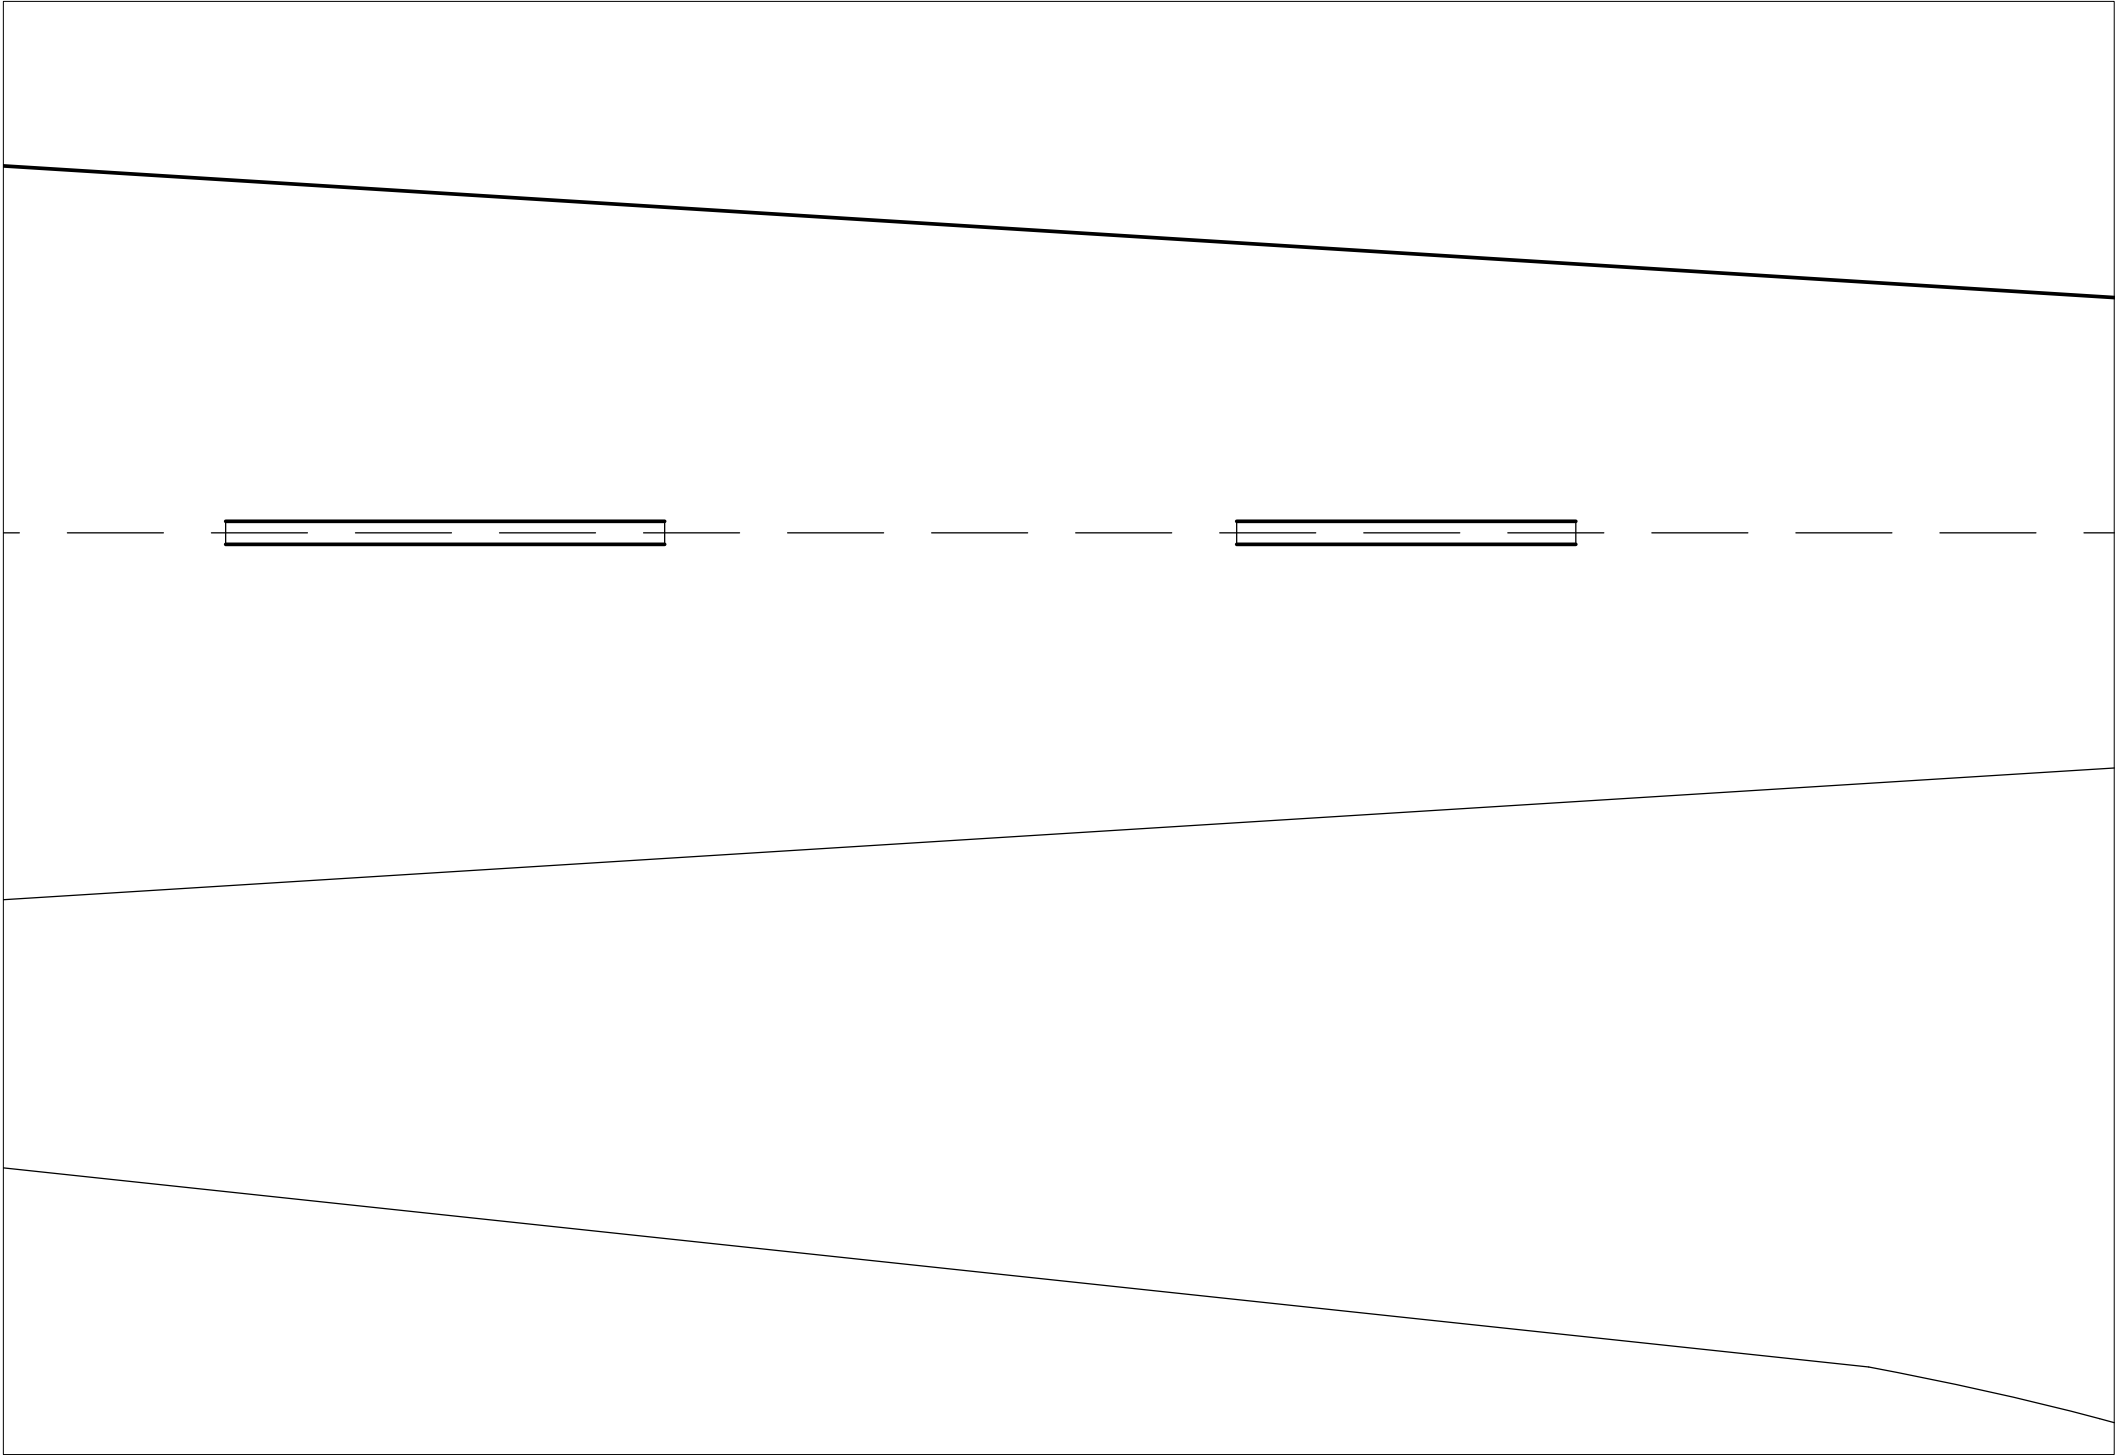

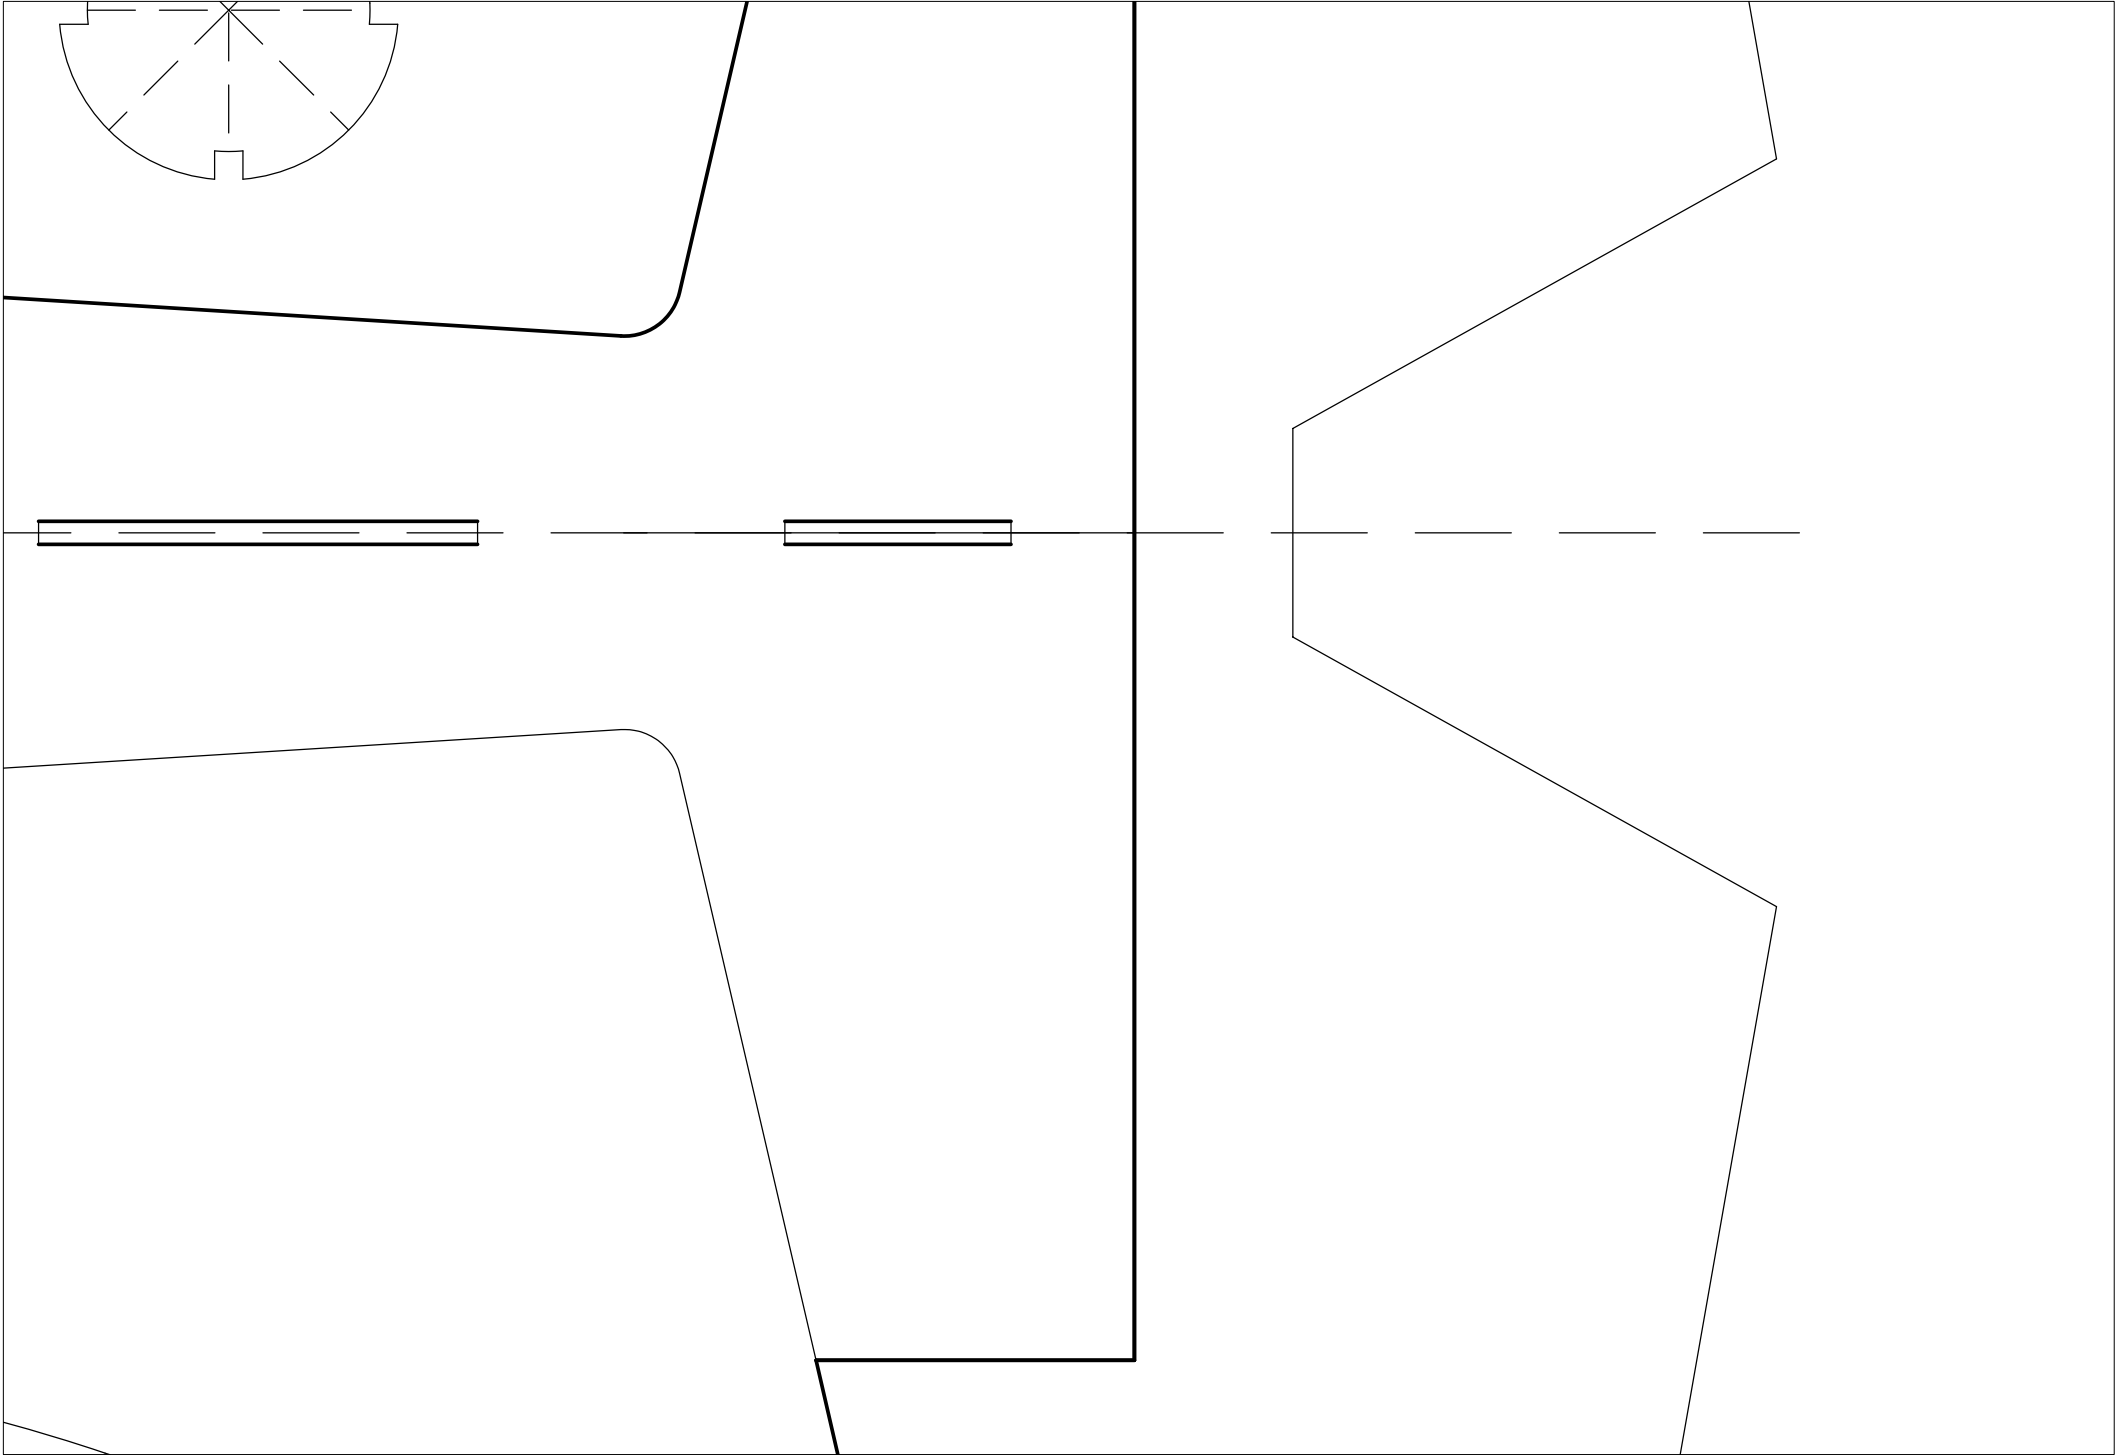





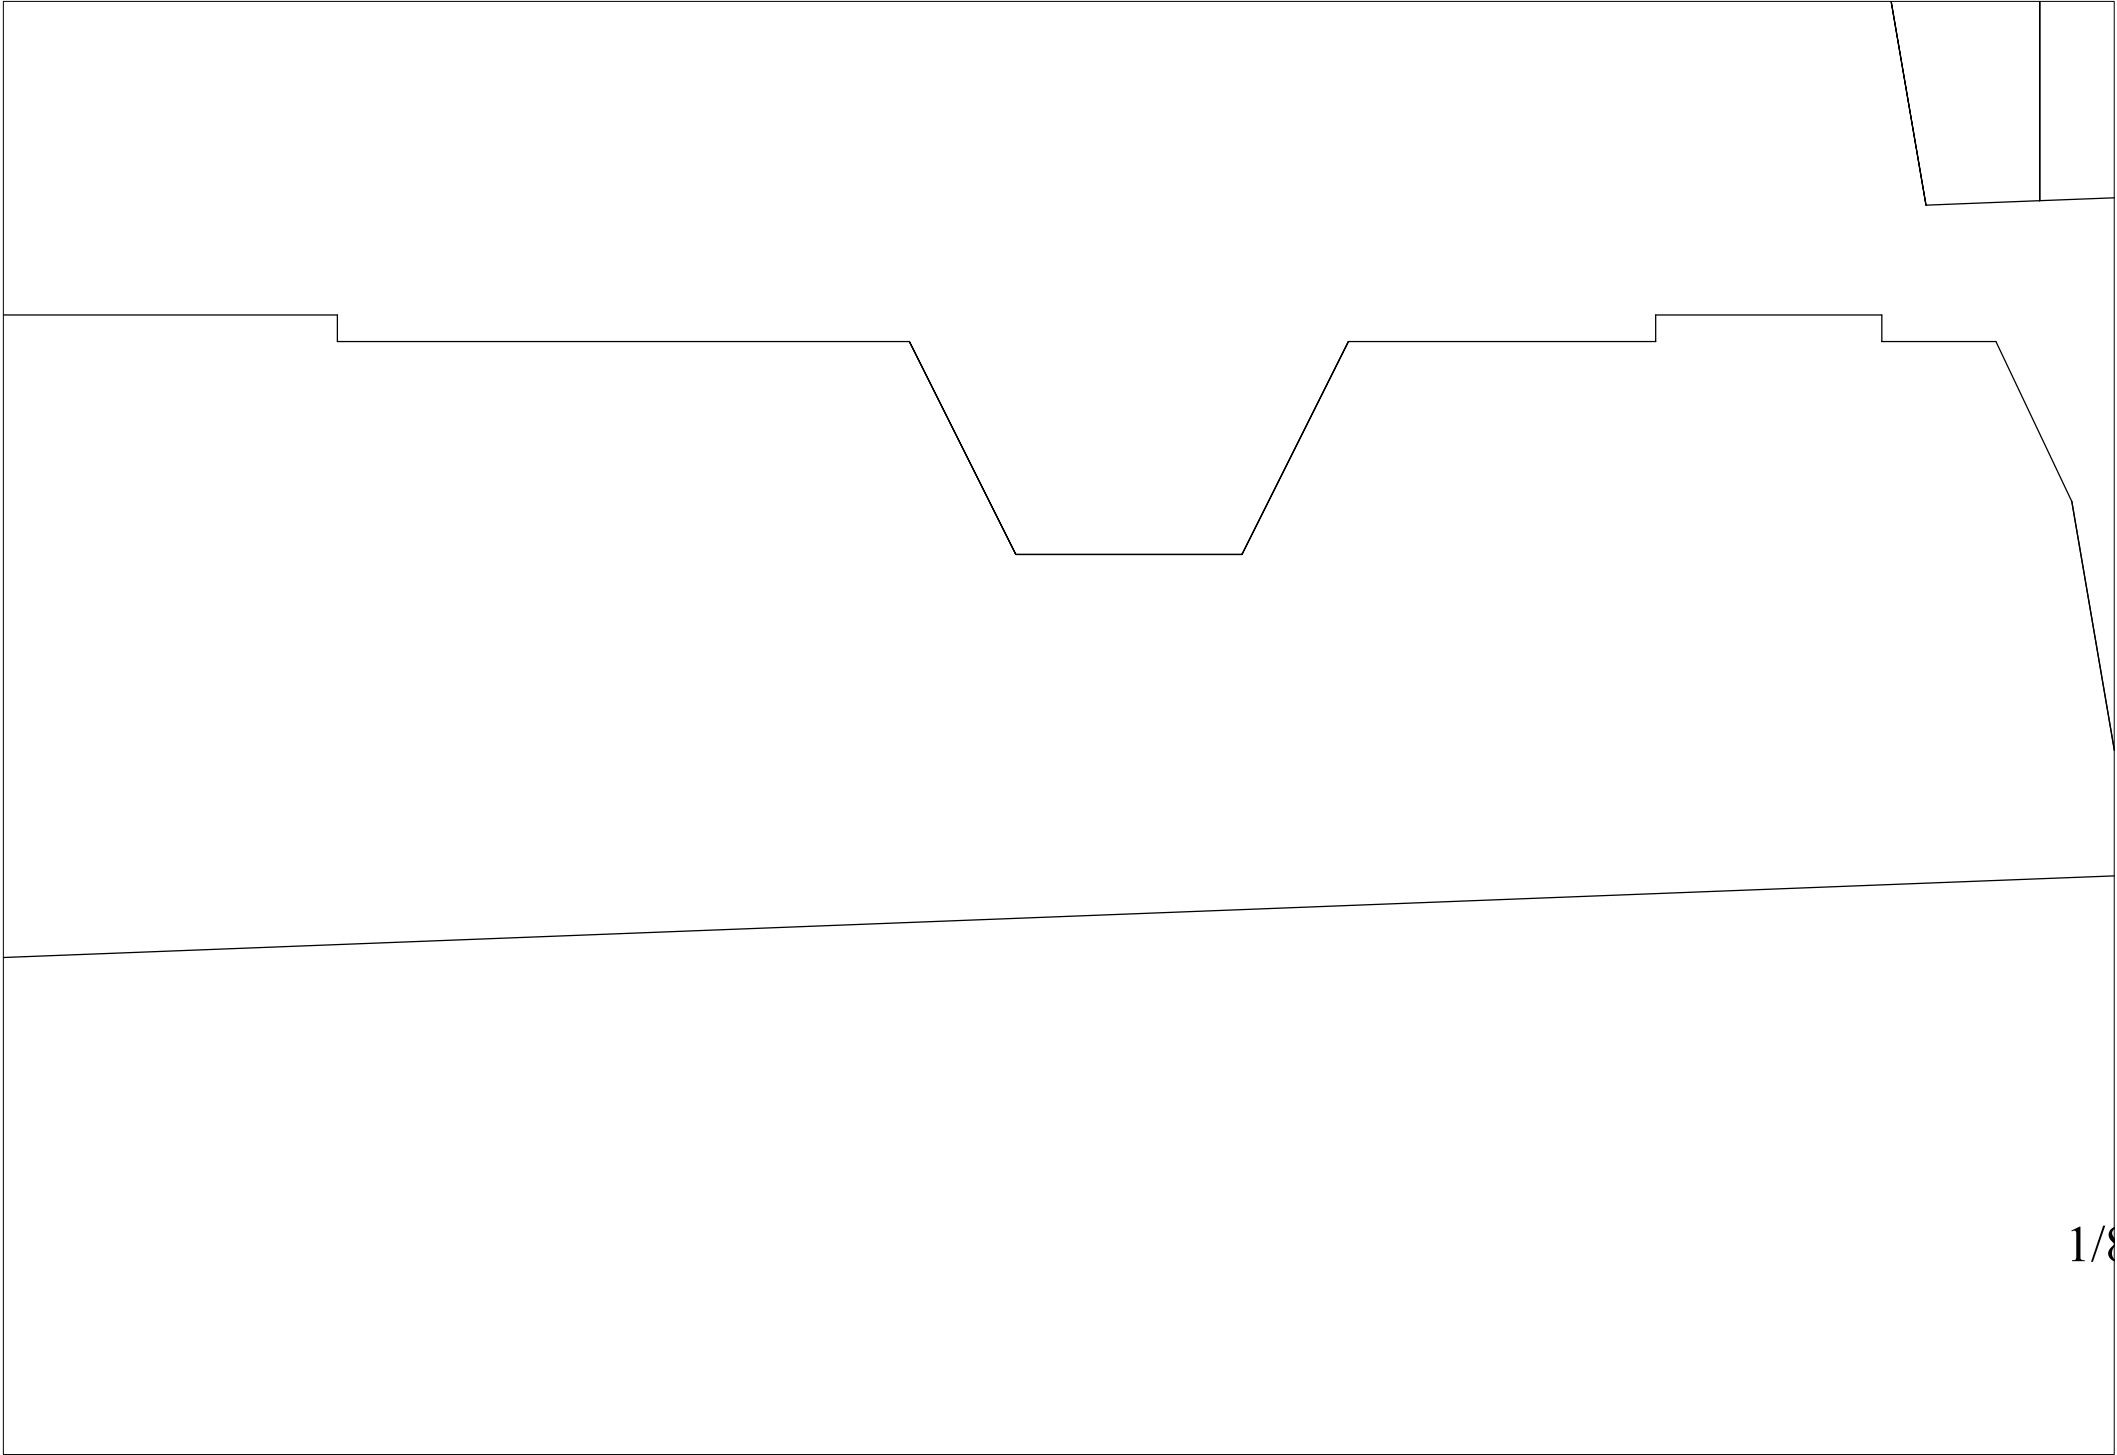




8" Lite-Ply Motor Mount


Echelon 33


For CDRom Type motors

Designed and drawn by Tim Hart

Copyright 2005-2006 Foamy Factory Models

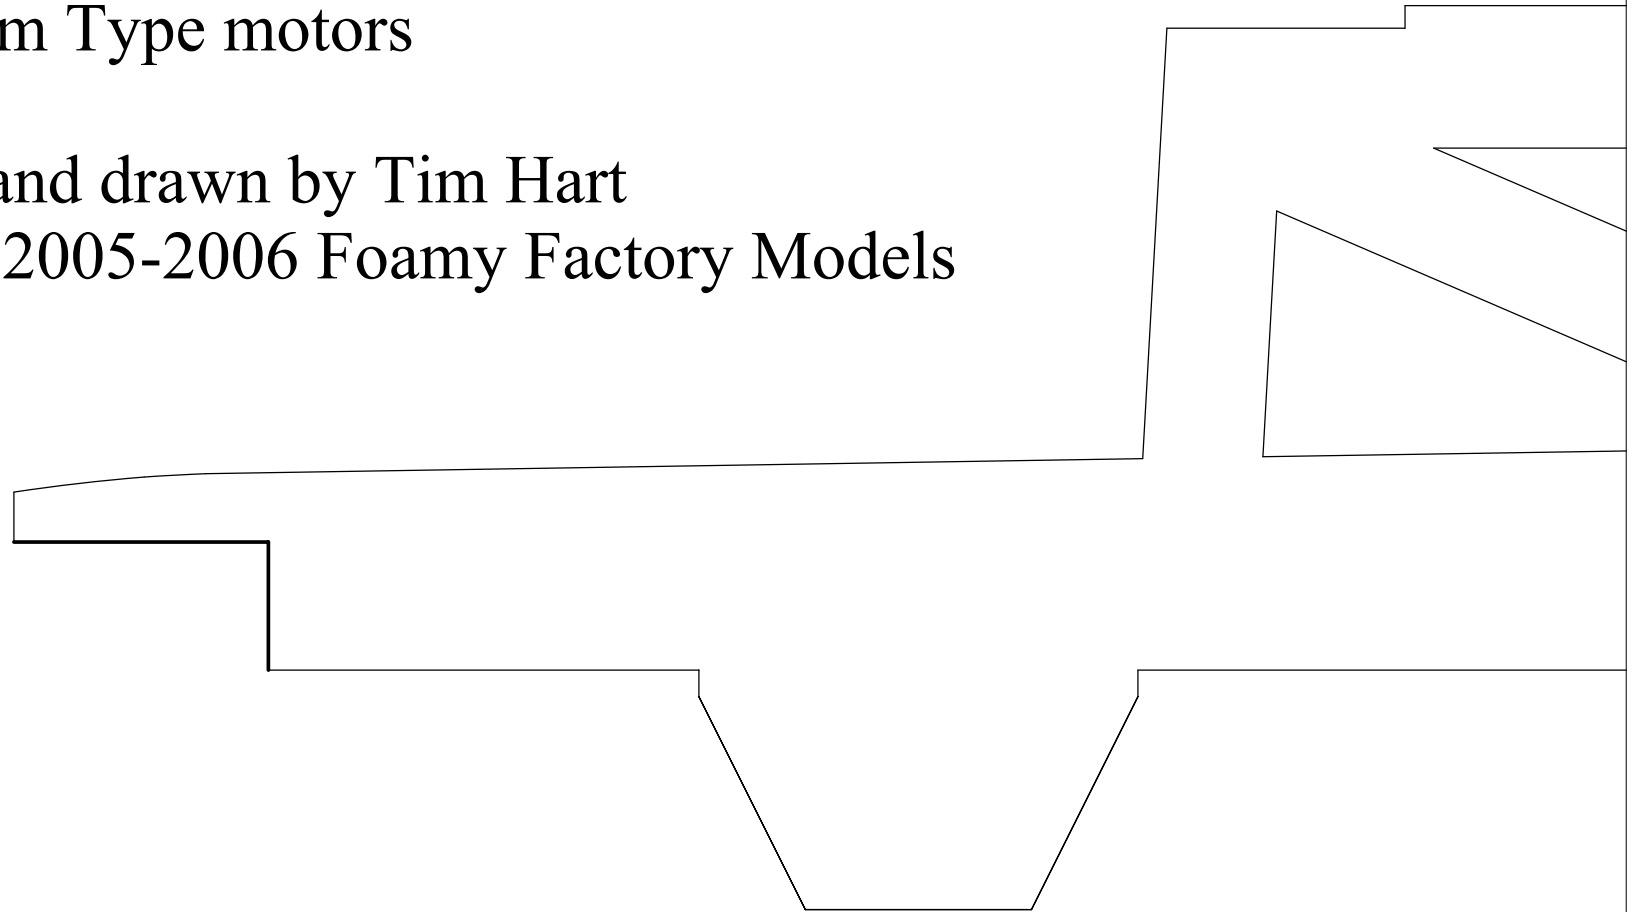

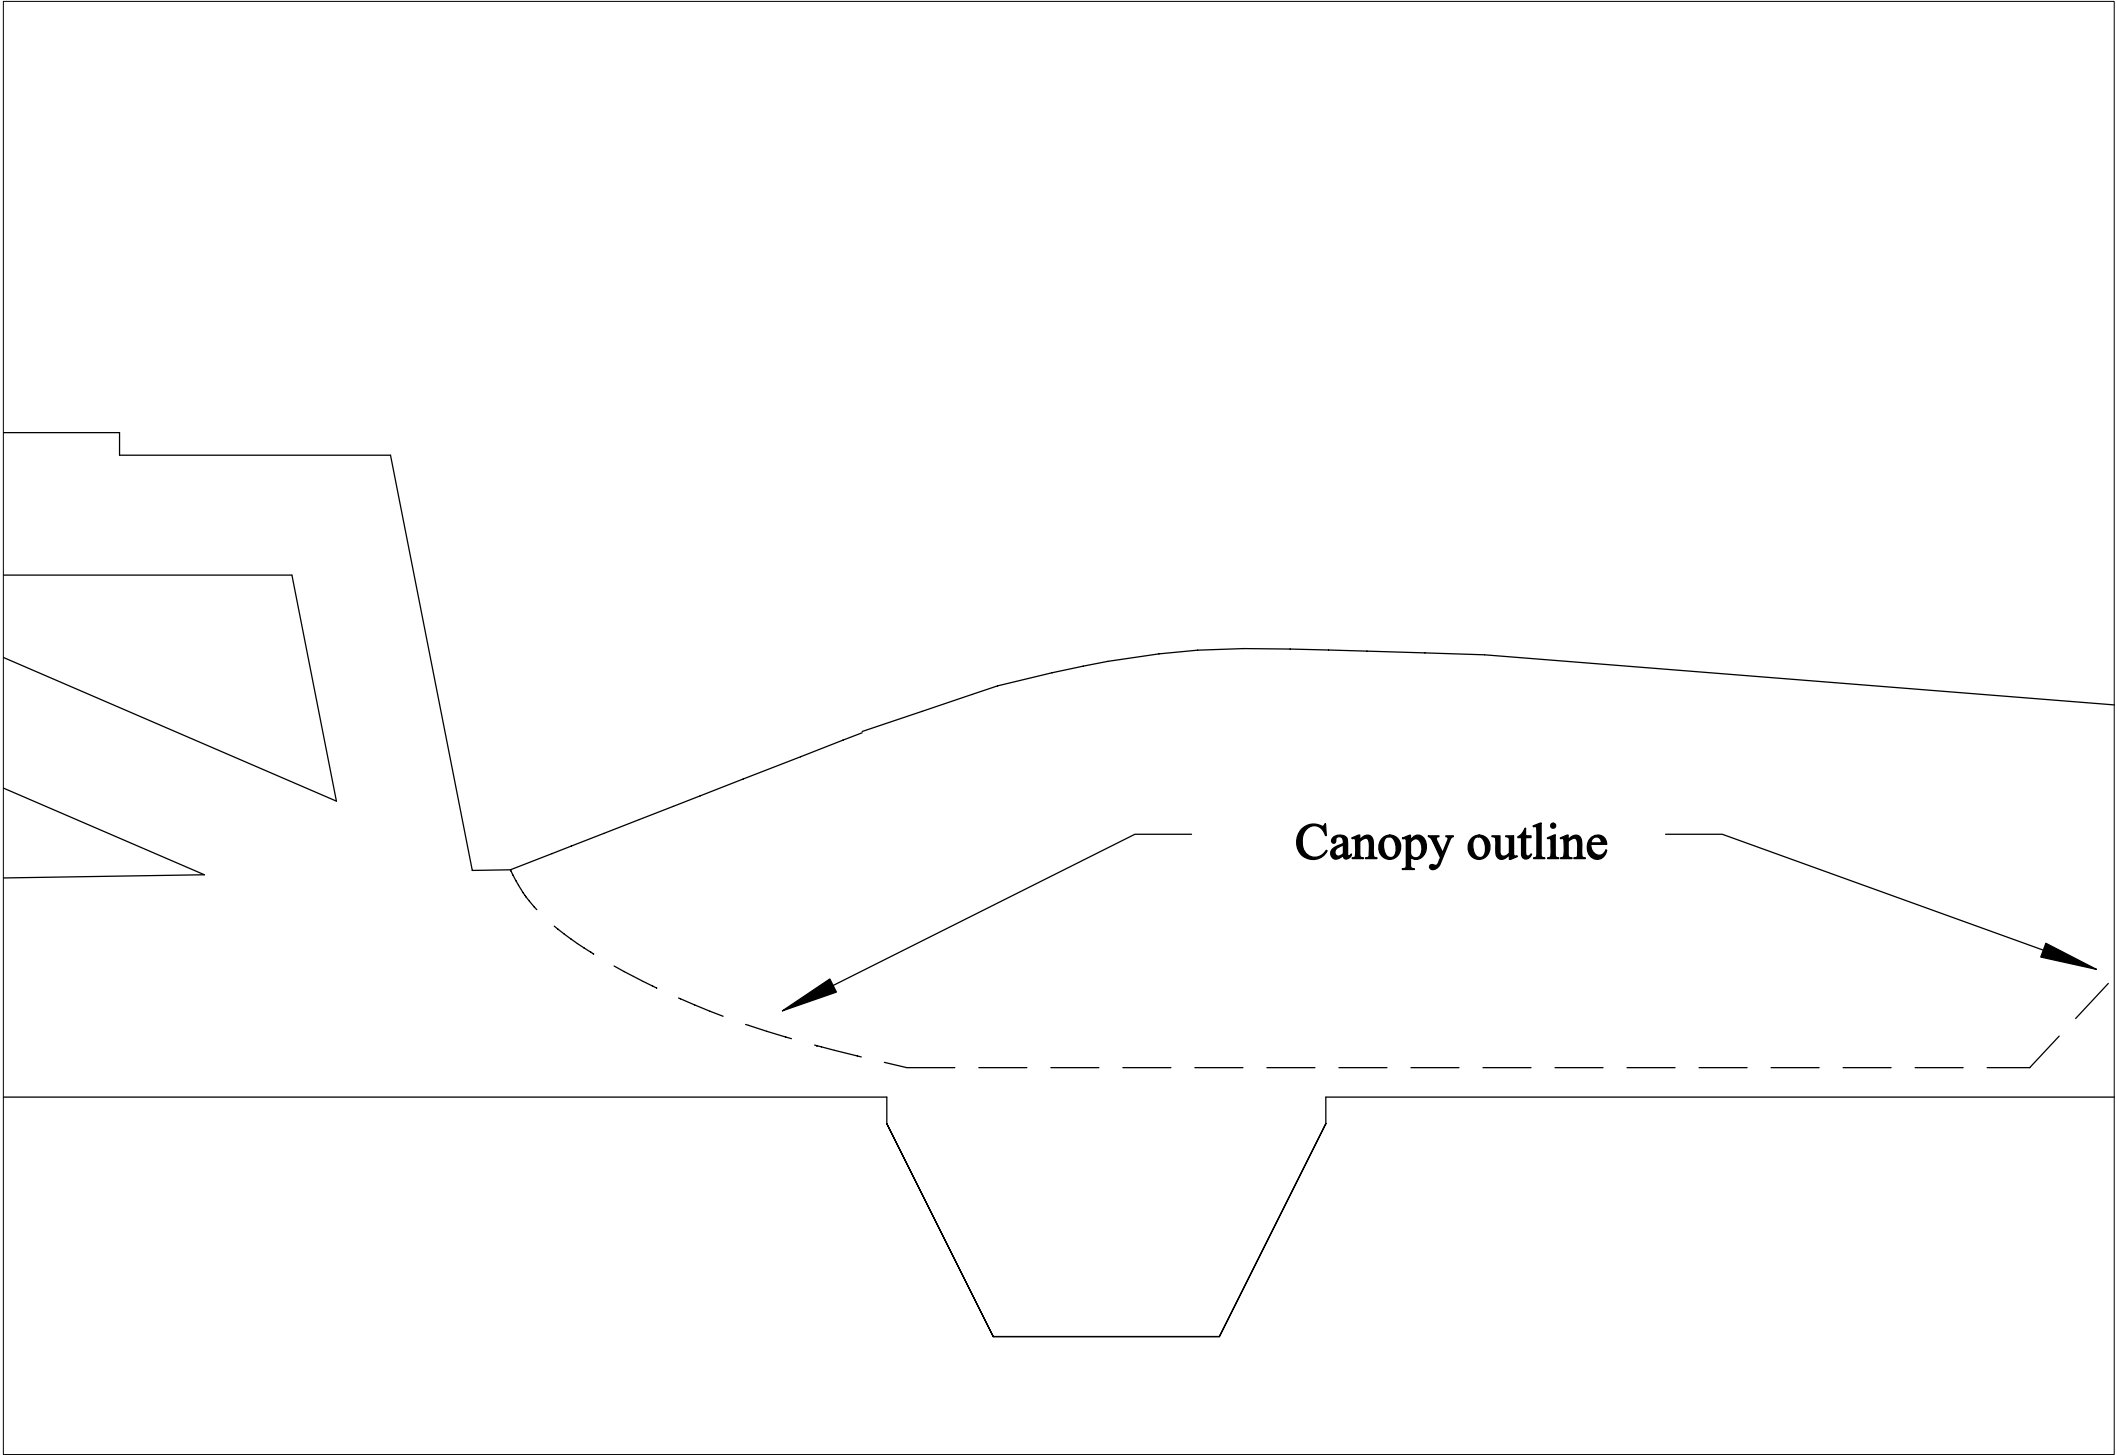

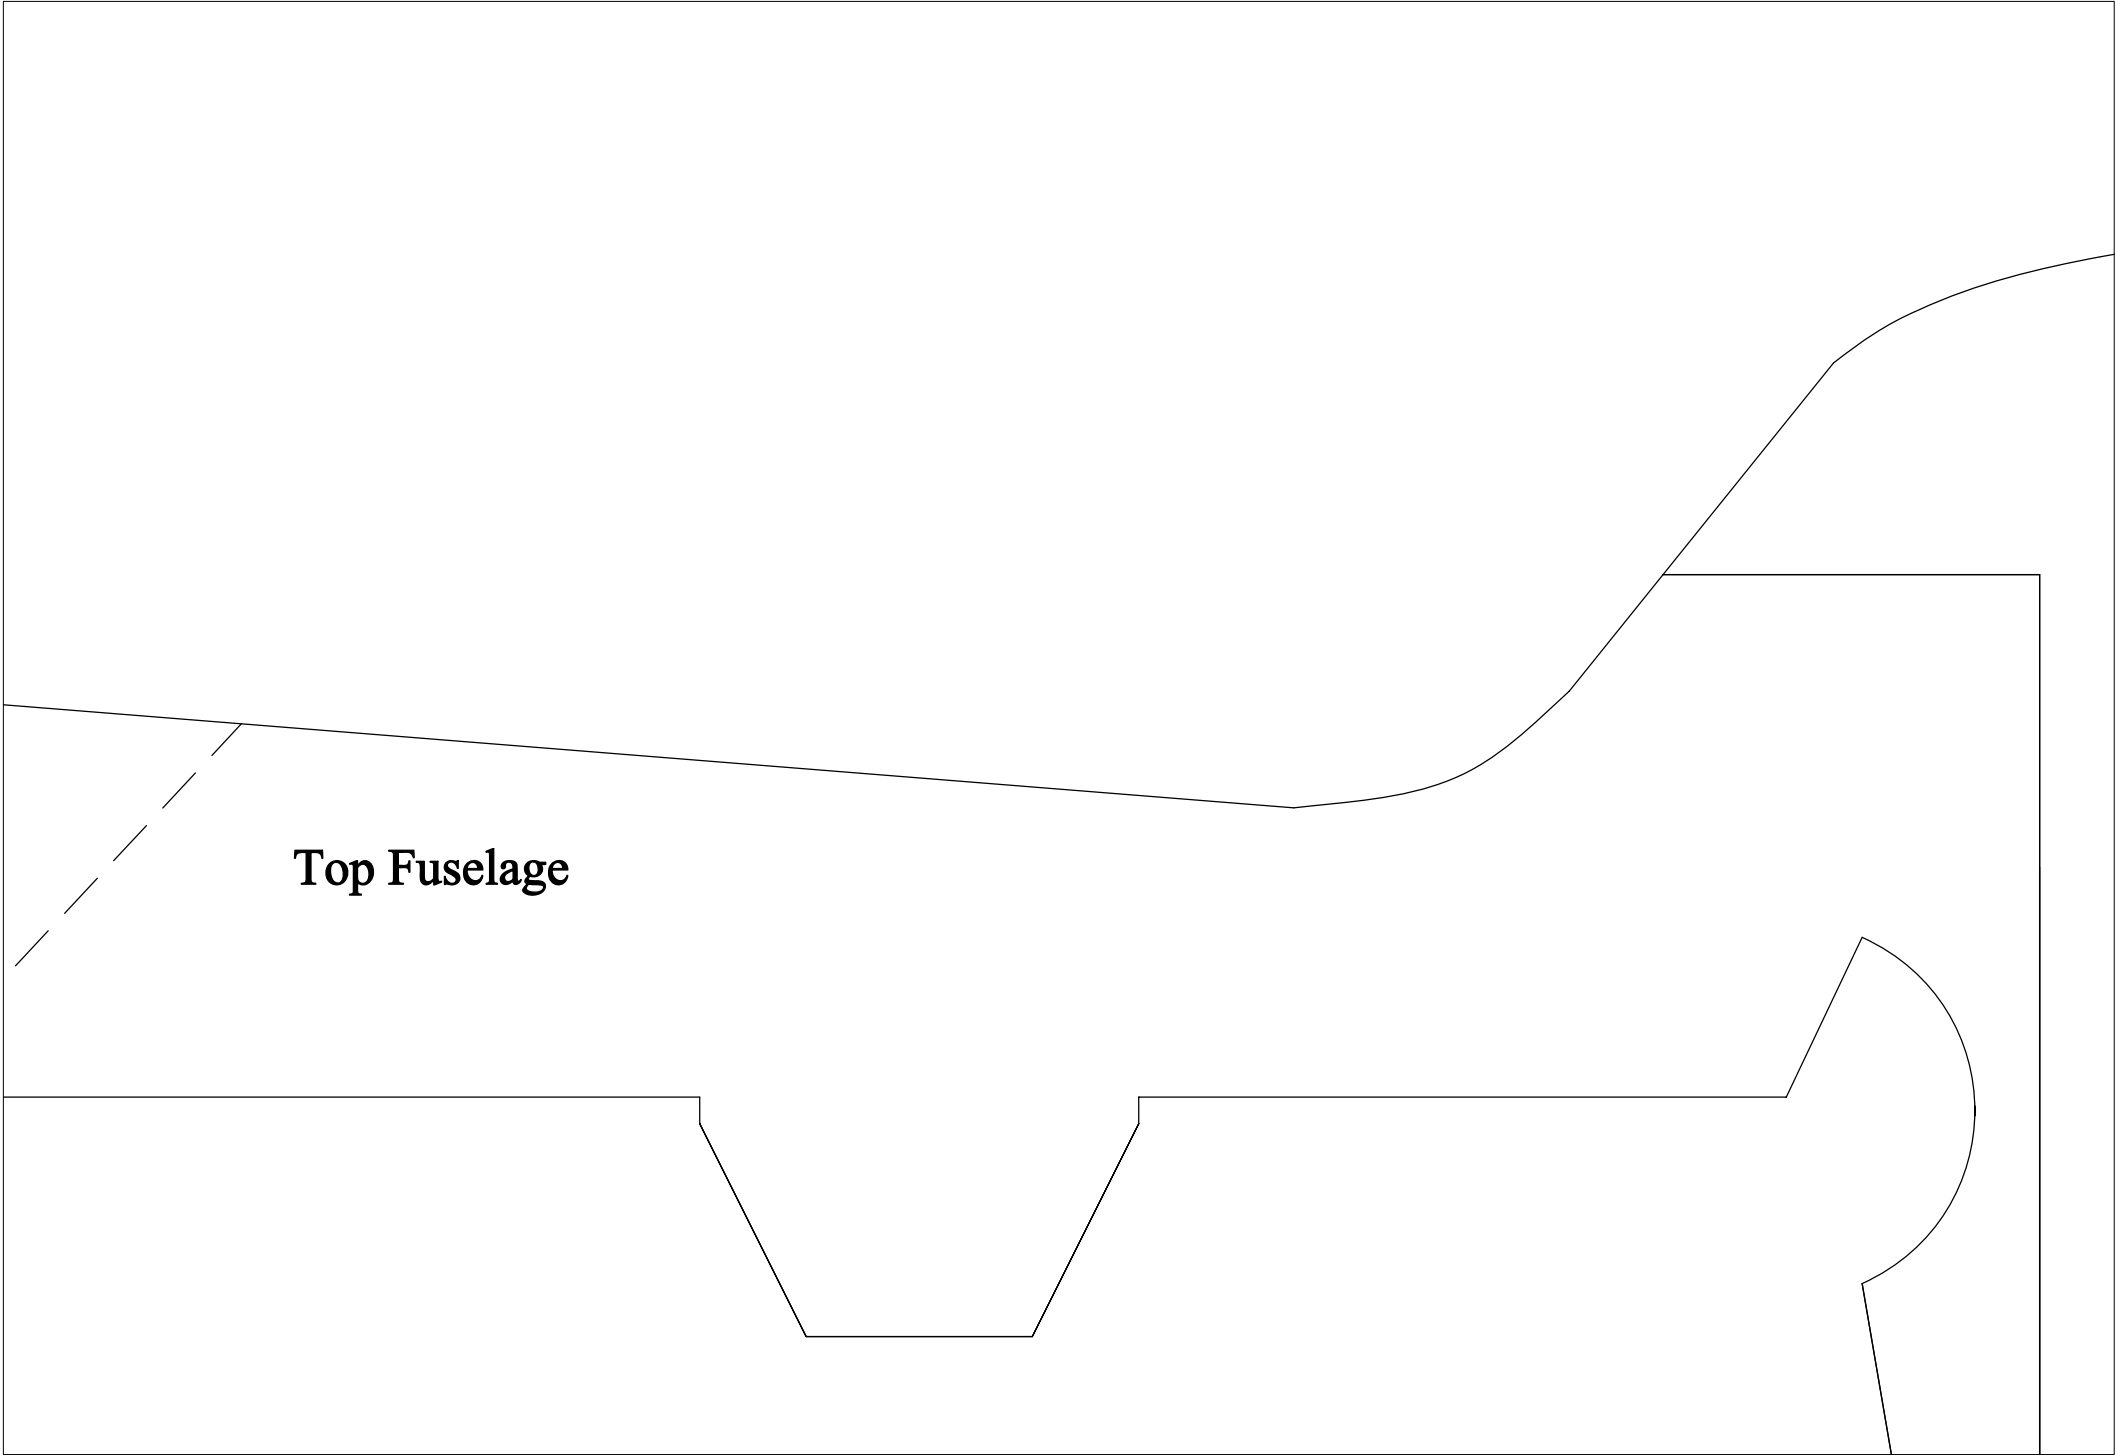

Top Fuselage

