



# **PICDEM™ Mechatronics Demonstration Board User's Guide**

---

**Note the following details of the code protection feature on Microchip devices:**

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

---

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

**Trademarks**

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, microID, MPLAB, PIC, PICmicro, PICSTART, PRO MATE, PowerSmart, rfPIC, and SmartShunt are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.


AmpLab, FilterLab, Migratable Memory, MXDEV, MXLAB, PICMASTER, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, dsPICDEM, dsPICDEM.net, dsPICworks, ECAN, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, Linear Active Thermistor, MPASM, MPLIB, MPLINK, MPSIM, PICKit, PICDEM, PICDEM.net, PICLAB, PICtail, PowerCal, PowerInfo, PowerMate, PowerTool, rLAB, rfPICDEM, Select Mode, Smart Serial, SmartTel, Total Endurance and WiperLock are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2005, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

**QUALITY MANAGEMENT SYSTEM**  
**CERTIFIED BY DNV**  
**== ISO/TS 16949:2002 ==**

*Microchip received ISO/TS-16949:2002 quality system certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona and Mountain View, California in October 2003. The Company's quality system processes and procedures are for its PICmicro® 8-bit MCUs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.*



# PICDEM™ MECHATRONICS DEMO BOARD USER'S GUIDE

## Table of Contents

<b>Preface</b> .....	<b>1</b>
<b>Chapter 1. PICDEM™ Mechatronics</b>	
1.1 Introduction .....	7
1.2 Highlights .....	7
1.3 Quick Start Guide .....	8
1.4 PICDEM™ Mechatronics Development Kit Contents .....	10
1.5 PICDEM™ Mechatronics Layout .....	10
1.6 Required Tools .....	12
1.7 PICDEM™ Mechatronics Setup .....	12
1.8 General PICDEM™ Mechatronics Demonstration Board Information .....	14
<b>Chapter 2. Example Projects</b>	
2.1 Introduction .....	19
2.2 Loading Projects in MPLAB® IDE .....	20
2.3 Example Projects .....	20
2.3.1 Project 1: Hello World (Light a LED) .....	21
2.3.2 Project 2: Dusk Indicator Using the Voltage Comparator .....	23
2.3.3 Project 3: Thermometer Using the Analog-to-Digital Converter .....	25
2.3.4 Project 4: Digital Clock Using Timer1 .....	27
2.3.5 Project 5: Brushed DC Motor Speed Control with Optical Encoder Feedback .....	29
2.3.6 Project 6: Brushed DC Speed Control with Back EMF Feedback .....	32
2.3.7 Project 7: Stepper Motor Control: Single Stepping, Half Stepping and Microstepping .....	35
2.3.8 Project 8: PC Interface Using the USART .....	39
2.3.9 Project 9: Brushed DC Motor Control Using the ECCP .....	42
<b>Chapter 3. Troubleshooting</b>	
3.1 Introduction .....	47
3.2 Common Problems .....	47
<b>Appendix A. Hardware Schematics</b>	
A.1 Introduction .....	49
<b>Appendix B. LCD Segment Mapping Worksheet</b>	
B.1 Introduction .....	57
<b>Worldwide Sales and Service</b> .....	<b>60</b>

# PICDEM™ Mechatronics Demo Board User's Guide

---

NOTES:

---

---

## Preface

---

---

### NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site ([www.microchip.com](http://www.microchip.com)) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXA”, where “XXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE on-line help. Select the Help menu, and then Topics to open a list of available on-line help files.

## INTRODUCTION

This chapter contains general information about this user's guide and customer support that will be useful prior to using the PICDEM™ Mechatronics development kit. Items discussed in this chapter are:

- Document Layout
- Conventions Used in this Guide
- Warranty Registration
- Recommended Reading
- The Microchip Web Site
- Development Systems Customer Notification Service
- Customer Support
- Document Revision History
- Troubleshooting

## DOCUMENT LAYOUT

This document describes how to use the PICDEM™ Mechatronics Demonstration Board. The manual layout is as follows:

- **Chapter 1: PICDEM Mechatronics** – An overview of the PICDEM Mechatronics Demo Board. PCB layout, parts and how to connect the provided jumper wires to the board.
- **Chapter 2: Example Projects** – Projects that describe how to read the sensors on the board, drive the LCD and control several motors. These motors include a Brushed DC (BDC) motor and a bipolar stepper motor.
- **Chapter 3: Troubleshooting** – Provides resolutions for solving common problems associated with using the PICDEM Mechatronics Demo Board.
- **Appendix A: Hardware Schematics** – Illustrates the PICDEM Mechatronics Demo Board hardware schematic diagrams.

# PICDEM™ Mechatronics Demo Board User's Guide

- **Appendix B: LCD Segment Mapping Worksheet** – Provides the LCD Segment Mapping Worksheet.

## CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

### DOCUMENTATION CONVENTIONS

Description	Represents	Examples
<b>Code (Courier font):</b>		
Plain characters	Sample code Filenames and paths	#define START c:\autoexec.bat
Angle brackets: < >	Variables	<label>, <exp>
Square brackets [ ]	Optional arguments	MPASMWIN [main.asm]
Curly brackets and pipe character: {   }	Choice of mutually exclusive arguments; An OR selection	errorlevel {0 1}
Lowercase characters in quotes	Type of data	"filename"
Ellipses...	Used to imply (but not show) additional text that is not relevant to the example	list ["list_option...", "list_option"]
0xnnn	A hexadecimal number where n is a hexadecimal digit	0xFFFF, 0x007A
Italic characters	A variable argument; it can be either a type of data (in lowercase characters) or a specific example (in uppercase characters).	char isascii (char, ch);
<b>Interface (Arial font):</b>		
Underlined, italic text with right arrow	A menu selection from the menu bar	<u>File &gt; Save</u>
Bold characters	A window or dialog button to click	<b>OK, Cancel</b>
Characters in angle brackets < >	A key on the keyboard	<Tab>, <Ctrl-C>
<b>Documents (Arial font):</b>		
Italic characters	Referenced books	<i>MPLAB® IDE User's Guide</i>

## WARRANTY REGISTRATION

Please complete the enclosed Warranty Registration Card and mail it promptly. Sending in your Warranty Registration Card entitles you to receive new product updates. Interim software releases are available at the Microchip web site.

## RECOMMENDED READING

It is recommended that you become familiar with the documents listed below, prior to using the PICDEM Mechatronics Demo Board.

### **PICkit™ 2 Microcontroller Programmer User's Guide (DS51553)**

Consult this document for instructions on how to use the PICkit 2 Microcontroller Programmer hardware and software.

### **MPLAB® ICD 2 User's Guide (DS51331)**

Consult this document for information pertaining to Microchip's In-Circuit Debugger, MPLAB ICD 2. MPLAB ICD 2 utilizes the in-circuit debugging capability built into the Flash devices.

### **PIC16F91X Data Sheet (DS41250)**

Consult this document for information regarding the PIC16F91X 28/40/44-pin Flash-based, 8-bit CMOS Microcontroller with LCD Driver device specifications.

### **PIC16F685/687/689/690 Data Sheet (DS41262)**

Consult this document for information regarding the PIC16F685/687/689/690 20-pin Flash-based, 8-bit CMOS Microcontroller device specifications.

### **PIC12F508/509/16F505 Data Sheet (DS41236)**

Consult this document for information regarding the PIC12F508/509 8/14-pin Flash-based, 8-bit CMOS Microcontroller device specifications.

### **MPLAB® IDE, Simulator, Editor User's Guide (DS51025)**

Consult this document for more information pertaining to the installation and features of the MPLAB Integrated Development Environment (IDE) Software.

### **Mechatronics Design Center**

The Mechatronics Design Center ([www.microchip.com/mechatronics](http://www.microchip.com/mechatronics)) provides a wealth of information on design applications involving Mechatronics. All documentation is in Adobe® Acrobat® (pdf) format.

### **Microchip Web Site**

The Microchip web site ([www.microchip.com](http://www.microchip.com)) contains a wealth of documentation. Individual data sheets, application notes, tutorials and user's guides are all available for easy download. All documentation is in Adobe® Acrobat® (pdf) format.

Please complete the enclosed Warranty Registration Card and mail it promptly. Sending in the Warranty Registration Card entitles users to receive new product updates. Interim software releases are available at the Microchip web site.

# PICDEM™ Mechatronics Demo Board User's Guide

---

## THE MICROCHIP WEB SITE

Microchip provides online support via our web site at [www.microchip.com](http://www.microchip.com). This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

## DEVELOPMENT SYSTEMS CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at [www.microchip.com](http://www.microchip.com), click on **Customer Change Notification** and follow the registration instructions.

The Development Systems product group categories are:

- **Compilers** – The latest information on Microchip C compilers and other language tools. These include the MPLAB C18 and MPLAB C30 C compilers; MPASM™ and MPLAB ASM30 assemblers; MPLINK™ and MPLAB LINK30 object linkers; and MPLIB™ and MPLAB LIB30 object librarians.
- **Emulators** – The latest information on Microchip in-circuit emulators. This includes the MPLAB ICE 2000 and MPLAB ICE 4000.
- **In-Circuit Debuggers** – The latest information on the Microchip in-circuit debugger, MPLAB ICD 2.
- **MPLAB® IDE** – The latest information on Microchip MPLAB IDE, the Windows® Integrated Development Environment for development systems tools. This list is focused on the MPLAB IDE, MPLAB SIM simulator, MPLAB IDE Project Manager and general editing and debugging features.
- **Programmers** – The latest information on Microchip programmers. These include the MPLAB PM3 and PRO MATE® II device programmers and the PICSTART® Plus and PICkit™ development programmers.



## CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support
- Development Systems Information Line

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://support.microchip.com>

## DOCUMENT REVISION HISTORY

### Revision A (May 2005)

- Initial Release of this Document.

### Revision B (June 2005)

- Changed PIC<sup>®</sup> Communicator to PIC<sup>®</sup> MCU Communicator.

## TROUBLESHOOTING

See Chapter 3 for information on common problems.

# PICDEM™ Mechatronics Demo Board User's Guide

---

NOTES:

---

## **Chapter 1. PICDEM™ Mechatronics**

---

### **1.1 INTRODUCTION**

The PICDEM™ Mechatronics is intended to be a learning tool for individuals interested in Mechatronic design. Mechatronics refers to integrating electronic controls into mechanical systems or replacing mechanical components with an electronic solution.

PICmicro® microcontrollers are ideal for use in Mechatronic systems due to their small size, high efficiency, speed and abundance of peripheral configurations. Mechatronic systems range in complexity from a simple electromechanical switch with output multiplexing to the complex stabilizer control of a supersonic jet. The appliance and automotive markets are notable markets in which mechatronic designs are becoming more common place. The modern washing machine, for instance, once an entirely mechanical design, incorporates microcontrollers to manage cycle times, read human inputs and regulate the speed of the agitate and spin cycles.

This chapter introduces the PICDEM™ Mechatronics development board. It describes the PCB layout, parts and electrical connection to the PICkit™ 2 Flash Programmer and MPLAB ICD 2 In-Circuit Debugger.

### **1.2 HIGHLIGHTS**

This chapter discusses:

- Quick Start Guide
- The PICDEM™ Mechatronics Development Kit Contents
- The PICDEM™ Mechatronics Layout
- Required Tools
- PICDEM™ Mechatronics Setup
- General PICDEM™ Mechatronics Information

## 1.3 QUICK START GUIDE

The PICDEM Mechatronics Demo Board is programmed at the factory with a demonstration program. The board must be configured as described in this chapter in order to use the demonstration program. Once the board is configured and powered up, the speed of the Brushed DC (BDC) motor on the board may be varied using the potentiometer (POT1). The 8-bit hexadecimal interpretation of the position of POT1 is displayed on the LCD.

### Board Setup

Using the provided wire jumpers, screwdriver and shunts (2-pin black hard plastic jumpers), configure the board as shown in Figure 1-1.

1. Attach the leads of the brushed DC motor to Drive 1 and Drive 2 using the screwdriver.
2. Connect POT1 (on J4) to AN0 (on J13) using a wire jumper.
3. Connect P1 (on J1) to RD7 (on J10) using a wire jumper.
4. Connect N2 (on J2) to RD2 (on J10) using a wire jumper.
5. Connect the right and center pins on JP8 using a shunt.

### Board Power-Up

Supply power to the board in one of the following ways:

- Connect a 9-12 VDC (0.75 amp minimum) supply using J9 (see note below)
- Connect a 9-12 VDC (0.75 amp minimum) supply to the P21 and P20 screw terminals.
- Connect a 9 VDC battery to the battery connector.
- Connect a 5 VDC (1.2 amp minimum) supply to TP2 or TP3.

<b>Note:</b> The power supply part number is AC162039 (see <a href="http://buy.microchip.com">buy.microchip.com</a> ). Packaged with the MPLAB ICD 2, the part number is DV164007.
--


### Demonstration Program

Press **CLR FAULT** (SW5), which is near the bottom right corner of the board. Turn POT1 clockwise to increase the speed of the motor. Note that the number displayed on the LCD increases as you turn the potentiometer clockwise.

Try experimenting with the other sensors on the board:

- Move the jumper wire on POT1 (J4) to Light (J4). Vary the intensity of light shining on the light sensor located near the top left corner of the board. Notice what happens to the motor.
- Move the jumper to TEMP (J4). Blow on the temperature sensor located on the top left corner of the board. Note what happens to the number displayed on the LCD.
- Move the jumper back to POT1. Move the jumper from N2 (J1) to D0 (J14). Watch what happens to the intensity of LED D0 as you turn the potentiometer.

FIGURE 1-1: QUICK BOARD SETUP

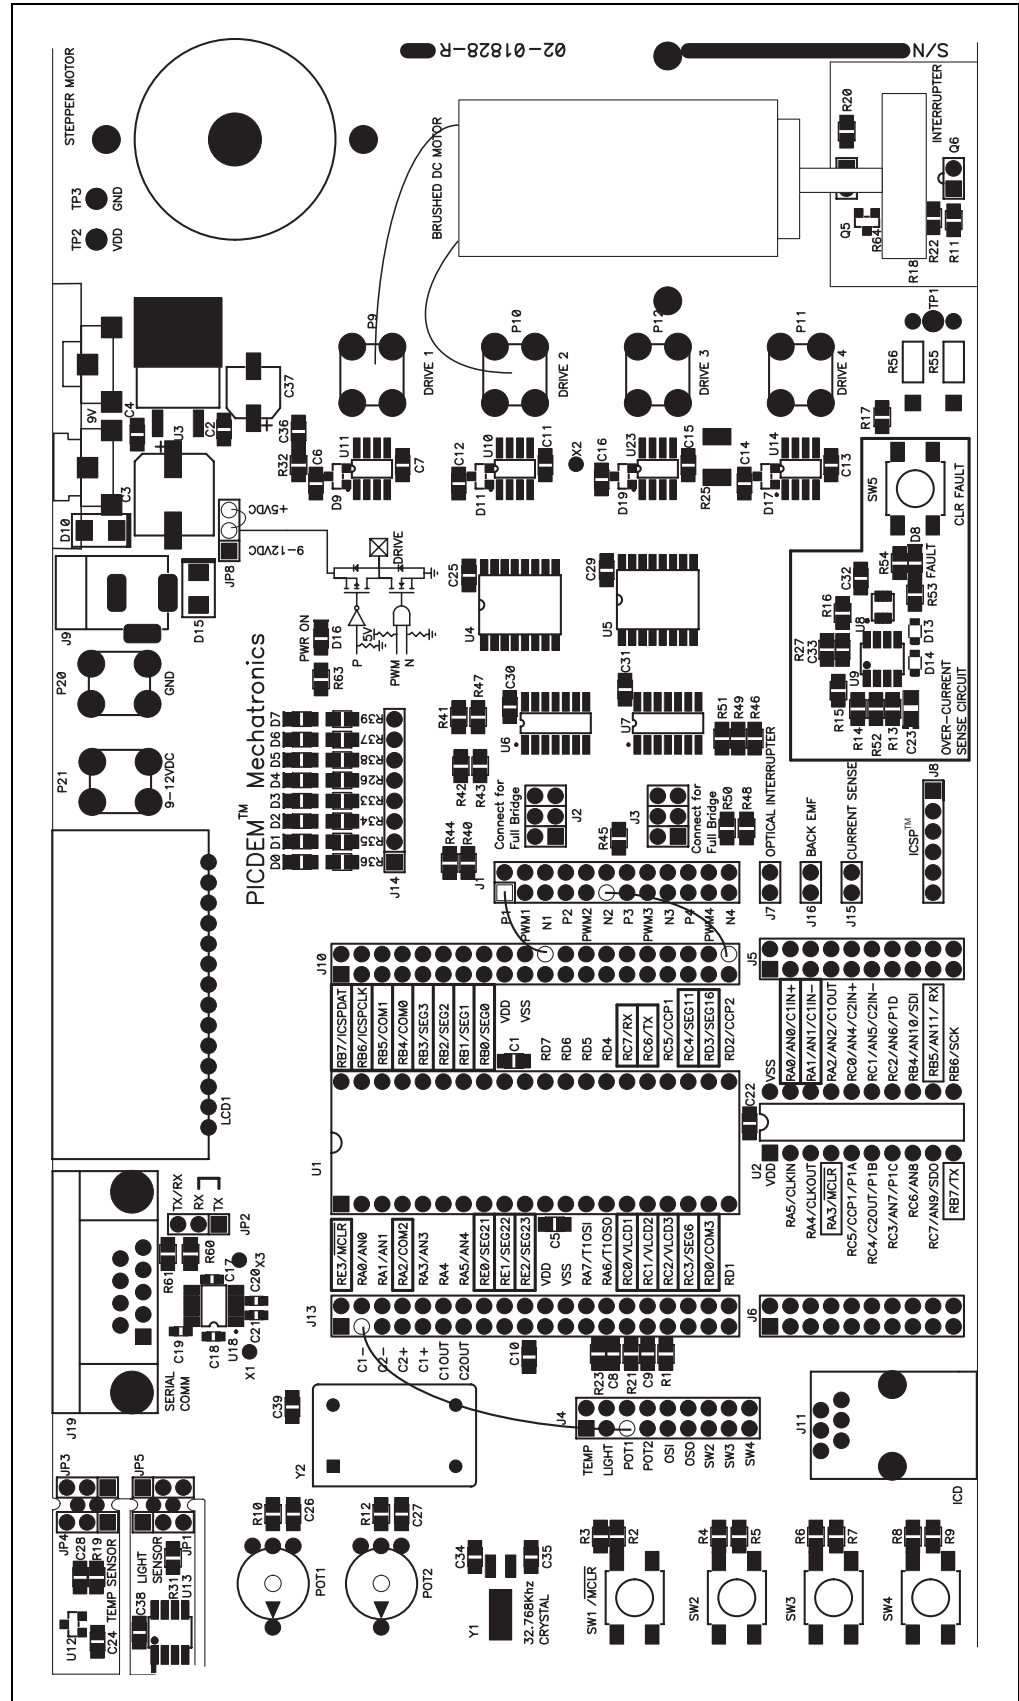

# PICDEM™ Mechatronics Demo Board User's Guide

---

## 1.4 PICDEM™ MECHATRONICS DEVELOPMENT KIT CONTENTS

The PICDEM™ Mechatronics Development Kit contains the following items:

1. The PICDEM™ Mechatronics Printed Circuit Board (PCB) with motors
2. Pre-programmed PIC16F917 PICmicro® device
3. 10 wire jumpers
4. 8 2-pin shunts
5. CD-ROM including:
  - PICDEM™ Mechatronics User's Guide
  - Workshop-in-a-Box presentation for training students on the board (speaker notes included)
  - Data sheets for the PIC16F91X, PIC16F685/687/689/690 and motors
  - Application notes and other technical documentation
6. Sample kit including a PIC16F690 and PIC12F509 device
7. Microchip screwdriver
8. Registration Card

## 1.5 PICDEM™ MECHATRONICS LAYOUT

The PICDEM™ Mechatronics is shown in Figure 1-2.

A PIC16F917 microcontroller is populated in the 40-pin socket, in which 22 out of the 36 available I/O pins are dedicated connections to several components on the board. The remaining 14 pins are available for the user to connect to the other components on the board, using the provided jumpers wires. The dedicated connections connect to the following components:

- Switch 1 – 1 pin: MCLR
- LCD – 17 pins: VLCD1, VLCD2, VLCD3, COM0, COM1, COM2, COM3, SEG0, SEG1, SEG2, SEG3, SEG6, SEG11, SEG16, SEG21, SEG22, SEG23
- In-Circuit Serial Programming™ Connector – ICSPDAT, ICSPCLK, MCLR
- RS-232 COM port – 2 pins: RX, TX

A 20-pin socket is provided and is compatible with 8/14/20-pin Flash-based microcontrollers. A PIC16F690 microcontroller is provided to use in the 20-pin socket, in which 5 out of the 18 available I/O pins are dedicated connections to several components on the board. The remaining 13 pins are available for the user to connect to the other components on the board using the provided jumper wires. The dedicated connections connect to the following components:


- Switch 1 – 1 pin: MCLR
- In-Circuit Serial Programming (ICSP™) Connector – ICSPDAT, ICSPCLK, MCLR
- RS-232 COM port: RX, TX

**Note:** Only one microcontroller should be loaded into the board at any given time.

Dedicated pins are indicated by a white box enclosing the pin designation next to each socket. Pay close attention to this designation, as the functionality of the dedicated pins are affected by the circuitry these pins are connected to. It is recommended that you use only the pins not designated as dedicated connections in your design.

The remaining components on the board must be connected to the microcontroller using the provided wire jumpers. The jumpers connect between the headers on either side of the microcontroller and the header pins next to the respective components on the board. The components on the board are labeled in Figure 1-2.

**FIGURE 1-2: PICDEM MECHATRONICS DEMO BOARD HARDWARE**

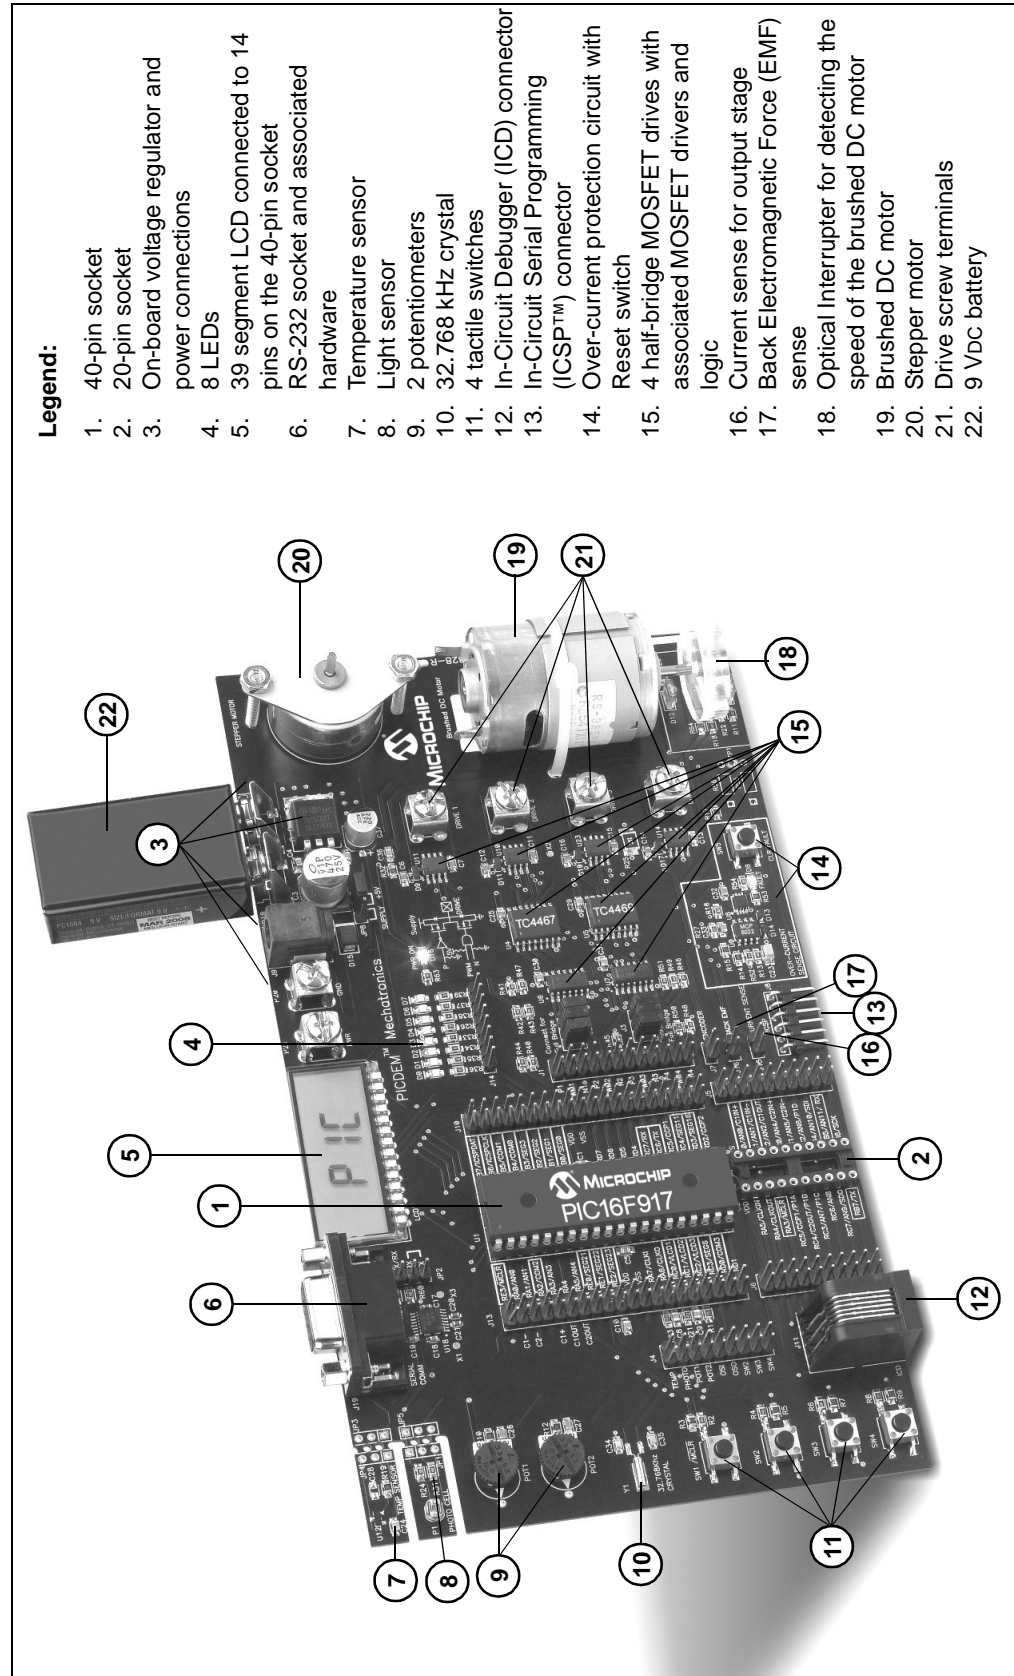

The reasons for requiring you to use the provided jumpers to connect components to the microcontroller are three-fold.

1. You will gain knowledge and experience by physically connecting components to the microcontroller.
2. There are more peripherals than pins on the microcontrollers so that you can do more with the board.
3. Should you choose to use the board to experiment on your own, the board allows you the flexibility to do so. You can try experimenting with peripherals not covered in the projects in **Chapter 2. "Example Projects"**.

## 1.6 REQUIRED TOOLS

One of the following programming tools is needed in order to complete the projects in the next chapter:

- PICkit™ 2 Microcontroller Programmer (Part# DV164120)
- MPLAB® ICD 2 In-Circuit Debugger/Programmer (Part# DV164007 includes a 9 VDC power supply and serial cable)

Figures 1-3 and 1-4 illustrate how to connect each of these tools to the PICDEM Mechatronics Demo Board.

## 1.7 PICDEM™ MECHATRONICS SETUP

Please take a moment to review the following steps, prior to using the board. These steps ensure the board is configured correctly before beginning the projects.

### 1.7.1 Jumper Settings

Remove all 2-pin shunts (jumpers), except for JP8. On JP8, the shunt should be connected in the right most position (indicated by the "+5V" label), which ensures that the drive stage is powered by +5 VDC.

### 1.7.2 Board Power-Up


Supply power to the board in one of the following ways:

- Connect a 9-12 VDC (0.75 amp minimum) supply via J9. The connector's polarity is grounded externally and positive internally.
- Connect a 9-12 VDC (0.75 amp minimum) supply to the P21 and P20 screw terminals.
- Connect a 9 VDC battery to the battery connector.
- Connect a 5 VDC (1.2 amp minimum) supply to TP2 or TP3.


When power is initially connected, the "PWR ON" LED should light up. The "FAULT" LED in the over-current sense circuit will also be on when the board is powered up. Clear the Fault by pressing SW5 (**CLR FAULT**) switch. The board is now properly configured for the projects.



**FIGURE 1-3: CONNECTING THE ICD-2 TO THE PICDEM MECHATRONICS DEMO BOARD**

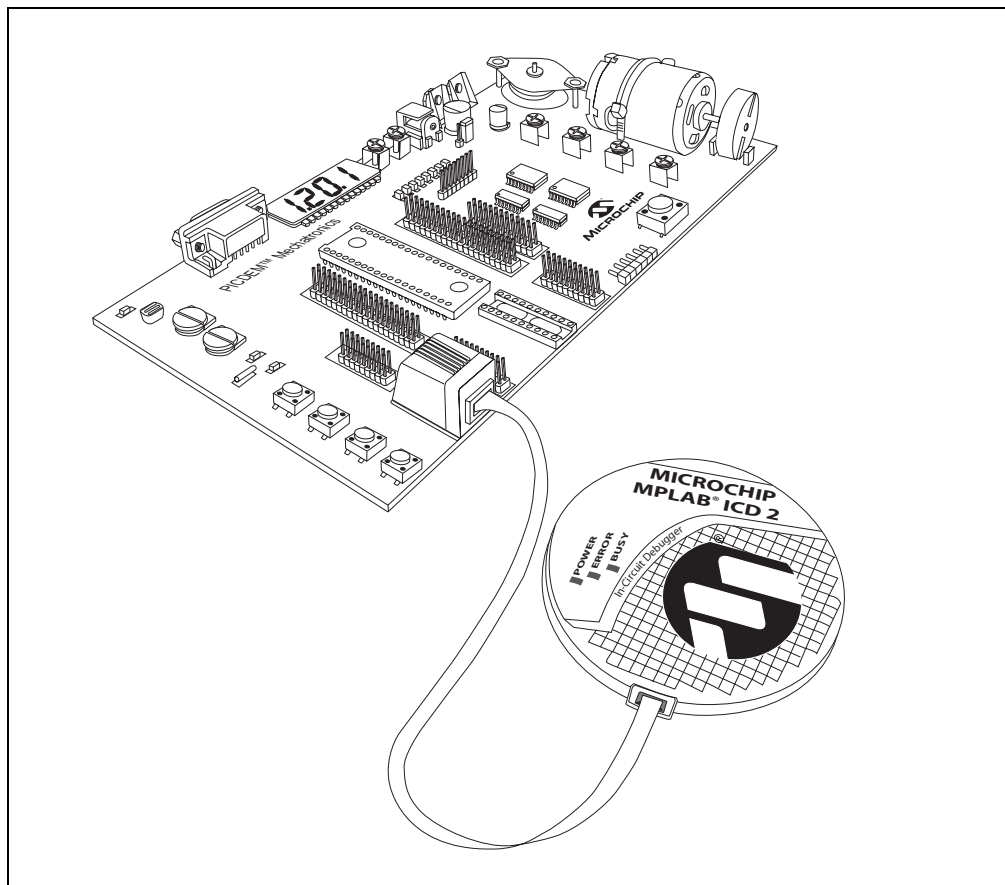

**FIGURE 1-4: CONNECTING THE PICKIT™ 2 TO THE PICDEM MECHATRONICS DEMO BOARD**

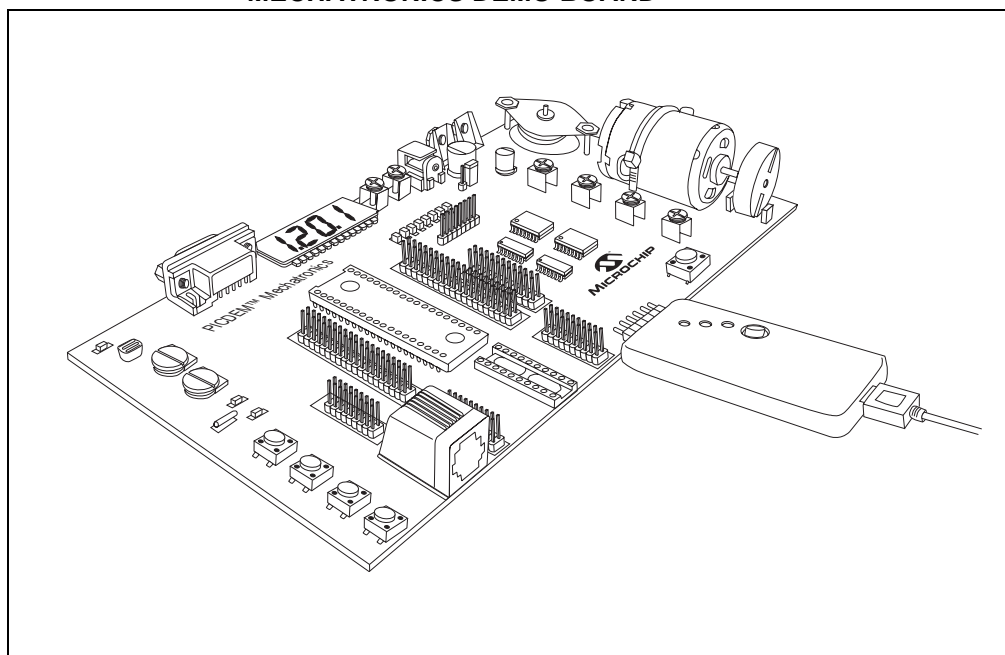

## 1.8 GENERAL PICDEM™ MECHATRONICS DEMONSTRATION BOARD INFORMATION

### Power Supply Maximum Ratings

Supply voltage: 12 VDC

Output current (drive stage): 1.2A (total)

### 1.8.1 Experimentation

The PICDEM Mechatronics Demo Board was designed for your experimentation. After completing the projects in **Chapter 2. “Example Projects”**, please experiment freely on your own. Voltage power supplies and motors, other than those provided in the kit, may be used.


The driver portion of the board (the part that supplies power to the motors) has an over-current sense circuit and will trip should the motor draw more than 1.2 amps. The LM7805 regulator also protects the circuit by limiting the current consumed by the board. Logic has also been put in place to ensure that the P and N-Channel MOSFETs connected to each of the output drives can not be turned on simultaneously.

<p><b>Note:</b> Although reasonable measures have been taken to protect the board from the occasional mistake, THE BOARD MAY BE DAMAGED if proper design techniques are not used and special attention to the schematic is not made.</p>
--

### 1.8.2 On-Board Status LEDs

There are eight status LEDs on the board specifically provided to assist the user in the developing and debugging of your code. The user can output register values on one of the Ports of the microcontroller and have a binary reading of the value of that register. Connect the LEDs as shown in Figure 1-5. For instance, if it is suspected that the STATUS register is not being set appropriately, move the STATUS value into PORTC. If PORTC is attached as shown in Figure 1-5, the LEDs will show the value of STATUS.

**FIGURE 1-5: CONNECTING PORTC PINS TO LEDS FOR DEBUGGING**

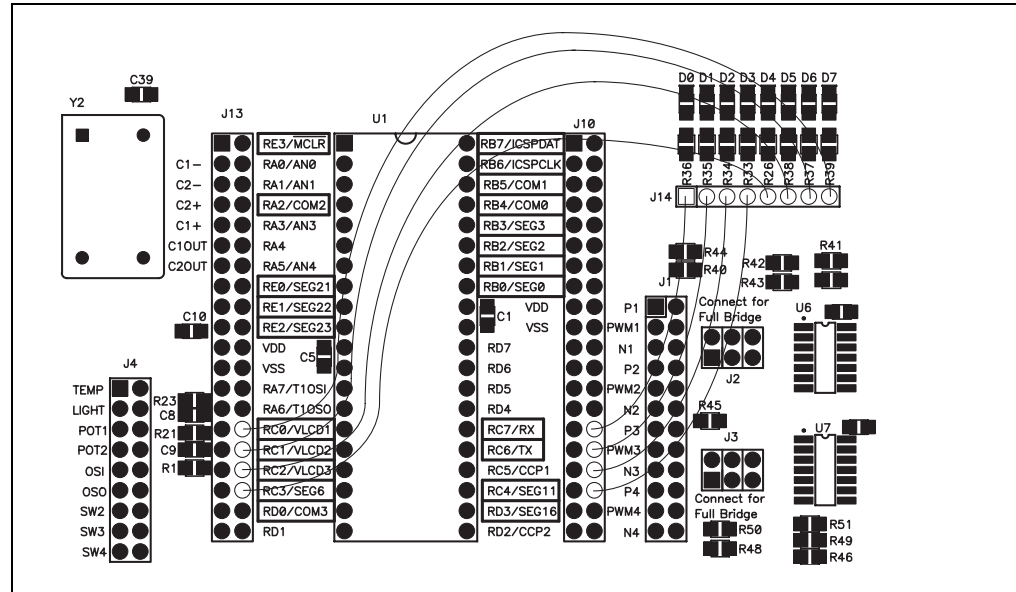

## 1.8.3 OVER-CURRENT PROTECTION CIRCUIT

The over-current protection circuit included on the board shuts down the drive portion of the circuit if the board drives 1.2 amps continually for 100 ms or longer. Upon powering up the board, the “FAULT” LED will be on. The drive circuit must be reset manually by pressing the **CLEAR FAULT** button in the lower right hand portion of the board every time the board is initially supplied with power. Otherwise, a Fault is present when the “FAULT” LED is illuminated and must be manually reset by pressing the same button. If you use your own motor, keep current draw less than 1.2A, as the over-current protection circuit will not allow driving a motor at or above this rating.

## 1.8.4 MOTOR CONNECTION

The motors provided on the PICDEM Demo Board must be manually connected to the Drive screw terminals. The kit includes a Microchip screwdriver to facilitate in making these connections.

**Note:** The supplied Brushed DC motor and Bipolar Stepper motor are subject to change as the motor manufacturers cannot guarantee the same model numbers will be available indefinitely. Please refer to Microchip’s web page ([www.microchip.com](http://www.microchip.com)) for the current data sheets for the motors supplied with this kit, if the motor supplied on your board differs from the motor data sheets found on the CD-ROM.

## 1.8.5 SERIAL COMMUNICATION

The JP2 jumper is normally not populated with a shunt. With no shunt present, the board is configured for serial communications via the PICmicro® USART (or EUSART). Connecting a shunt between the bottom two pins (TX and RX) allows the user to transmit and receive serial communication via one pin (jumper between the microcontroller and the TX/RX pin on JP2).

## 1.8.6 SNAP-OFF SENSORS

The temperature sensor and light sensor can be snapped off to give greater flexibility in using these sensors. For example, the temperature sensor may be snapped off and moved into a more hostile environment, while keeping the board within sight. Once, snapped off, solder wires of the same length between the adjoining holes (i.e., JP3 and JP4 for the temperature sensor) on the PICDEM Mechatronics Demo Board and the sensor board.

## 1.8.7 BACK EMF SCALING RESISTORS

If choosing to drive your own brushed DC motor with the PICDEM Mechatronics Demo Board at a voltage higher than +5 VDC, the Back EMF must be scaled down into a range of 0-5 VDC. Resistor locations R55 and R56 are provided for this purpose. These locations may be populated with resistors to create a simple voltage divider circuit. TP1 is the output of this voltage divider. See the schematic in **Appendix A. "Hardware Schematics"** for further clarification.

## 1.8.8 CURRENT SENSE

The output stage of the board incorporates a simple current sensing circuit, which is assessable at J15 (CURRENT SENSE). At this pin, the voltage is equal to current  $\pm 10\%$ . For instance, if a motor is being driven and it is drawing 0.9 amps, the voltage at the header is 0.9 volts ( $\pm 10\%$ ).

## 1.8.9 HEADER/JUMPER FUNCTIONS

TABLE 1-1: HEADER/JUMPER FUNCTIONS

Header/ Jumper #	Description
J1*	Output MOSFET drive pins.
J2	Full-bridge drive circuit (Drives 1 and 2): Place three shunts vertically on these pins to create a full-bridge drive circuit incorporating Drives 1 and 2.
J3	Full-bridge drive circuit (Drives 3 and 4): Place three shunts vertically on these pins to create a full-bridge drive circuit incorporating Drives 3 and 4.
J4*	Temperature sensor, light sensor, potentiometers, 32.768 oscillator and switches signal pins.
J5*	Right-side signal pins of the 20-pin DIP socket (U2, pins 11-20).
J6*	Left-side signal pins of the 20-pin DIP socket (U2, pins 1-10).
J7*	Optical interrupter feedback signal pins.
J10*	Right-side signal pins of the 40-pin DIP socket (U1, pins 21-40).
J13*	Left-side signal pins of the 40-pin DIP socket (U1, pins 1-20).
J14	LED connect pins.
J15*	Current sense feedback from the drive stage.
J16*	Back EMF feedback signal pins.
JP2	Single-pin serial communication jumper (see <b>Section 1.8.5 “Serial Communication”</b> for details).
JP8	Drive circuit voltage selection. See diagram on board.
* On these jumpers, the pins are connected in pairs horizontally. This allows one pin to be used for jumping to/from the microcontroller (using a wire jumper) and the other pin for probing the circuit with test equipment.	

# PICDEM™ Mechatronics Demo Board User's Guide

---

NOTES:

---

## Chapter 2. Example Projects

---

### 2.1 INTRODUCTION

The following projects cover basic mechatronic principles such as reading a sensor, interfacing to a LCD and driving a motor. These projects also provide examples of how to use the various PICmicro® microcontroller peripherals. The projects are presented sequentially so that you will build knowledge as you progress from one project to the next.

Those who are new to programming PIC® microcontrollers should pay special attention to the comments in the source code for each of the projects. Though these projects are not intended to teach you the Microchip Assembly language, you will be able to get a good grasp of Microchip's Assembly language by reading the source code.

Microchip has published application notes and other documents covering the applications in each of these projects. These documents can be found on the provided CD-ROM. Any updates to the applicable documents are available on Microchip's web site. Please reference these documents while exploring each of the projects.

<p><b>Note:</b> See <b>Section 1.7 “PICDEM™ Mechatronics Setup”</b> for instructions on how to setup the board to its “initial” condition prior to doing projects.</p>
--

## 2.2 LOADING PROJECTS IN MPLAB® IDE

The firmware for the projects is arranged in corresponding project folders in the install directory for the PICDEM Mechatronics CD. If you installed the CD in the default directory, the firmware for Project 1 is located in:


C:\PICDEM Mechatronics\firmware\Project1

### Opening a Project

1. Start MPLAB IDE.
2. In the menu bar choose File -> Open Workspace.
3. Find the project folder.
4. Open the \*.mcw file.

The project window for Project 1 is shown in Figure 2-1.

**FIGURE 2-1: PROJECT WINDOW**

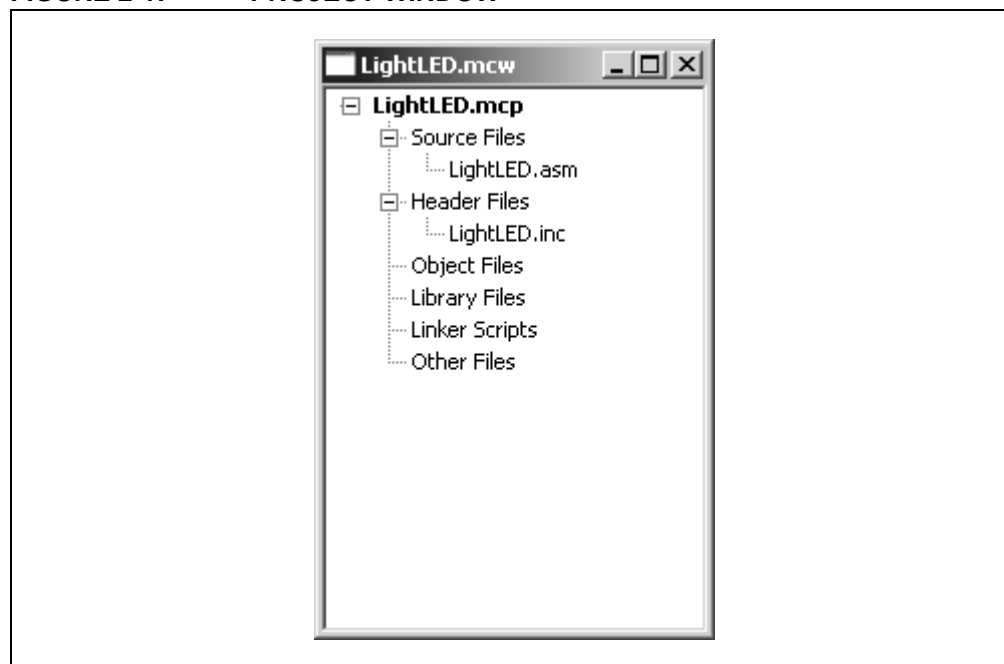

## 2.3 EXAMPLE PROJECTS

### PIC16F917 Projects:

- Project 1: Hello World (Light a LED)
- Project 2: Dusk Indicator Using the Voltage Comparator
- Project 3: Thermometer Using the Analog-to-Digital Converter
- Project 4: Digital Clock Using Timer1
- Project 5: Brushed DC Speed Control with Optical Encoder Feedback
- Project 6: Brushed DC Speed Control with Back EMF Feedback
- Project 7: Stepper Motor Control; Single Stepping, Half Stepping and Microstepping
- Project 8: PC Interface Using the USART

### PIC16F690 Project:

- Project 9: Brushed DC Motor Control Using the ECCP



## 2.3.1 Project 1: Hello World (Light a LED)

When learning to use a new computer language, the first practical lesson traditionally instructs the user how to print “Hello World” on the screen. Staying with tradition, this project will make your PICDEM Mechatronics Demo Board say “Hello World” in the most practical way a microcontroller can – lighting a LED.

### Objectives

1. Use the PIC16F917 to read a tactile switch input.
2. Implement switch debouncing.
3. Toggle a LED when a switch is pushed.


### Applicable Technical Documents

PICkit 1™ Flash Starter Kit User’s Guide (DS40051): Exercise 2


### Jumper Configuration

- RD7 (J10) to D0 (J14)
- RA0 (J13) to SW2 (J4)

**FIGURE 2-2: PROJECT 1: JUMPER DIAGRAM**

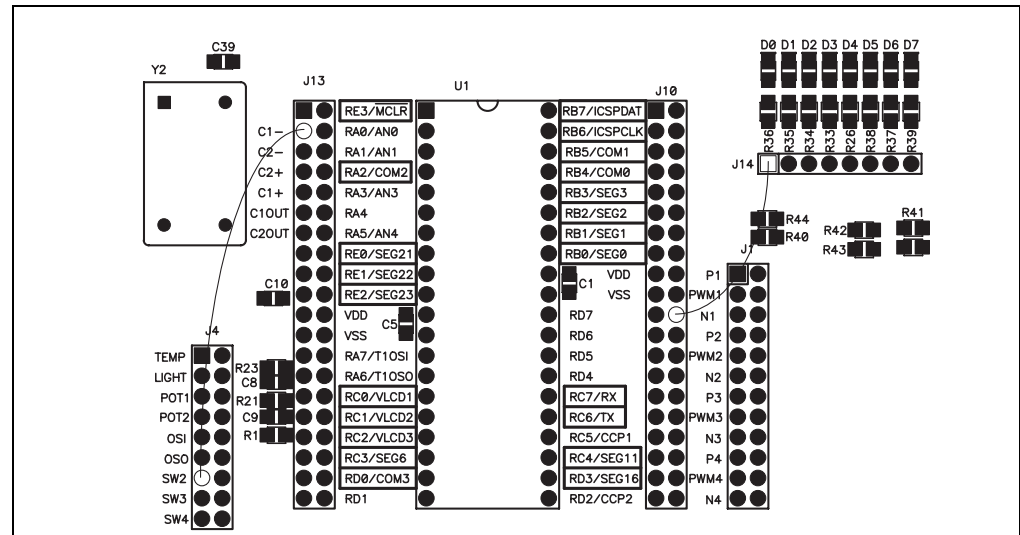

**FIGURE 2-3: PROJECT 1: SCHEMATIC**

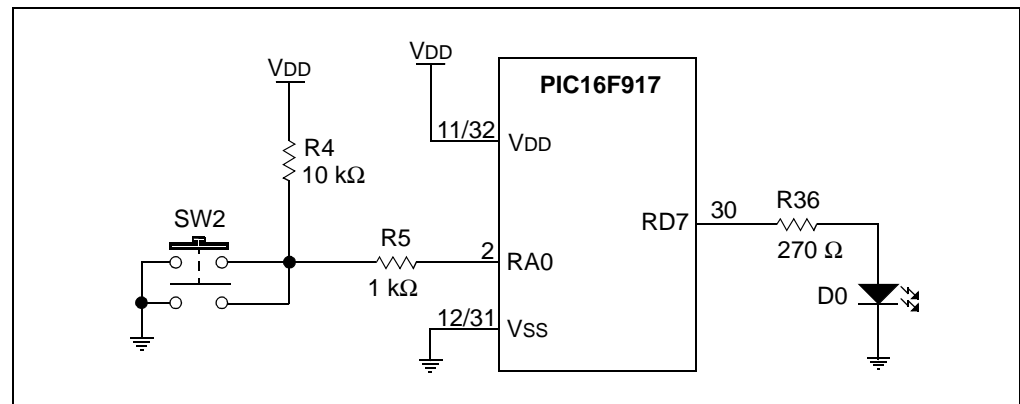

# PICDEM™ Mechatronics Demo Board User's Guide

---

## Instructions

Pressing SW2 toggles LED (D0) on and off.

## Discussion

Switch debouncing is done to ensure that mechanical contact chatter in the switch is not mistaken for more than one button push. Debouncing also ensures that for every one press of the button, only one function is executed. In this project that function is toggling a LED.

**Note:** See **Section 2.2 “Loading Projects in MPLAB® IDE”** for the location of the source files for this project and all subsequent projects.

## 2.3.2 Project 2: Dusk Indicator Using the Voltage Comparator

If you have yard lights or a porch light at home that automatically turns on at dusk then you are familiar with the application we will create in this project. The comparator on the PIC16F917 will be used to compare the voltage level from the potentiometer to the voltage level out from the light sensor. When the intensity of the light to the sensor is reduced below the trip point set by the potentiometer, the LED will turn on.

### Objectives

1. Use the internal analog comparator module.
2. Implement software hysteresis to stabilize the comparator output.

### Applicable Technical Documents

PICmicro<sup>®</sup> Comparator Tips 'n Tricks (DS41215)

### Jumper Configuration

- C1- (J13) to LIGHT (J4)
- C1+ (J13) to POT1 (J4)
- RD7 (J10) to D0 (J14)

FIGURE 2-4: PROJECT 2: JUMPER DIAGRAM


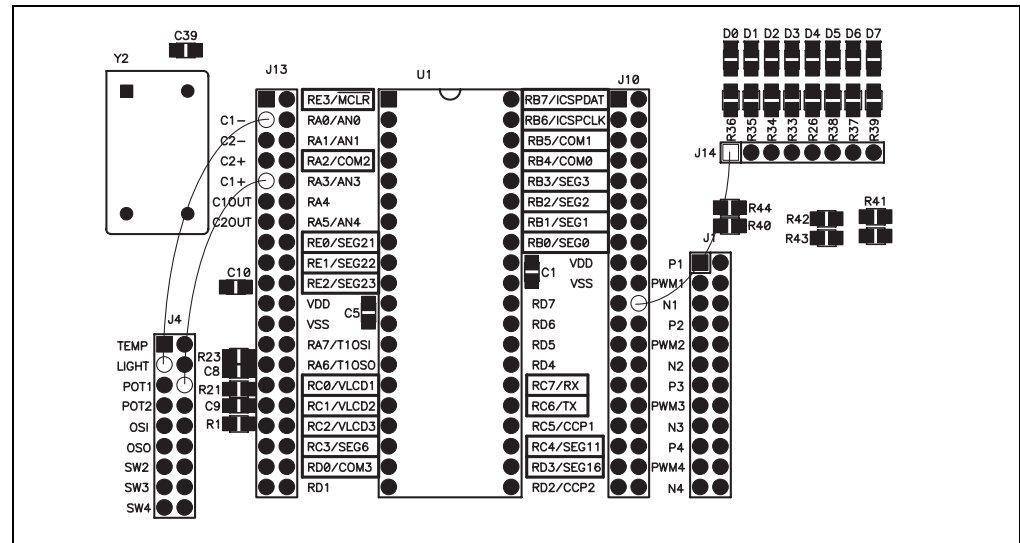


FIGURE 2-5: PROJECT 2: SCHEMATIC

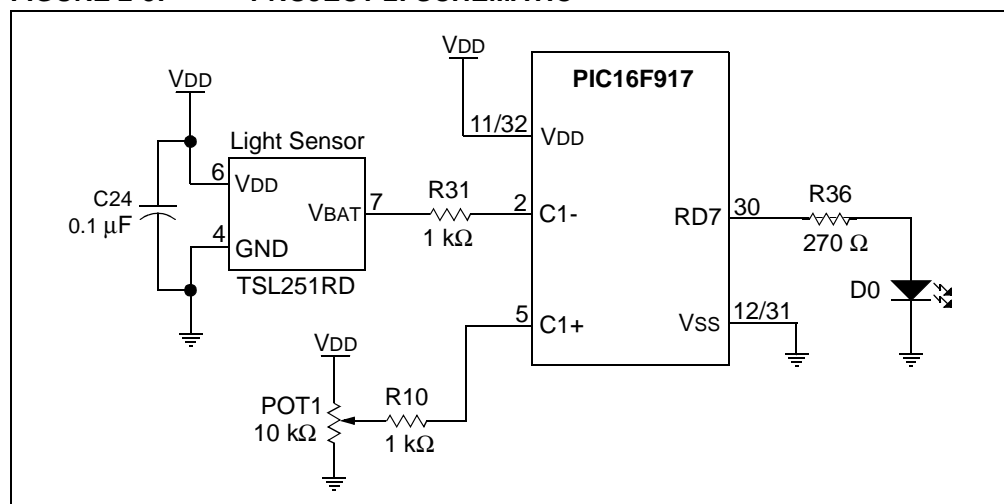

## Instructions

Provide a light source for the light sensor and set Potentiometer 1 to the desired trip point. Block the light source and LED1 should turn on. Experiment with the set point and the amount to which you block the light from the sensor. Move your hand slowly in front of the sensor and note that the LED does not flicker. This demonstrates how software hysteresis prevents the output of the comparator from chattering near the trip point.

## Discussion

Comparators are found in many PIC microcontrollers due to the versatility and low cost they offer the user. As you can see, the comparator is one of the more easily used peripherals. Refer to the Comparator Tips 'n Tricks pamphlet included on the CD in this kit for more information on comparators.

This project shows how to read an analog temperature sensor and display the temperature on a LCD. The Analog-to-Digital Converter module is used to read the analog voltage output from the temperature sensor. Then, the resulting value is converted into degrees Celsius and displayed.

1. Use the Analog-to-Digital Converter module on the PIC16F917 to read the analog voltage output of the TC1047A temperature sensor.
2. Gain knowledge about the LCD module and using the LCD module worksheet.

## Precision Temperature-to-Voltage Converter (TC1047/A) Data Sheet (DS21498)

- AN0 (J13) to TEMP (J4)

The diagram illustrates the pinout of the PIC16F877S microcontroller, showing connections for various components:

- J2:** A 4-pin connector with pins labeled C1-, C2+, C1+, and C10UT. A wire connects C1- to C10UT.
- J4:** A 16-pin connector with pins labeled TEMP, LIGHT, POT1, POT2, OSI, OSO, SW2, SW3, and SW4. A wire connects TEMP to C10UT.
- J13:** A 28-pin connector with pins labeled RE3/MCLR, RA0/AN0, RA1/AN1, RA2/COM2, RA3/AN3, RA4, RA5/AN4, RE0/SEG21, RE1/SEG22, RE2/SEG23, VDD, VSS, RA7/T10SI, RA6/T10SO, RC0/VLCD1, RC1/VLCD2, RC2/VLCD3, RC3/SEG6, RD0/COM3, and RD1.
- U1:** The PIC16F877S microcontroller chip, showing pins RB7/ICSPDAT, RB6/ICSPCLK, RB5/COM1, RB4/COM0, RB3/SEG3, RB2/SEG2, RB1/SEG1, RB0/SEG0, C1, VDD, VSS, RD7, RD6, RD5, RD4, RC7/RX, RC6/TX, RC5/CCP1, RC4/SEG11, RD3/SEG16, and RD2/CCP2.
- J10:** A 28-pin connector with pins labeled RB7/ICSPDAT, RB6/ICSPCLK, RB5/COM1, RB4/COM0, RB3/SEG3, RB2/SEG2, RB1/SEG1, RB0/SEG0, C1, VDD, VSS, RD7, RD6, RD5, RD4, RC7/RX, RC6/TX, RC5/CCP1, RC4/SEG11, RD3/SEG16, and RD2/CCP2.

## Instructions

The LCD displays a temperature reading in degrees Celsius. Breathe on the temperature sensor or introduce another heat source. The displayed temperature should rise. Move the jumper wire from the temperature sensor to the potentiometer (POT1 on J4). Move the potentiometer to view the full range of temperature conversion.

## Discussion

The project introduces you to use of the Analog-to-Digital Converter module. One of the biggest advantages to using a PICmicro® microcontroller in applications that require temperature sensing is that the microcontroller can be used to calibrate the temperature sensor reading automatically (over varying supply voltages and process variations in the parts themselves). This saves the manufacturer costly calibration time at the factory that is typically required by traditional temperature sensing technologies.

LCD functions were introduced in this project for displaying data on the provided LCD. Take a look at the LCD worksheet in **Appendix B. "LCD Segment Mapping Worksheet"**. This is the same worksheet located in the PIC16F91X Data Sheet, only it has been filled in using the information from the PICDEM Mechatronics Schematic (see **Appendix A. "Hardware Schematics"** for the schematic). In the LCD source code provided in this project, you can see that the information in this worksheet has been converted into `#define` statements for each of the segments.

## 2.3.4 Project 4: Digital Clock Using Timer1

Most appliances that have a LCD show a clock readout when the appliance is not in use. In this project, Timer1 is used to create a real-time clock readout on the LCD.

### Objectives

1. Configure the PIC16F917 to use the 32.768 kHz crystal to clock Timer1.
2. Convert Timer1 into seconds, minutes and hours.


### Applicable Technical Documents

Clock Design Using Low Power/Cost Techniques Application Note, AN615 (DS00615)

### Jumper Configuration


- T1OSI (J13) to OSI (J4) – See note.
- T1OSO (J13) to OSO (J4) – See note.
- RA3 (J13) to SW2 (J4)
- RA4 (J12 to SW3 (J4)
- RA5 (J13) to SW4 (J4)

**FIGURE 2-8: PROJECT 4: JUMPER DIAGRAM**

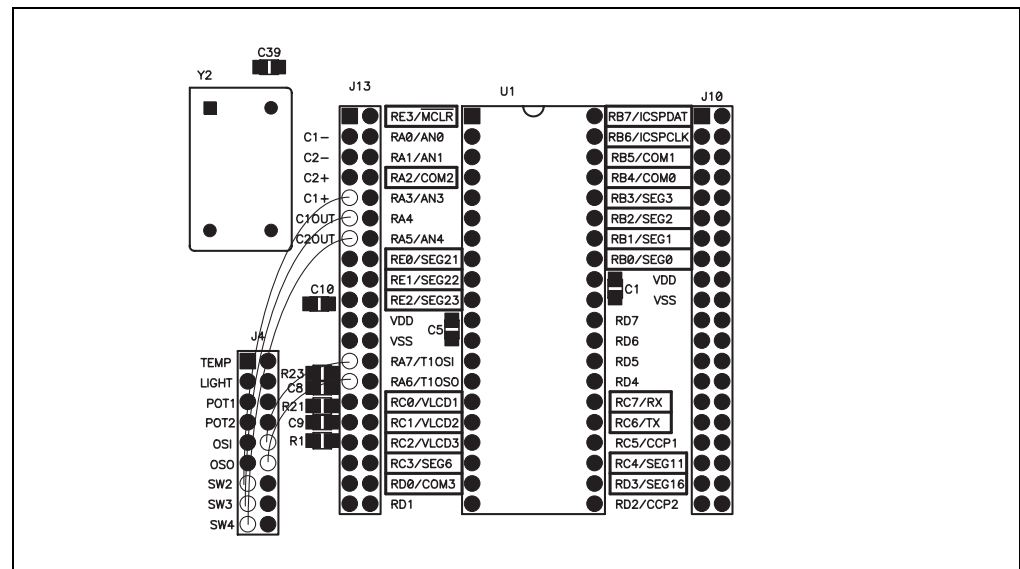

**Note:** Crystal circuits are very sensitive to noise and stray capacitances. In general, the traces between a crystal and a microcontroller should be as short as possible. The reason the PICDEM Mechatronics Demo Board strayed from good design practice was to give you the option to use pins RA7 and RA6 for other functions.

**FIGURE 2-9: PROJECT 4: SCHEMATIC**

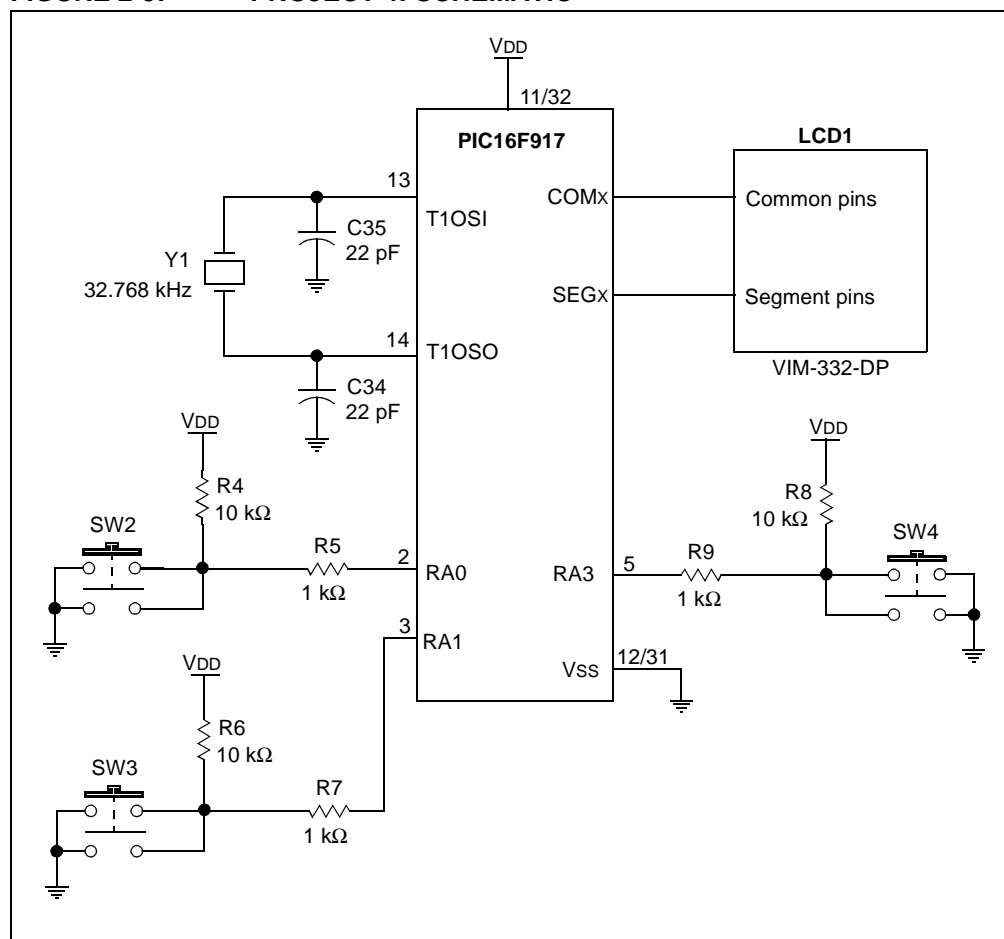

## Instructions

Use Switch 2 to set the hours and Switch 3 to set the minutes. Pressing and holding either of these switches will make the hours or minutes increment at a fast rate. Toggle between displaying the time (hours and minutes) and displaying the seconds by pressing Switch 4.

## Discussion

The 32.768 kHz crystal is used to take the guess work out of creating a clock display. You may recognize this frequency as being  $2^{15}$  kHz. This makes it very easy to convert clock pulses to seconds in the binary world of a microcontroller. Every time bit 15 in Timer1 changes, one second has elapsed. A crystal is used because an RC oscillator will have an unacceptable degree of error after several days.



## 2.3.5 Project 5: Brushed DC Motor Speed Control with Optical Encoder Feedback

Motor control is required in many mechatronic applications ranging from power windows to washing machine cycle control. This project will demonstrate speed control of a brushed DC motor. Brushed DC motor control is simple as the commutation, or sequencing of power to the various windings, is automatically performed by the motor's brushes. In this project, the Capture Compare PWM (CCP) module will be used in PWM mode to generate a brushed DC motor drive. Timer1 will measure speed feedback from the optical interrupter on the board. The optical interrupter circuit generates a high signal when light passes through the slots in the encoder disk. By measuring the time between pulses, the speed of the motor can be determined. A real-life application example includes precision speed control of a fan or hard disk drive.

### Objectives

1. Configure the CCP module to generate a PWM signal.
2. Use a PWM signal to vary the speed of a brushed DC motor.
3. Configure Timer1 to use the optical interrupter as its clock source.

### Applicable Technical Documents


Brushed DC Motor Fundamentals Application Note, AN905 (DS00905)

Low-Cost Bidirectional Brushed DC Motor Control Using the PIC16F684 Application Note, AN893 (DS00893)


### Jumper Configuration

- RD7 (J10) to P1 (J1)
- CCP2 (J10) to N2 (J1)
- AN0 (J13) to POT1 (J4)
- RC5 (J10) to Optical Interrupter (J7)
- Attach the motor leads to DRIVE1 (P9) and DRIVE2 (P10).
- J2 and J3 should be unpopulated (no shunts present).
- Connect the right and center pins of JP8 using a shunt.

**FIGURE 2-10: PROJECT 5: JUMPER DIAGRAM**

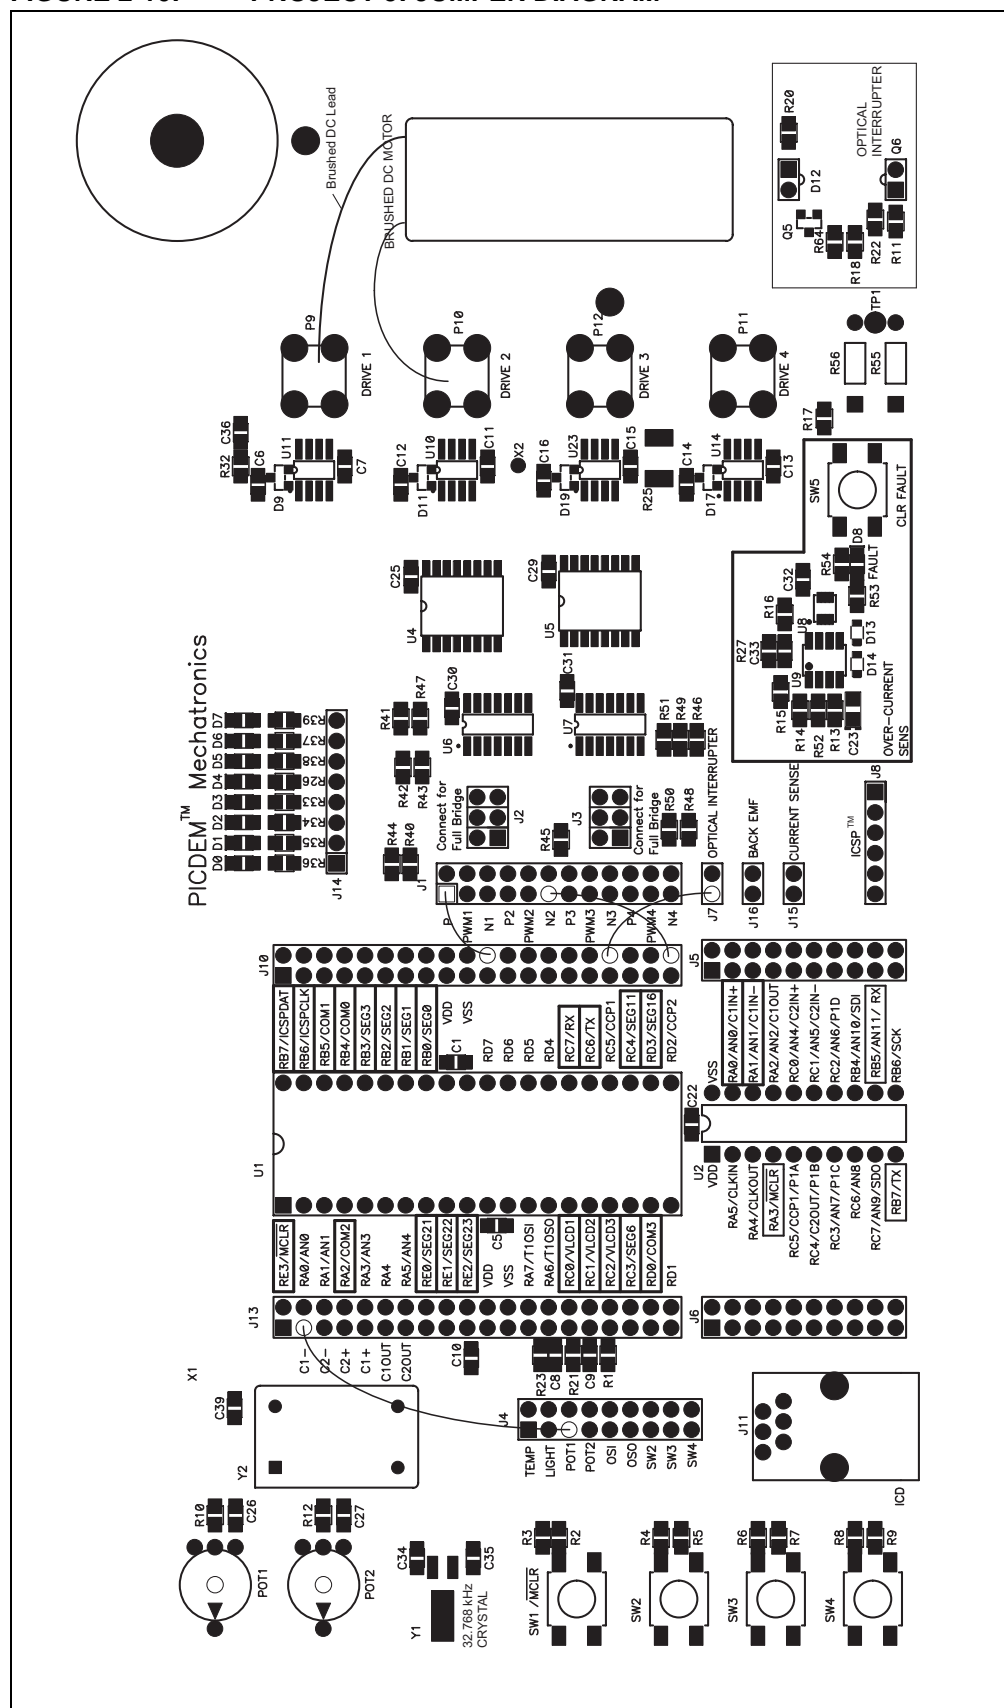

**FIGURE 2-11: PROJECT 5: SCHEMATIC**

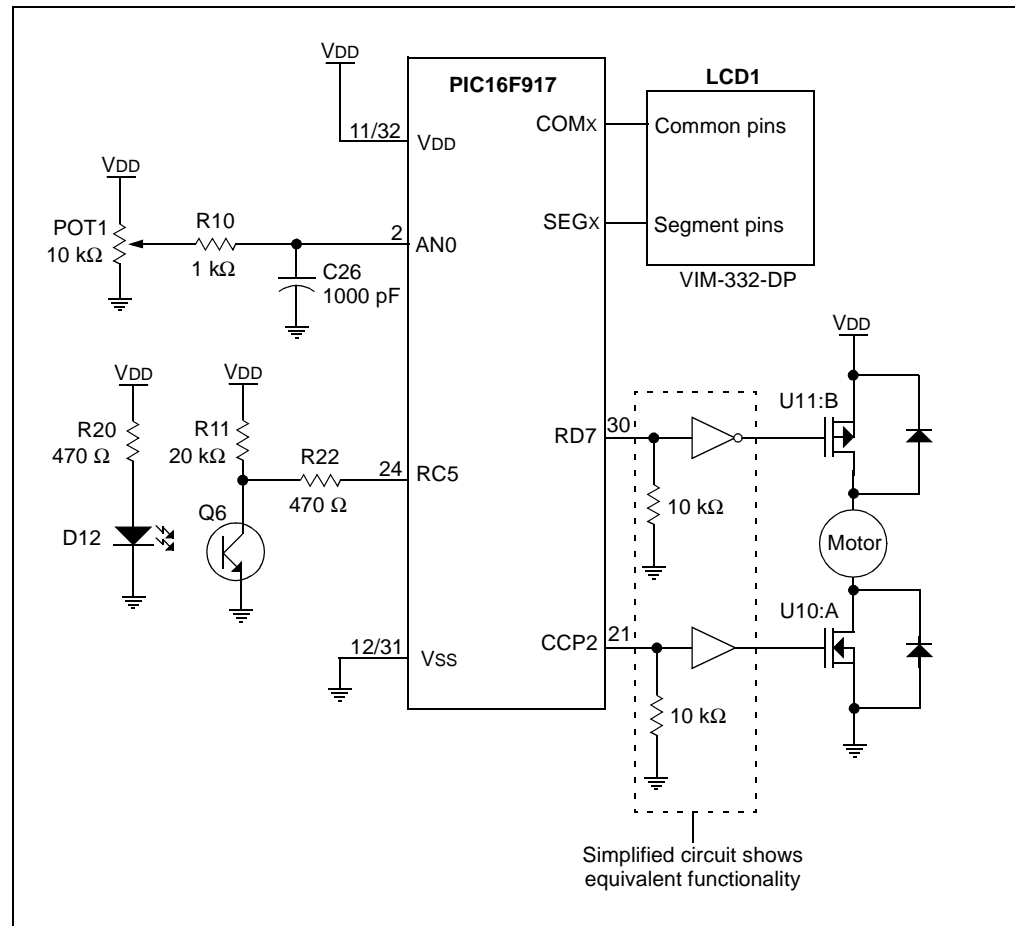

## Instructions

Use POT1 to adjust the speed of the motor. Turn the potentiometer counter-clockwise to reduce speed; turn it clockwise to increase motor speed. Multiply the LCD display by 1000 to obtain speed in RPM.

## Discussion

With the CCP module operating with 8 bits of resolution, the module can output a PWM signal at a frequency of 31.2 kHz. This is sufficiently high frequency that motor whine is outside of the audible frequency for humans. This is especially important in applications where the motor may turn at slow speeds.

Using an optical sensor to gather feedback from a motor is an integral part of many mechatronic systems. Some systems require a constant speed over varying loads. An optical encoder is similar to the optical interrupter circuit used in this project. The difference is that an optical encoder uses more than one optical sensor (as many as four) to deduce speed and shaft position.

**Note:** The optical interrupter circuit is susceptible to interference from outside infrared light sources (i.e., incandescent lights, sunlight, etc.). It may be necessary to cover the optical sensor to obtain an accurate reading.

## 2.3.6 Project 6: Brushed DC Speed Control with Back EMF Feedback

Project 5 uses an optical encoder to provide motor speed feedback. In this project, another form of speed measurement will be explored, Back Electromotive Force (Back EMF). You may be aware that a brushed DC motor, when turned by hand, will produce voltage at its leads, becoming a generator. When a brushed DC motor is being driven, and then the drive voltage is removed for a brief amount of time, the voltage generated by the inertia of the motor will be proportional to its speed. This voltage is the Back EMF.

### Objectives

1. Effectively read Back EMF using the on-board Analog-to-Digital Converter.
2. Interpret the Back EMF into a speed for the motor.

### Applicable Technical Documents

Low-Cost Bidirectional Brushed DC Motor Control Using the PIC16F684 Application Note, AN893 (DS00893)

### Jumper Configuration

- RD7 (J10) to P1 (J1)
- CCP2 (J10) to N2 (J1)
- AN0 (J13) to POT1 (J4)
- AN1 (J13) to BACK EMF (J16)
- Attach the motor leads to DRIVE1 (P9) and DRIVE2 (P10).
- J2 and J3 should be unpopulated.
- Connect the right and center pins of JP8 using a shunt.

FIGURE 2-12: PROJECT 6: JUMPER DIAGRAM


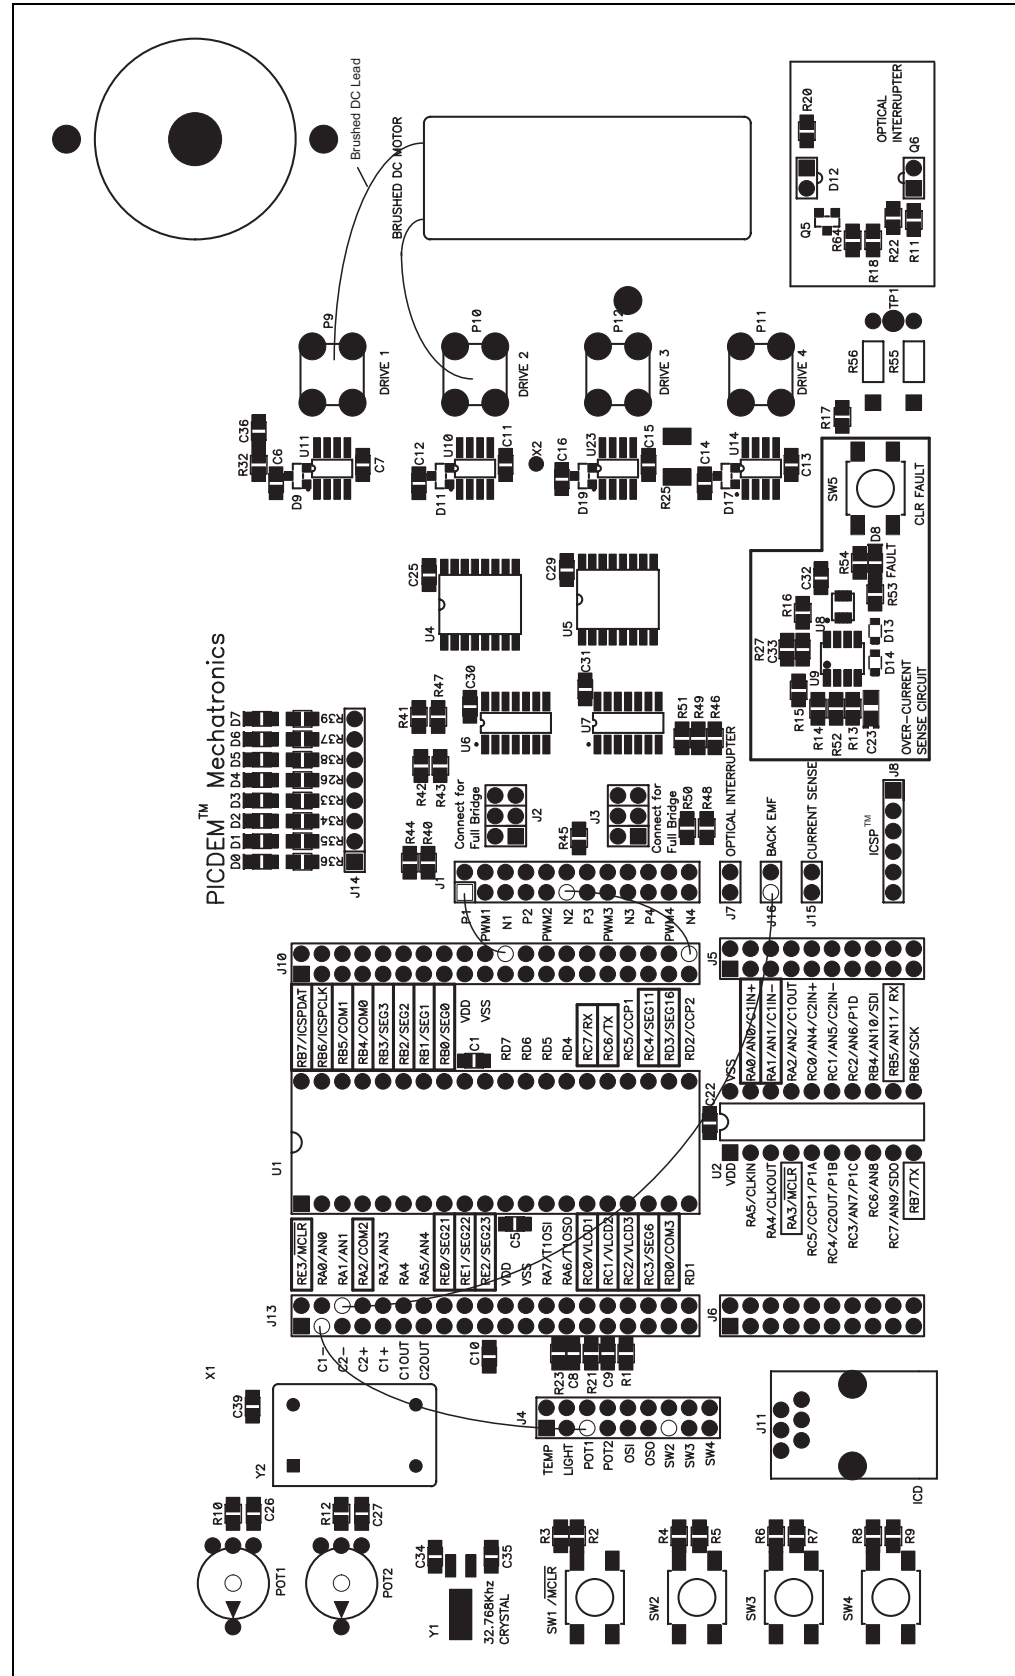


FIGURE 2-13: PROJECT 6: SCHEMATIC

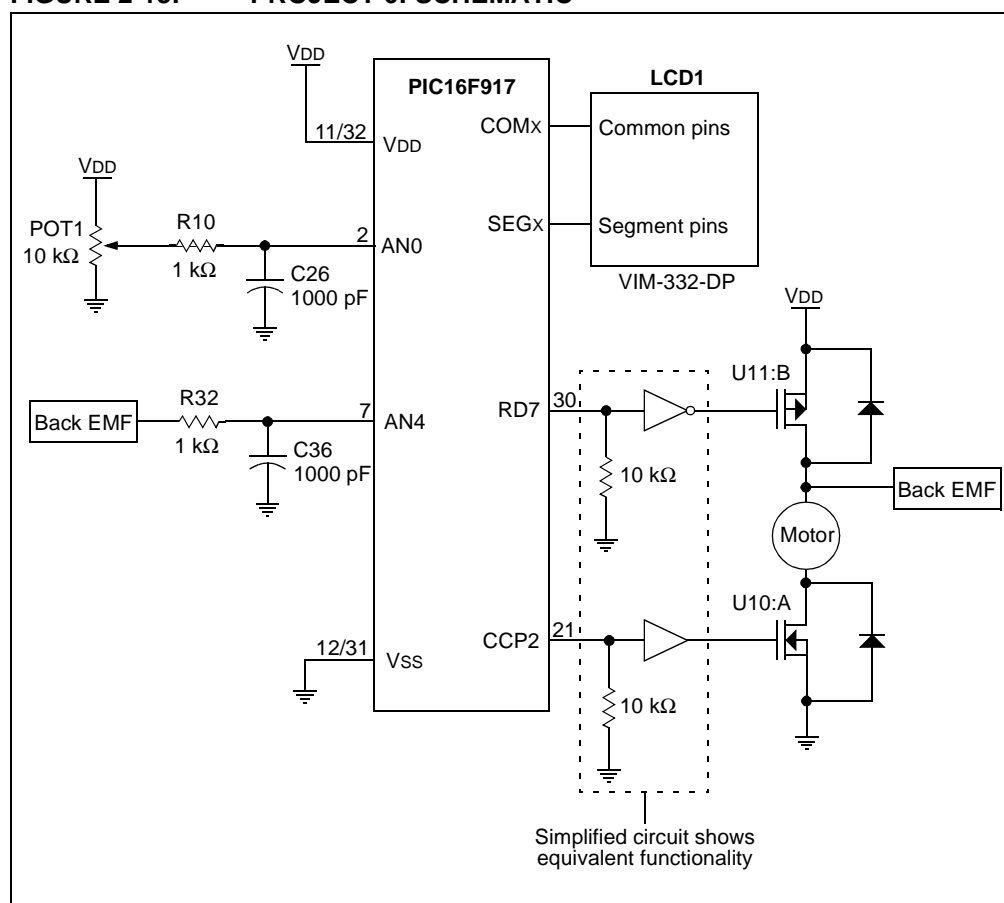

## Instructions

POT1 adjusts the speed of the motor. Set POT1 at 100% to run the motor at full speed. The speed indicated on the LCD should be similar to the speed shown in Project 5. Next, run the motor at half speed by setting POT1 to 50% and do the comparison again.

**Note:** Different motors have different speed characteristics. The motor used at the time this manual was written may be different from the motor shipped with your PICDEM Mechatronics Demo Board. Verify that the motor data sheet included on the CD-ROM matches the motor on the board. If they are different, go to Microchip's web site for updates to this project.

## Discussion

Back EMF is typically not as accurate as speed feedback from an optical encoder. However, in many applications the accuracy does not have to be very precise and measuring Back EMF is more cost effective than any other speed feedback mechanism.

## 2.3.7 Project 7: Stepper Motor Control: Single Stepping, Half Stepping and Microstepping

This project demonstrates the various ways to drive a bipolar stepper motor. There are several ways to step a stepper motor, the most basic of which is single stepping, or moving the motor in one-step increments. If a motor is specified as a 7.5 degrees-per-step motor, then single stepping the motor will result in moving the shaft of the motor 7.5 degrees per step. Half stepping the same motor would result in a 3.75 degrees step.

Torque and current are linearly related for a stepper motor. Therefore, if two sinusoidal currents are applied to the windings, offset by a 90 degree phase shift relative to one another, then the stepper motor will have constant torque as it turns. This results in a very smooth rotation of the shaft. Applying current to the windings in this way is referred to as sine-cosine microstepping.

### Objectives

1. Single-step a stepping motor.
2. Half-step the motor.
3. Micro-step the motor.

### Applicable Technical Documents

Stepping Motor Fundamentals Application Note, AN907 (DS00907)

Stepper Motor Control Using the PIC16F684 Application Note, AN906 (DS00906)

### Jumper Configuration

- AN0 (J13) to POT1 (J4)
- RA4 (J13) to SW2 (J4)
- RD7 (J10) to P1 (J1)
- RD6 (J10) to P2 (J1)
- RD5 (J10) to P3 (J1)
- RD4 (J10) to P4 (J1)
- CCP1 (J10) to PWM1 (J1)
- CCP2 (J10) to PWM3 (J1)
- Place three shunts (two pin jumpers) vertically on J2 where it is labeled "Connect for Full-Bridge".
- Place three shunts (two pin jumpers) vertically on J3 where it is labeled "Connect for Full-Bridge".
- Connect the BROWN lead of the stepper motor to Drive 1 (P9).
- Connect the ORANGE lead of the stepper motor to Drive 2 (P10).
- Connect the RED lead of the stepper motor to Drive 3 (P12).
- Connect the YELLOW lead of the stepper motor to Drive 4 (P11).
- Connect the right and center pins of JP8 using a shunt.

FIGURE 2-14: PROJECT 7: JUMPER DIAGRAM


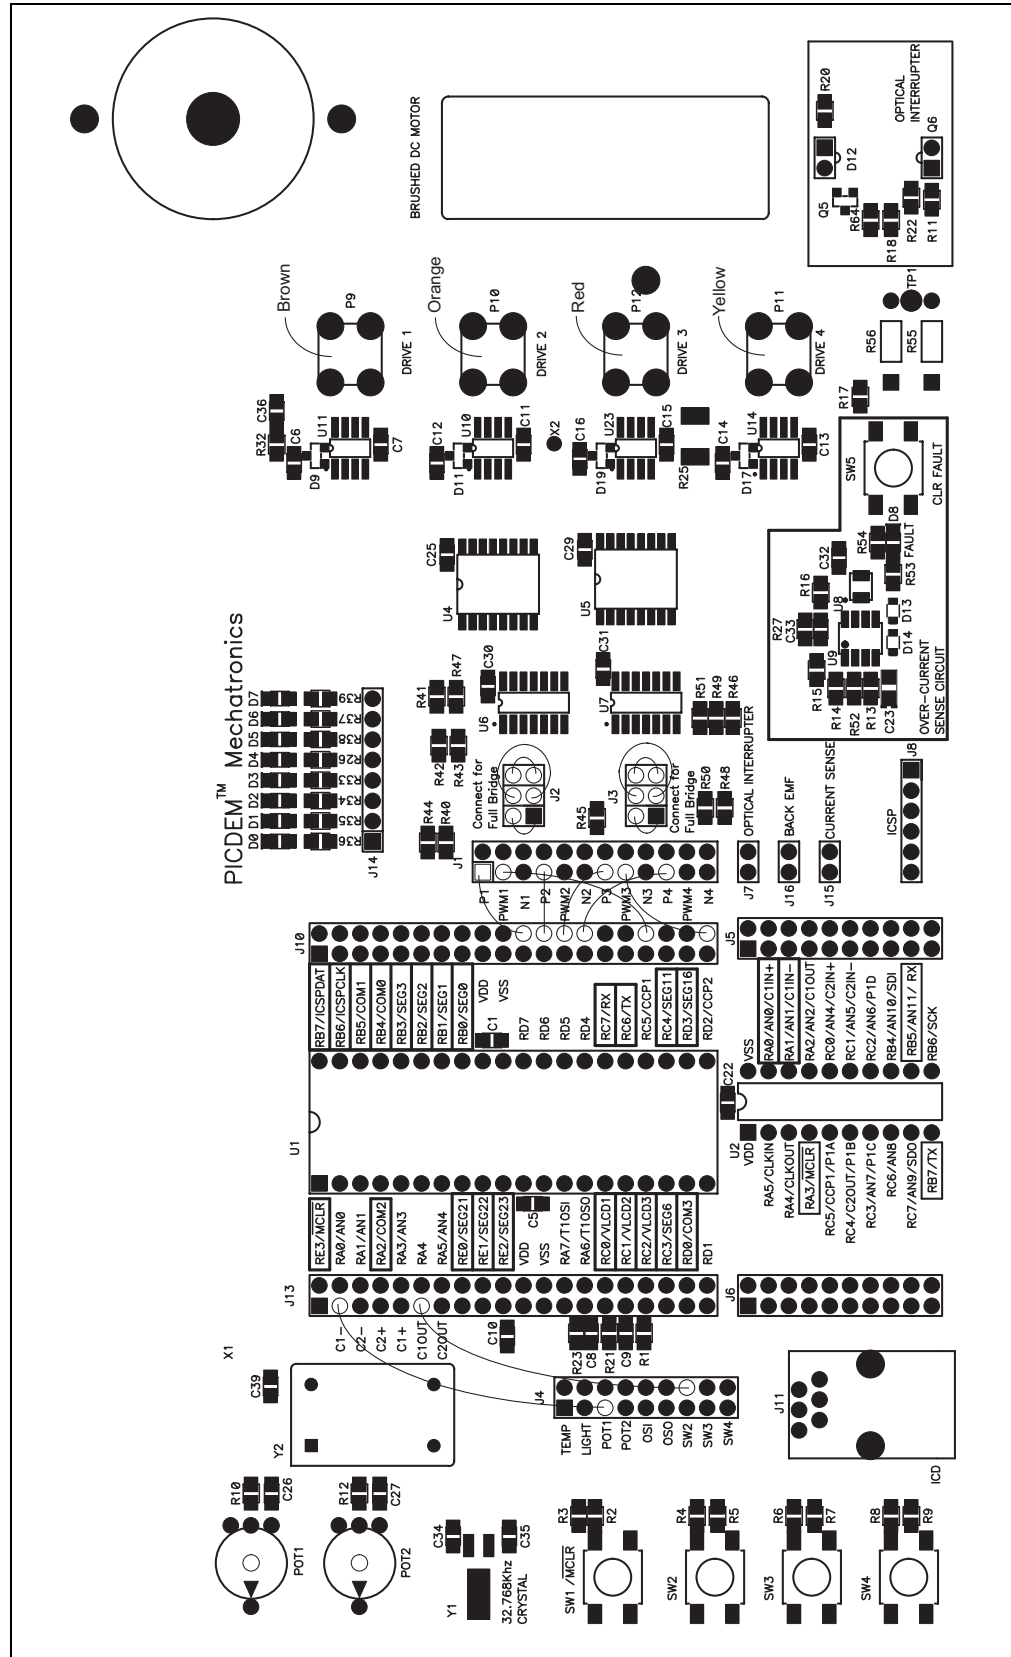




FIGURE 2-15: PROJECT 7: SCHEMATIC

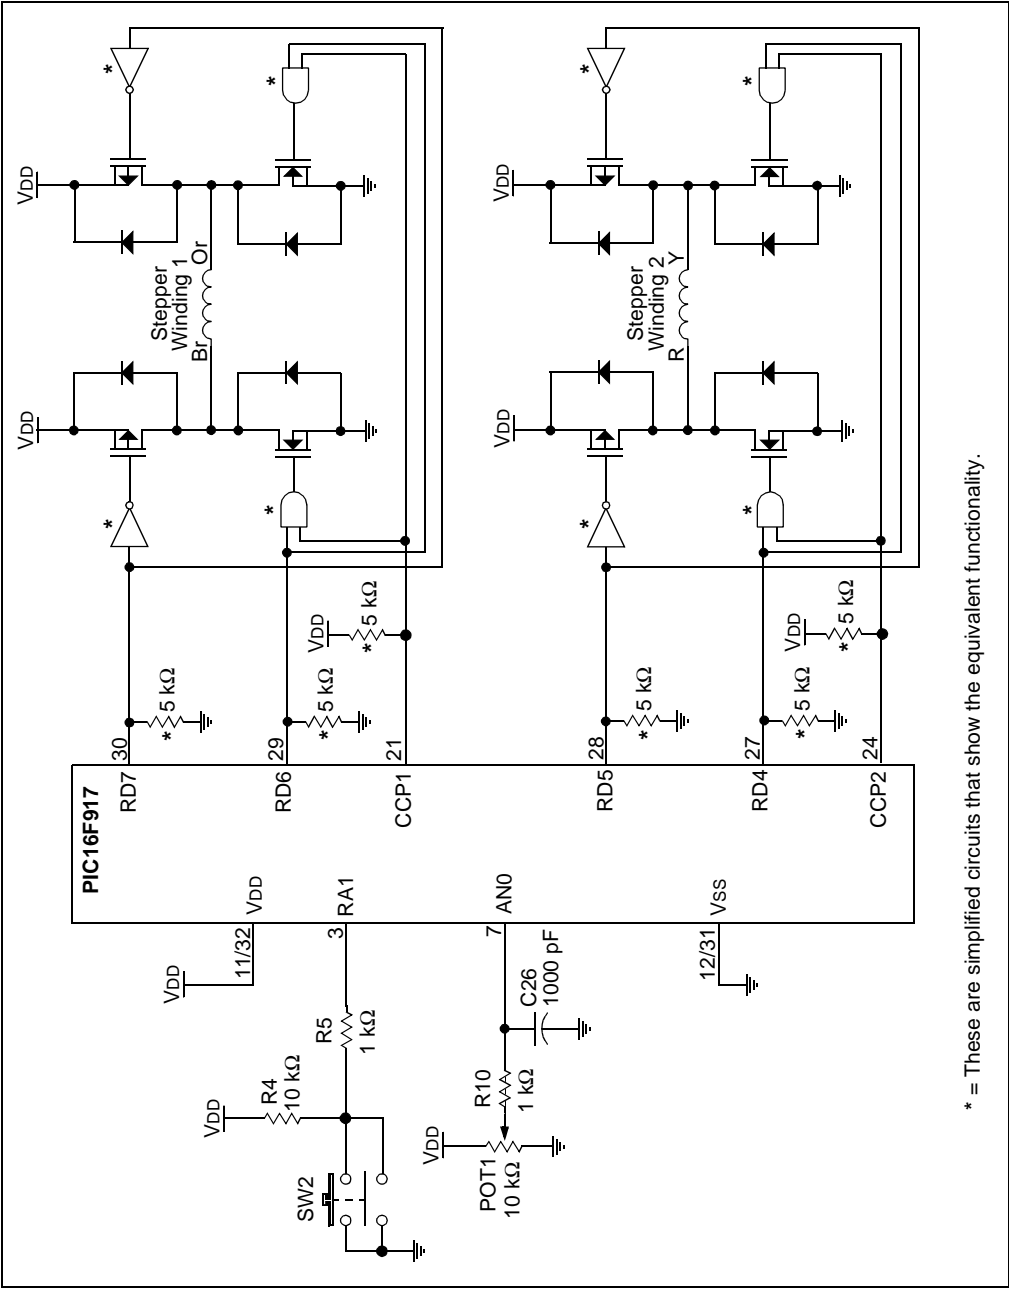

## Instructions

Adjusting POT1 varies the speed of the motor. Toggle between single stepping, half stepping, and microstepping modes by pressing SW2. At low speeds, the motor should noticeably step in single stepping and half stepping modes. The movement will be quite jerky in both modes, though to a lesser extent in the half stepping mode. In microstepping mode, the jerky motion should be virtually eliminated.

## Discussion

Stepper motors are used in many positioning applications. For example, ink jet printers and smaller CNC machines employ stepper motors. Stepper motors are ideal for these applications because, as long as they are not overloaded, the distance a stepper motor moves is always known. Stepper motors are also brushless, which makes them more reliable than brushed motors. Finally, stepper motors are very responsive to starting and stopping and will produce the highest torque at low speeds.

Half stepping is used to give a stepping motor two times its rated step resolution. However, there is a word of caution. A stepper motor is typically not rated to have more than one winding energized at a time. As a result, the motor will heat up if both windings are energized at the rated voltage of the motor. To offset this, when both windings are energized simultaneously, the average current to each winding should be 0.707 times the rated current.

Microstepping offers several advantages over single stepping and half stepping. First, torque is fairly constant between steps. This results in smoother rotation and decreased shaft oscillation. Secondly, a higher step resolution is achieved. This means a low-cost motor can be used in an application that would normally require a more expensive, higher resolution motor. Finally, the current in the motor windings is being controlled in a way that prevents the motor from running outside its rated current, thereby eliminating the excess heat associated with half stepping. The drawback to microstepping is that the drive circuitry is more complex.

## 2.3.8 Project 8: PC Interface Using the USART

Communicating with the serial port on a PC is a very useful tool. Applications include a piece of test equipment that needs to interface to a PC or a design that uses the serial port during development to configure the device. In this project, the PIC16F917 will use the USART to receive commands from a PC application. Another notable feature to this project is that the firmware implements an auto-baud routine to sync up with the application.

### Objectives

1. Use the provided PIC<sup>®</sup> MCU Communicator GUI to manipulate the I/O on the PIC16F917.
2. Understand what an auto-baud routine entails.


### Applicable Technical Documents

Asynchronous Communications with the PICmicro<sup>®</sup> USART Application Note, AN774 (DS00774)


### Jumper Configuration

- Make sure there are no jumpers or shunts on JP2.
- RD7 (J10) to D0 (J14)
- Connect a serial cable between the board and PC

**FIGURE 2-16: PROJECT 8: JUMPER DIAGRAM**

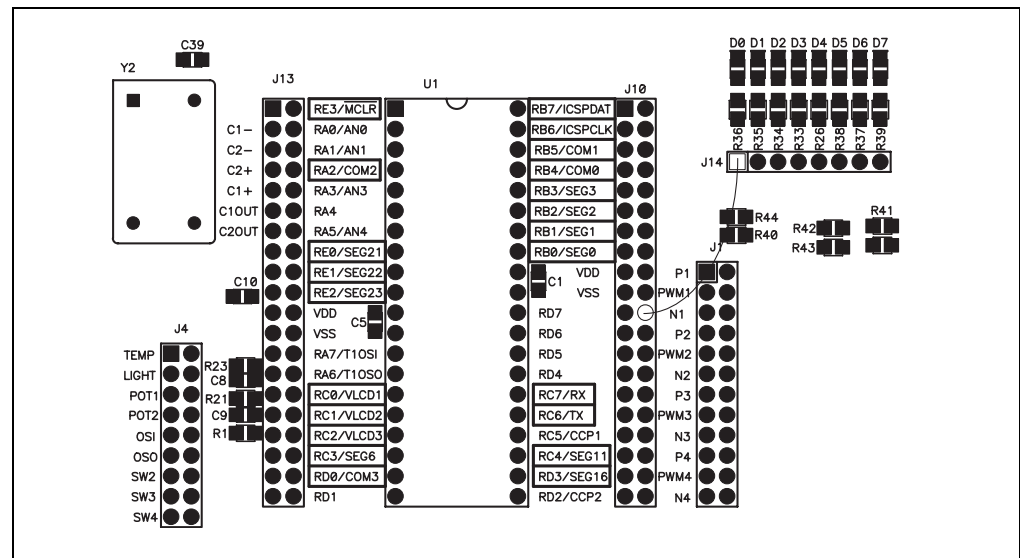


**FIGURE 2-17: PROJECT 8: SCHEMATIC**

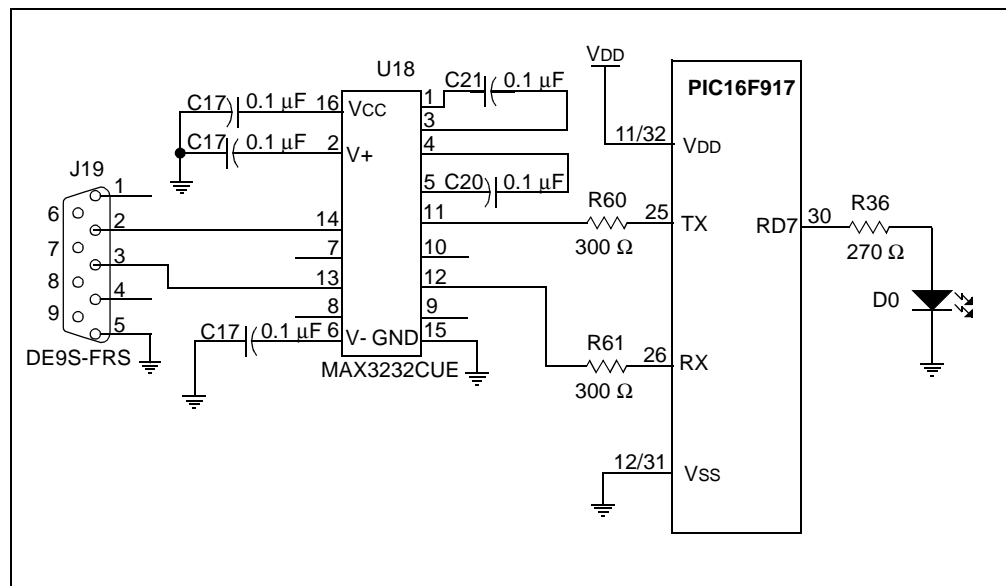

## Instructions

Locate the PIC® MCU Communicator GUI in the PIC MCU Communicator folder in Project 8 on the CD-ROM. Choose the Comm Port and baud rate. Then click **“Open Comm.”** Enter “TRISD” in the top Label text field. Enter “088” into the top Addr text field. Check the top Hex box. Enter “7F” into the Data field. In the box labeled “Bit Control” enter “PORTD” in the label text field. Enter “008” in the Addr field. Finally, toggle bit 7 using the “T” button under that bit. The LED on your board should toggle on and off. See Figure 2-18.

**FIGURE 2-18: PIC® MCU COMMUNICATOR INTERFACE**

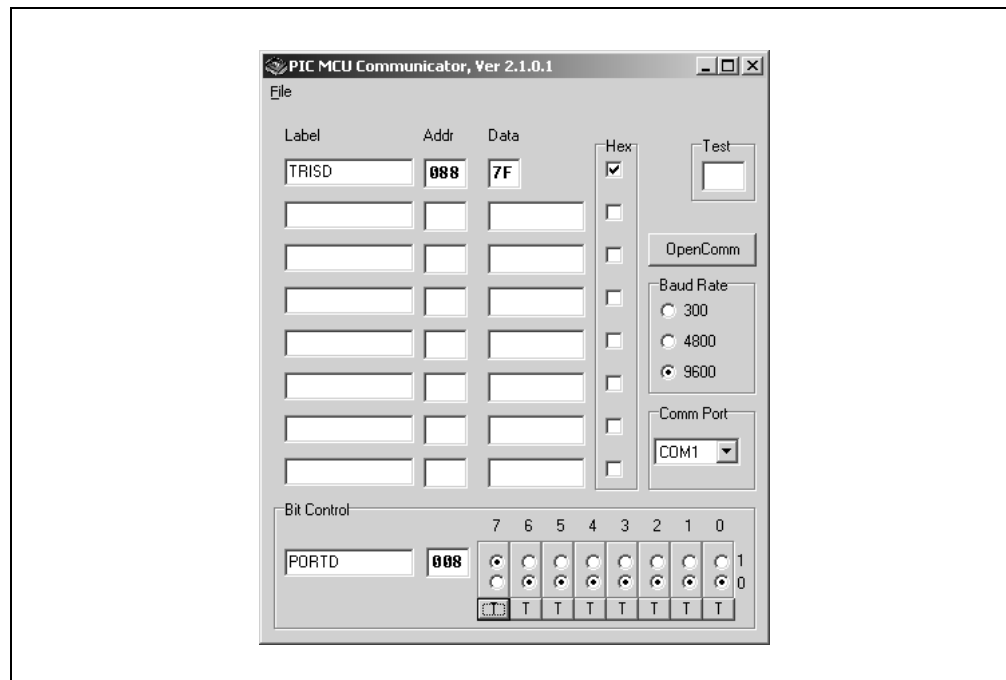

## Discussion

The firmware for this project implements RS-232 communication between the PC and PIC16F917. The USART is used to perform this communication. If a crystal oscillator were used as the clock source for the PIC16F917, auto-baud would not be necessary. However, because the PIC16F917 is using the internal RC oscillator, it is necessary to perform auto-baud. Auto-baud refers to sending out a known character from the PC, the MCU measures the time it takes to receive the character, interprets this time into bit width, and then sets up the baud rate registers accordingly for the USART. This method allows the RS-232 communication to be free from errors on different microcontrollers and over temperature variations.

The PIC MCU Communicator GUI is included in this project as an example GUI. However, it is also a great tool for debugging. Experiment with using the GUI to setup other peripherals on the microcontroller.

## 2.3.9 Project 9: Brushed DC Motor Control Using the ECCP

This project is very similar to Project 5, only in this project, we are using the Enhanced Capture Compare PWM (ECCP) module in the PIC16F690 (see note). In PWM mode, the ECCP module has four outputs for directly driving an H-bridge circuit. This makes implementing bidirectional speed control of a brushed DC motor a simple task.

**Note:** To change microcontrollers, disconnect power from the board. Remove the PIC16F917 microcontroller from U1 and install the PIC16F690 in U2. Reconnect power to the board.

### Objectives

1. Configure the ECCP module for Full-Bridge mode.
2. Change motor directions.

### Applicable Technical Documents

Low-Cost Bidirectional Brushed DC Motor Control Using the PIC16F684 Application Note, AN893 (DS00893)

### Jumper Configuration

- P1A (J6) to P1 (J1)
- P1B (J6) to N1 (J1)
- P1C (J6) to P2 (J1)
- P1D (J5) to N2 (J1)
- AN2 (J5) to POT1 (J4)
- RA5 (J6) to SW2 (J4)
- Make sure there are no shunts (two pin jumpers) on J2.
- Attach the brushed DC motor leads to DRIVE1 (P9) and DRIVE2 (P10).
- Connect the right and center pins of JP8 using a shunt.

FIGURE 2-19: PROJECT 9: JUMPER DIAGRAM


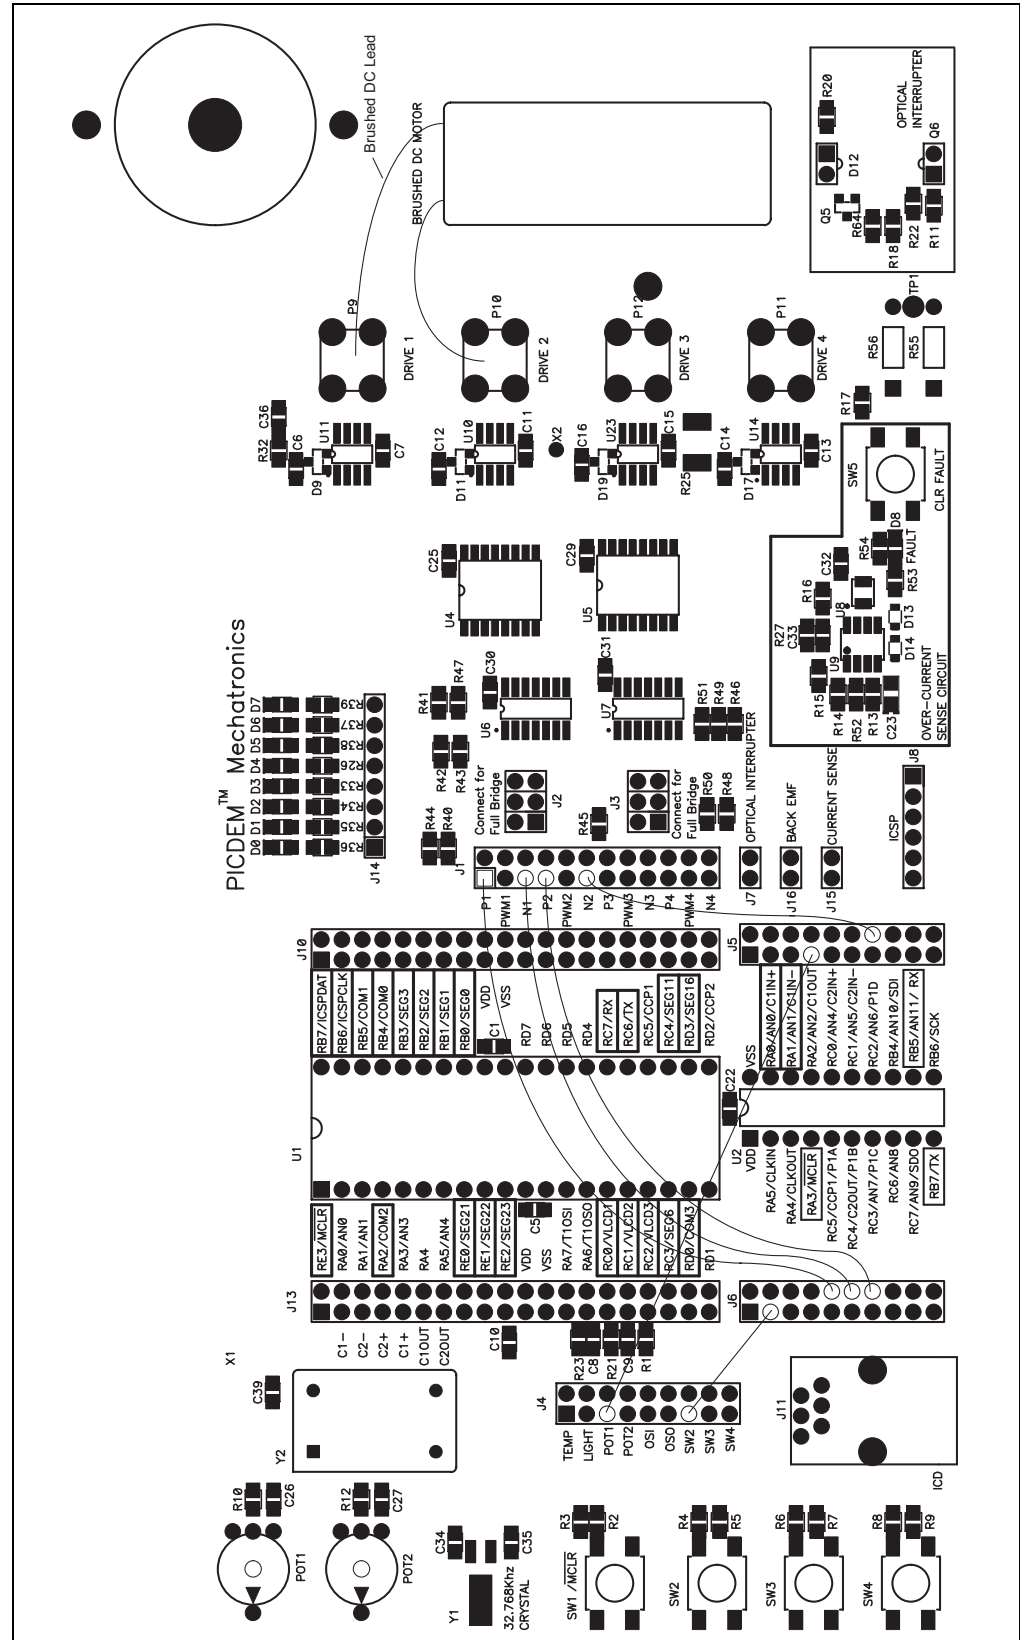


FIGURE 2-20: PROJECT 9: SCHEMATIC



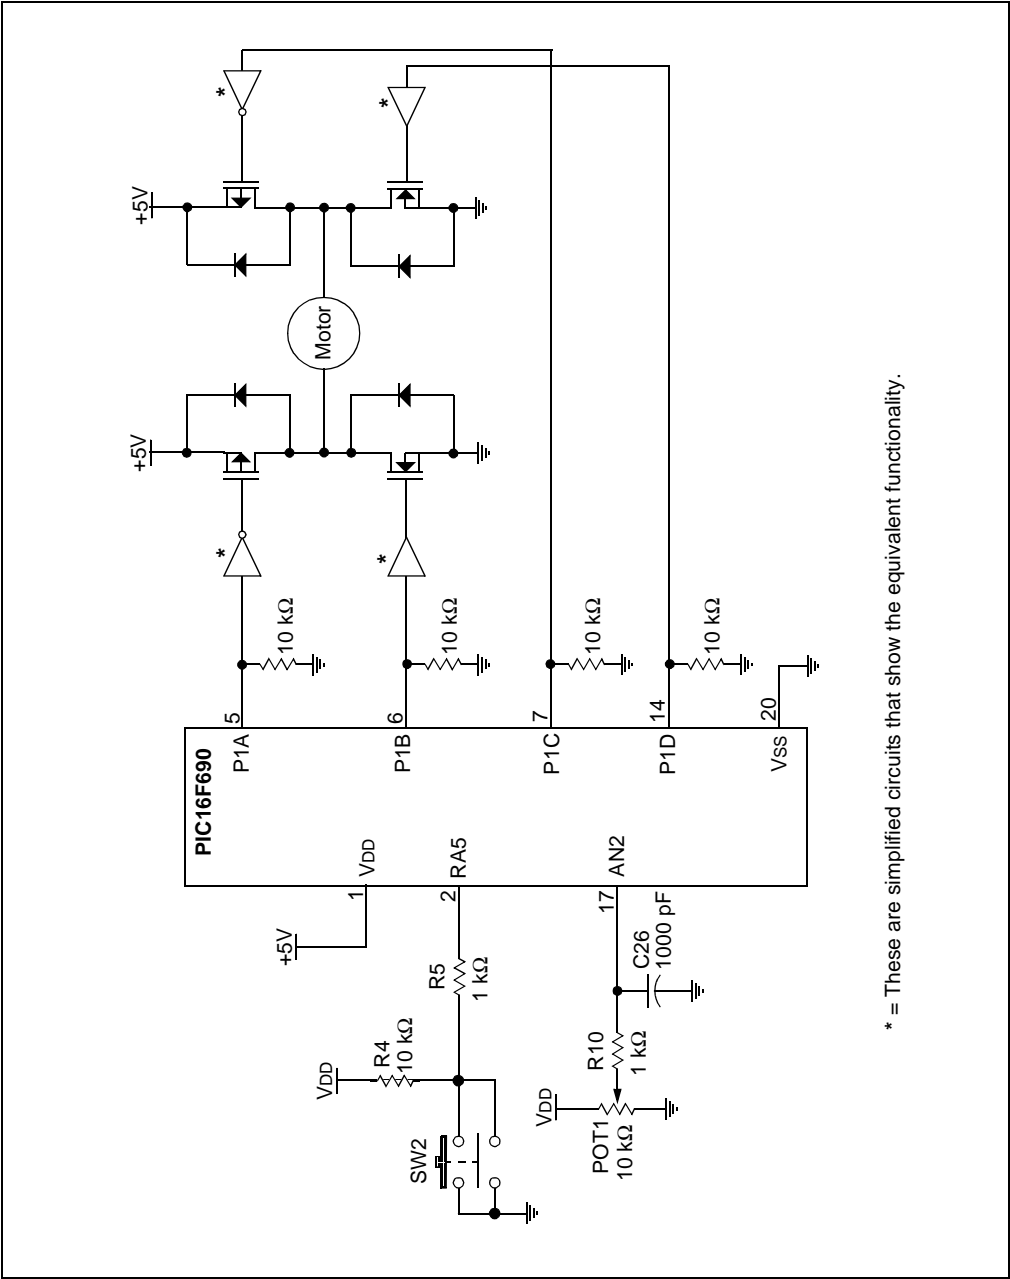

## Instructions

Use POT1 to adjust the speed of the motor. SW2 toggles between the following four modes of operation:

- Motor Off
- Forward
- Motor Off
- Reverse

## Discussion

The ECCP module is ideal for driving a full-bridge circuit. Dead-band Delay Control and Automatic Shutdown are some of the other features of the ECCP module when configured in PWM mode. Dead-band Delay Control allows you to control when the MOSFETs in the full-bridge circuit are turned on and off, in relation to one another. This is done in order to automatically account for the MOSFET turn-on and turn-off times. Automatic Shutdown allows you to define the shutdown state of the ECCP when a shutdown event occurs.

# PICDEM™ Mechatronics Demo Board User's Guide

---

NOTES:

---

## Chapter 3. Troubleshooting

---

### 3.1 INTRODUCTION

This chapter describes common problems associated with using the PICDEM™ Mechatronics and steps on how to resolve them.

### 3.2 COMMON PROBLEMS

#### 3.2.1 VDD Is Below 5V

The board must be powered by one of the following:

- A 9-12 VDC source at the screw terminals (P20 and P21)
- A 9-12 VDC source at J9
- A 9 VDC battery
- A 5 VDC power source at TP2 and TP3

Supplying less than 9 VDC at J9 or the screw terminals will not allow the regulator (U3) to function properly causing VDD to be below 5 VDC.

#### 3.2.2 No Voltage On Drive Stage

There must be a two-pin shunt present on JP8 connecting the middle pin to +5 VDC or 9-12 VDC. This is the supply reference for the drive stage. If the FAULT LED (D8) is on, the drive stage is disabled. Press the **CLR FAULT** button (SW5) to enable the drive stage.

#### 3.2.3 FAULT LED Stays On Or Continues To Trip When SW5 Is Pressed

Verify that the motor is not drawing over 1.2 amps. Check the voltage at CURRENT SENSE (J15) before the FAULT LED turns on again. Voltage is equal to the current at J15, therefore, if the voltage is 1.2V or greater, the drive is drawing too much current or possibly shorted.

Verify the motor is being driven properly. The N-channel and P-channel MOSFETs on any given Drive (DRIVE 1, DRIVE 2, etc.) should not be turned on simultaneously. (See note).


J2 connects the MOSFET control lines for DRIVE 1 and DRIVE 2 and J3 connects the control lines for DRIVE 3 and DRIVE 4. If shunts are present on J2 and J3, verify that they are connected intentionally and not from a previous design.

<p><b>Note:</b> Hardware is in place to ensure the N-channel and P-channel MOSFETs on a given Drive are not turned on at the same time. However, if you are switching the N-channel MOSFET rapidly, it is possible for both MOSFETs to be on at the same time.</p>
--

## 3.2.4 Microcontroller Does Not Run After Programming By The ICD-2

When using the ICD-2 as a programmer, the microcontroller will not run unless you disconnect the ICD-2 or release the ICD-2 from Reset. Figure 3-1 shows the “Release From Reset” button.

**FIGURE 3-1: RELEASE FROM RESET BUTTON**

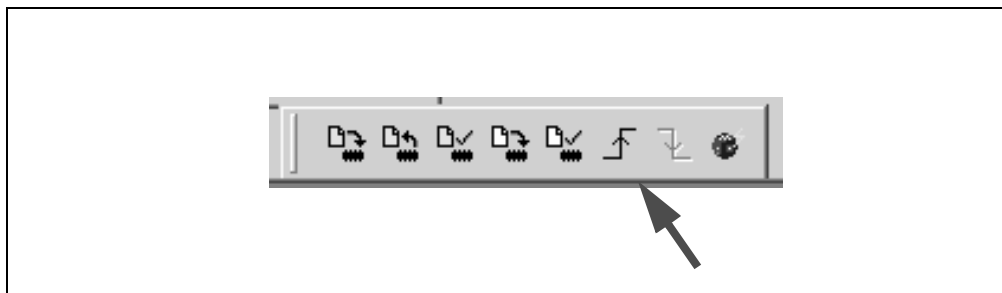

## 3.2.5 Back EMF At J16 Is Floating

Check that a Fault has not occurred by checking that the FAULT LED is off. Verify the Brushed DC motor is connected between DRIVE 1 and DRIVE 2. In order to measure Back EMF, DRIVE 1 must float and DRIVE 2 must be grounded (i.e., the N-channel MOSFET for Drive 2 is the only MOSFET turned on).

## 3.2.6 Board Is Non-Functional When Microcontrollers Are Installed In Both U1 And U2

Only one microcontroller should be installed on the board at any given time.

## 3.2.7 Optical Interrupter Is Not Providing The Expected Feedback

The optical interrupter circuit is susceptible to interference from outside infrared light sources (i.e., incandescent lights, sunlight, etc.). It may be necessary to block this source or turn off the light source when using the optical interrupter.

## 3.2.8 Serial Communication Does Not Appear To Be Working

If using the USART on the PIC16F690 or PIC16F917, note that the TX and RX pins are already connected. Make sure there is no shunt present on JP2.



# PICDEM™ MECHATRONICS DEMO BOARD USER'S GUIDE

---


## Appendix A. Hardware Schematics

---


### A.1 INTRODUCTION

This appendix contains the PICDEM™ Mechatronics Board Hardware Schematic Diagram.

**FIGURE A-1: PICDEM™ MECHATRONICS DEMO BOARD  
HARDWARE SCHEMATIC DIAGRAM (PAGE 1 OF 7)**

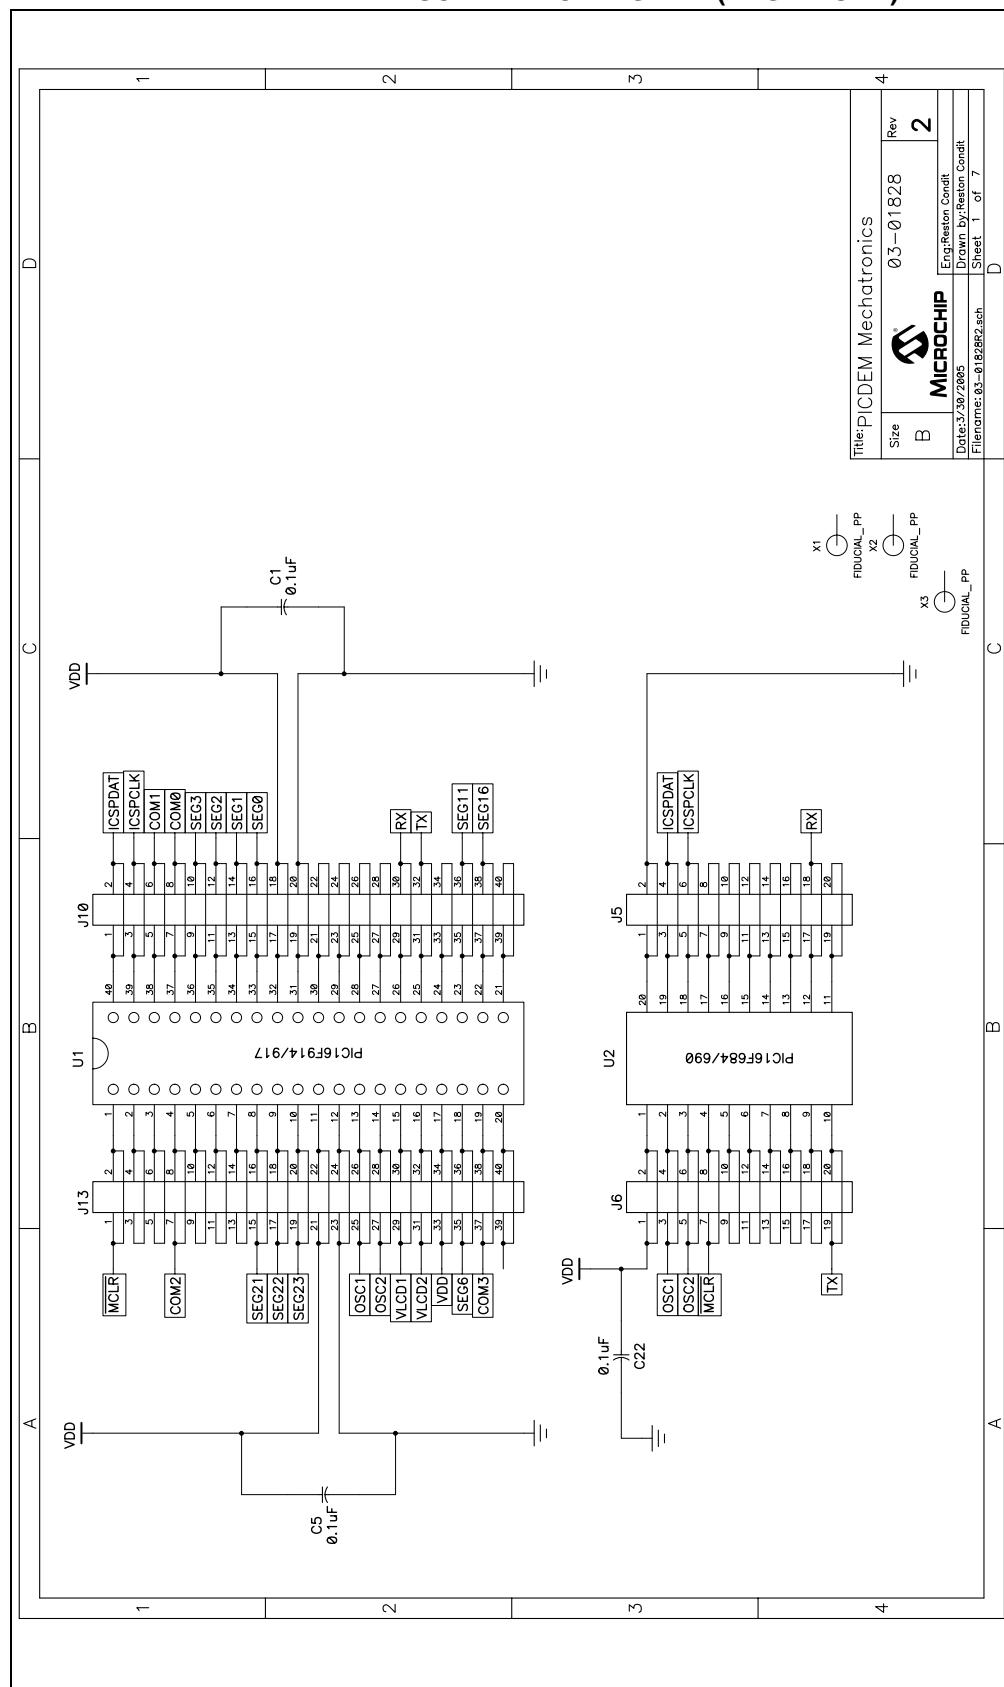


**FIGURE A-2: PICDEM™ MECHATRONICS DEMO BOARD  
HARDWARE SCHEMATIC DIAGRAM (PAGE 2 OF 7)**

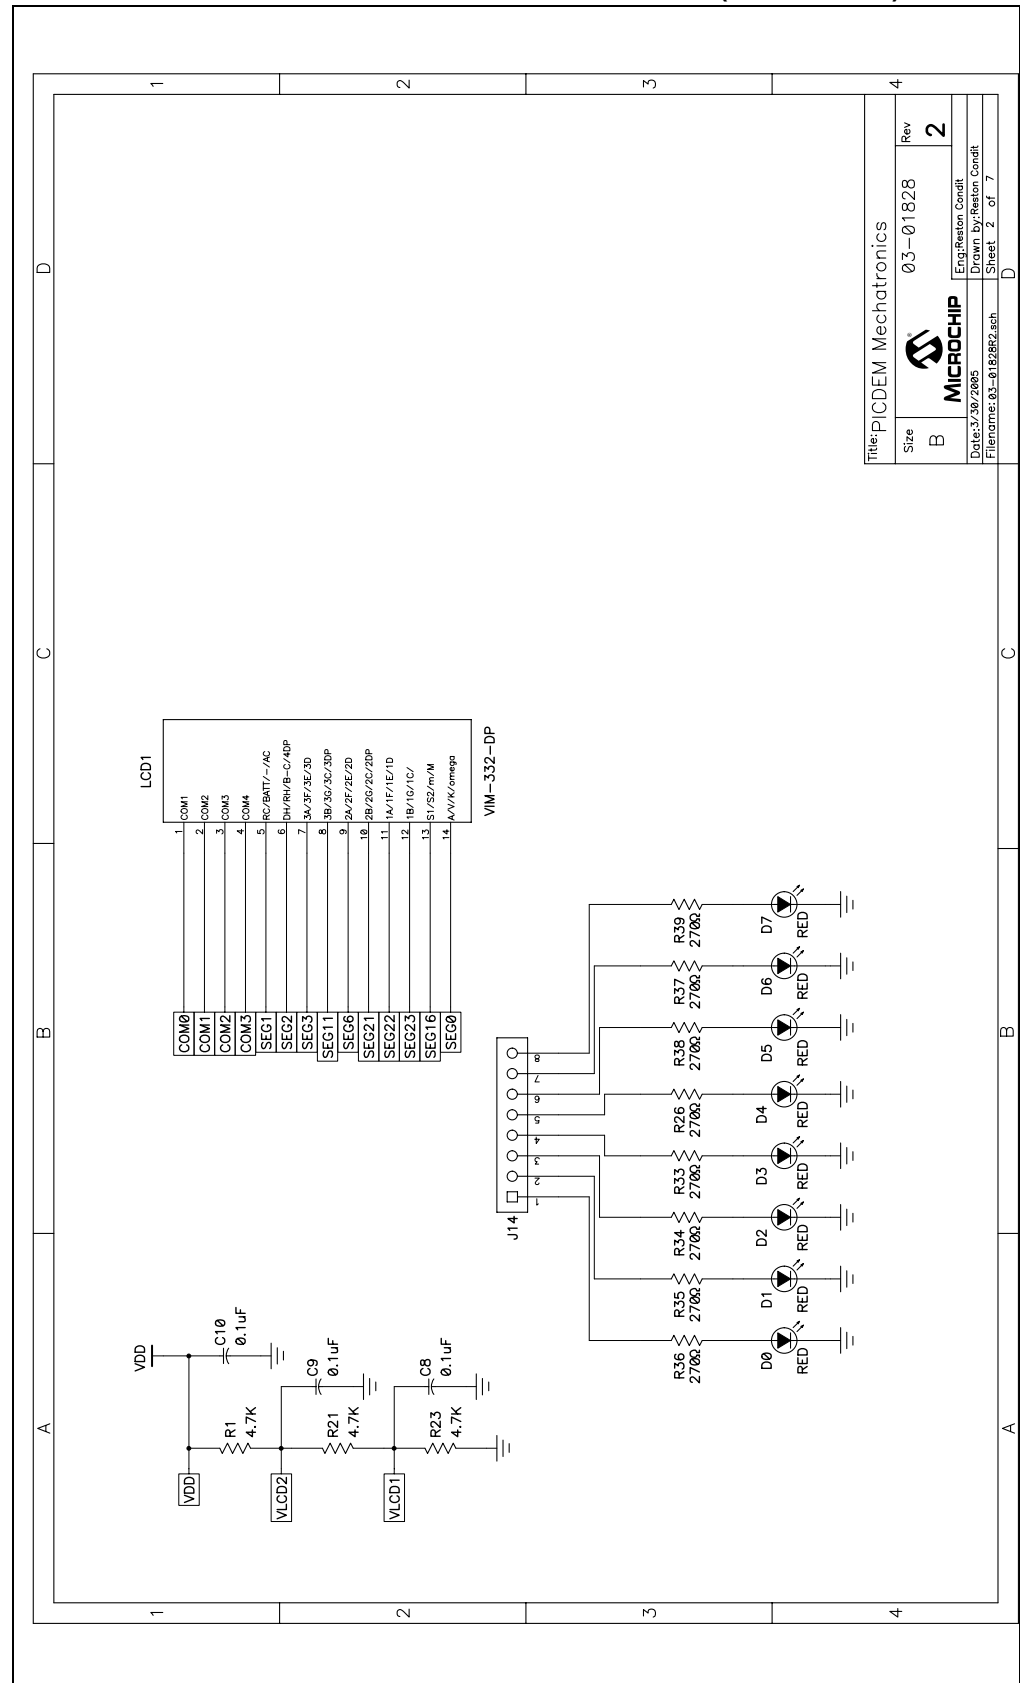


# PICDEM™ Mechatronics Demo Board User's Guide

FIGURE A-3: PICDEM™ MECHATRONICS DEMO BOARD  
HARDWARE SCHEMATIC DIAGRAM (PAGE 3 OF 7)

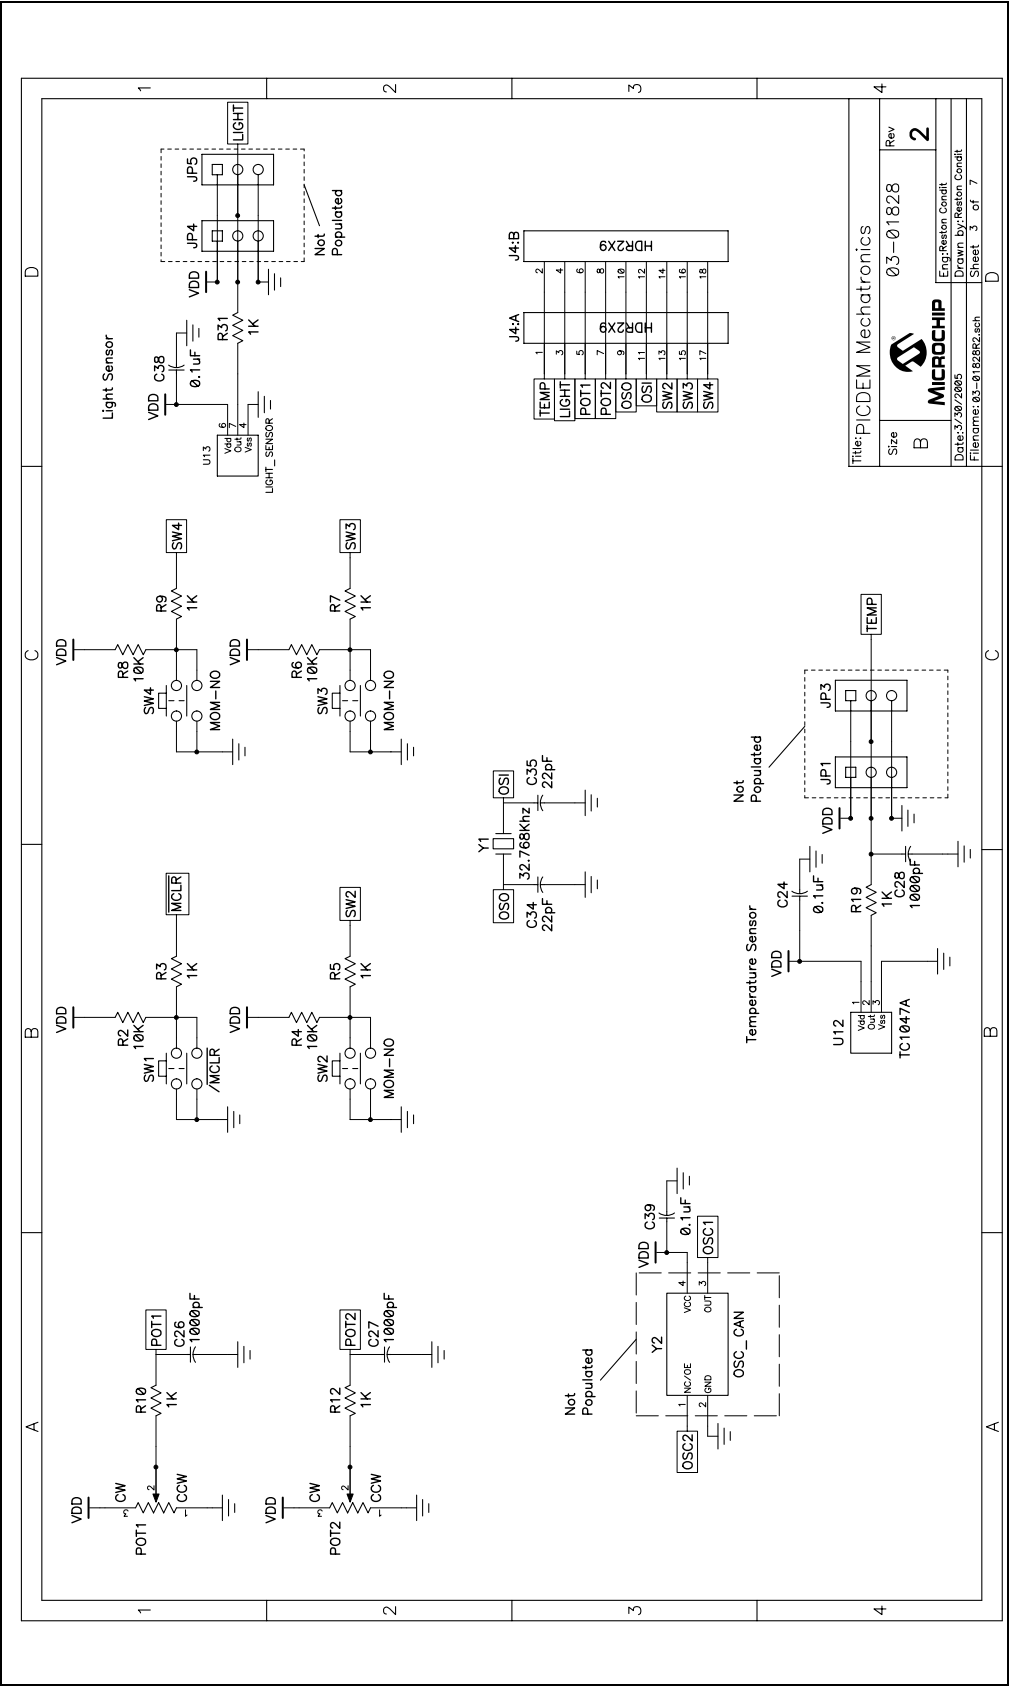




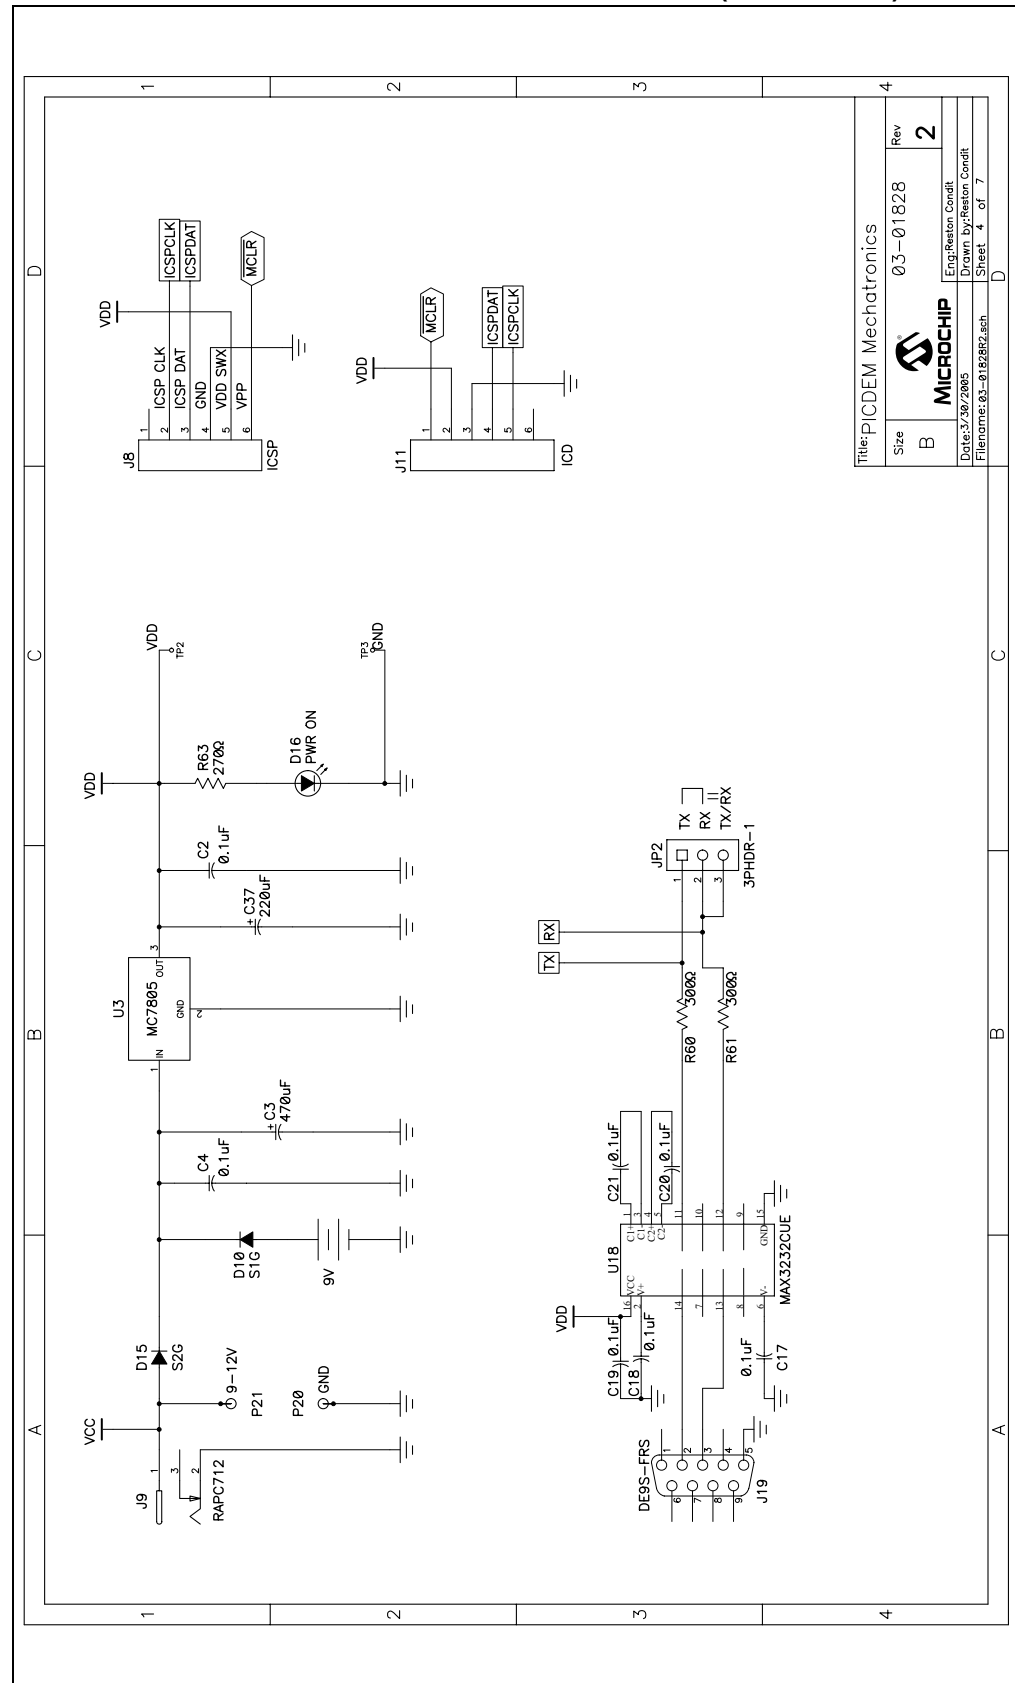


# PICDEM™ Mechatronics Demo Board User's Guide


FIGURE A-5: PICDEM™ MECHATRONICS DEMO BOARD  
HARDWARE SCHEMATIC DIAGRAM (PAGE 5 OF 7)

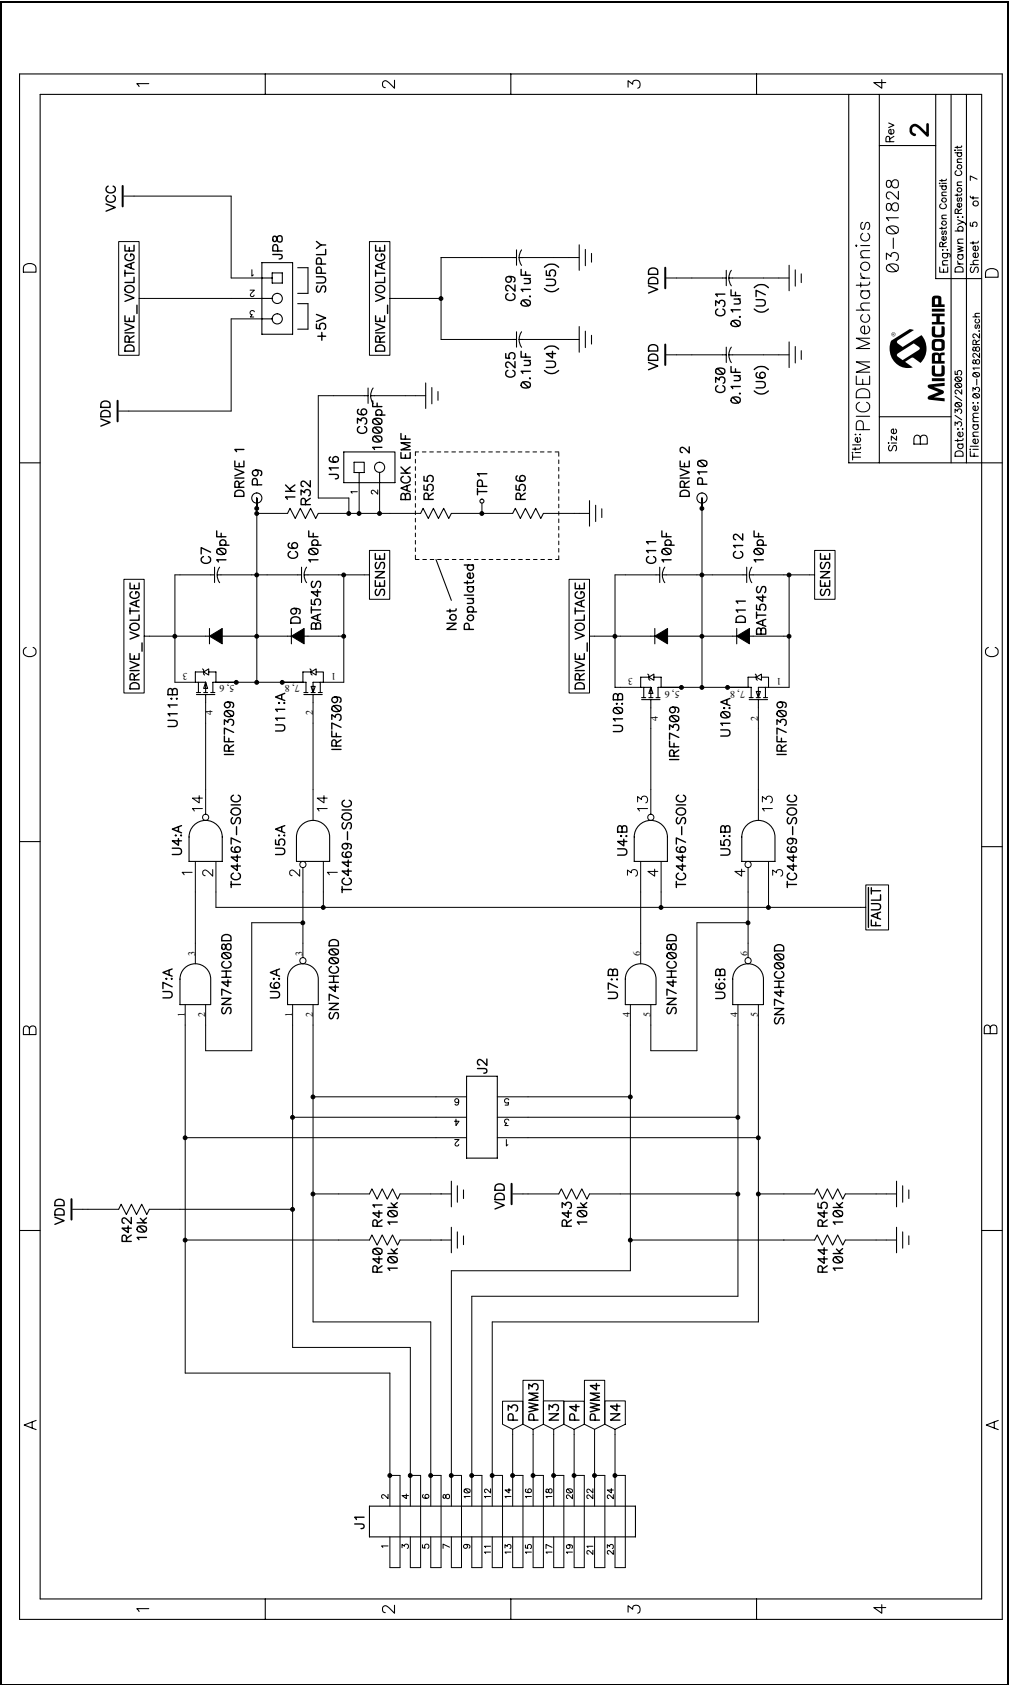

**FIGURE A-6: PICDEM™ MECHATRONICS DEMO BOARD  
HARDWARE SCHEMATIC DIAGRAM (PAGE 6 OF 7)**

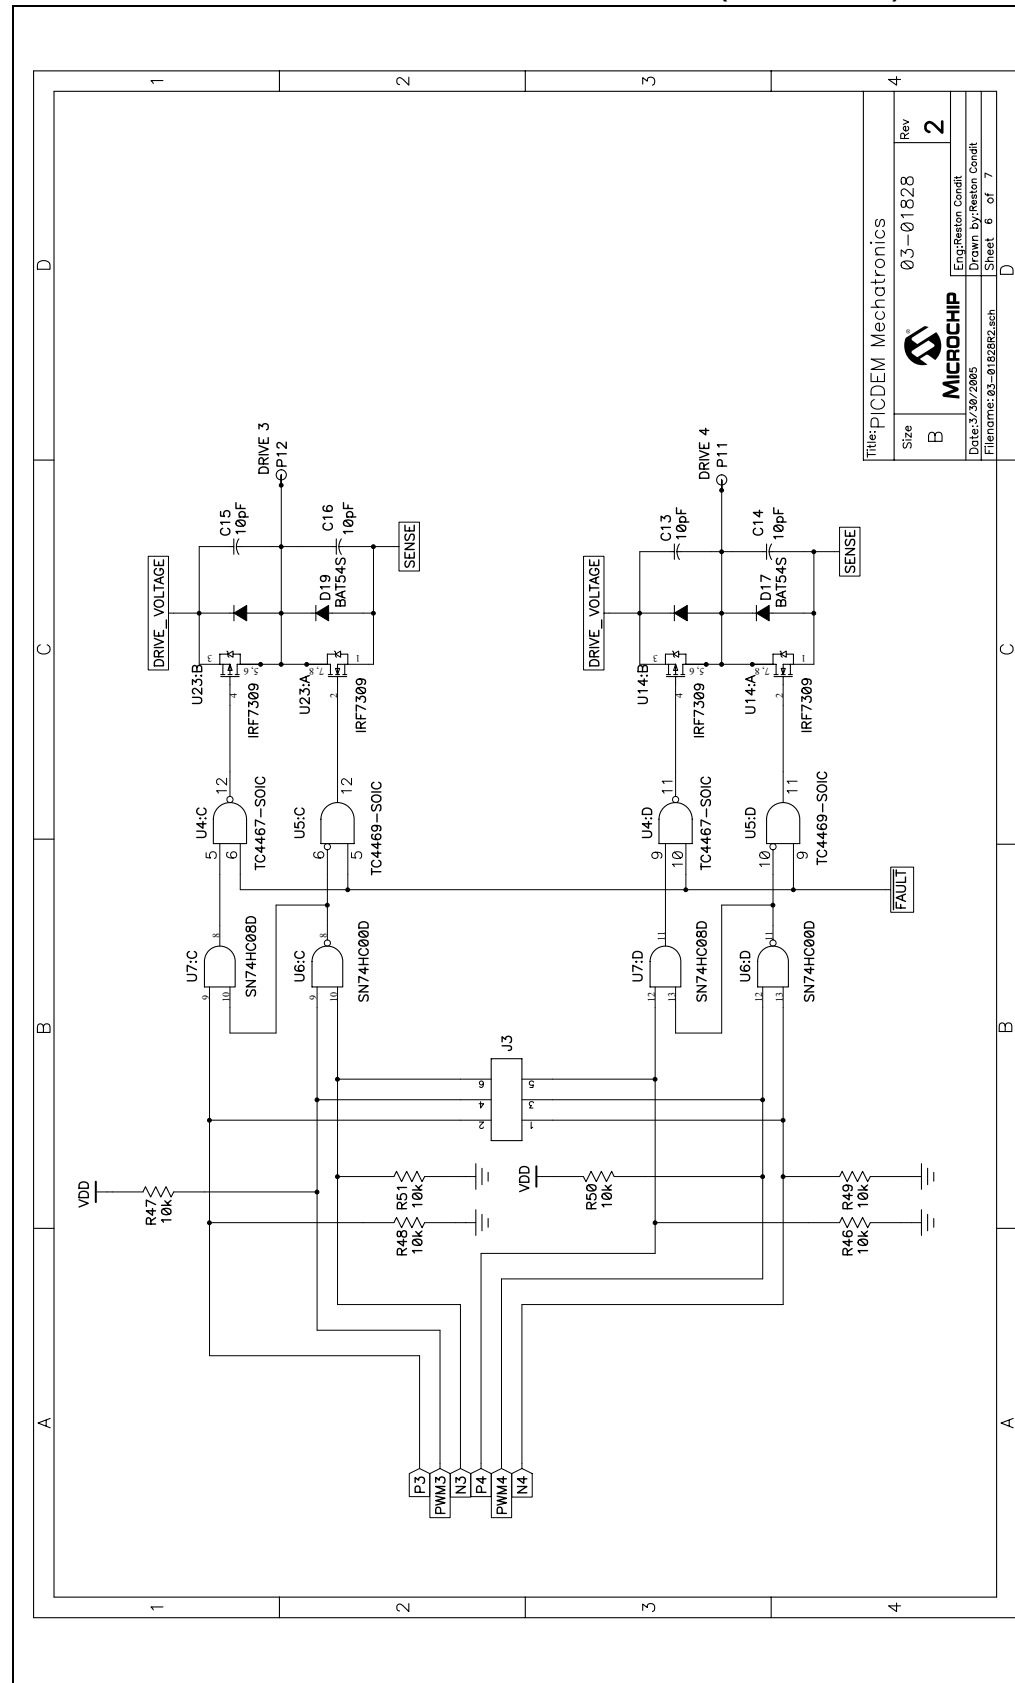

**FIGURE A-7: PICDEM™ MECHATRONICS DEMO BOARD  
HARDWARE SCHEMATIC DIAGRAM (PAGE 7 OF 7)**

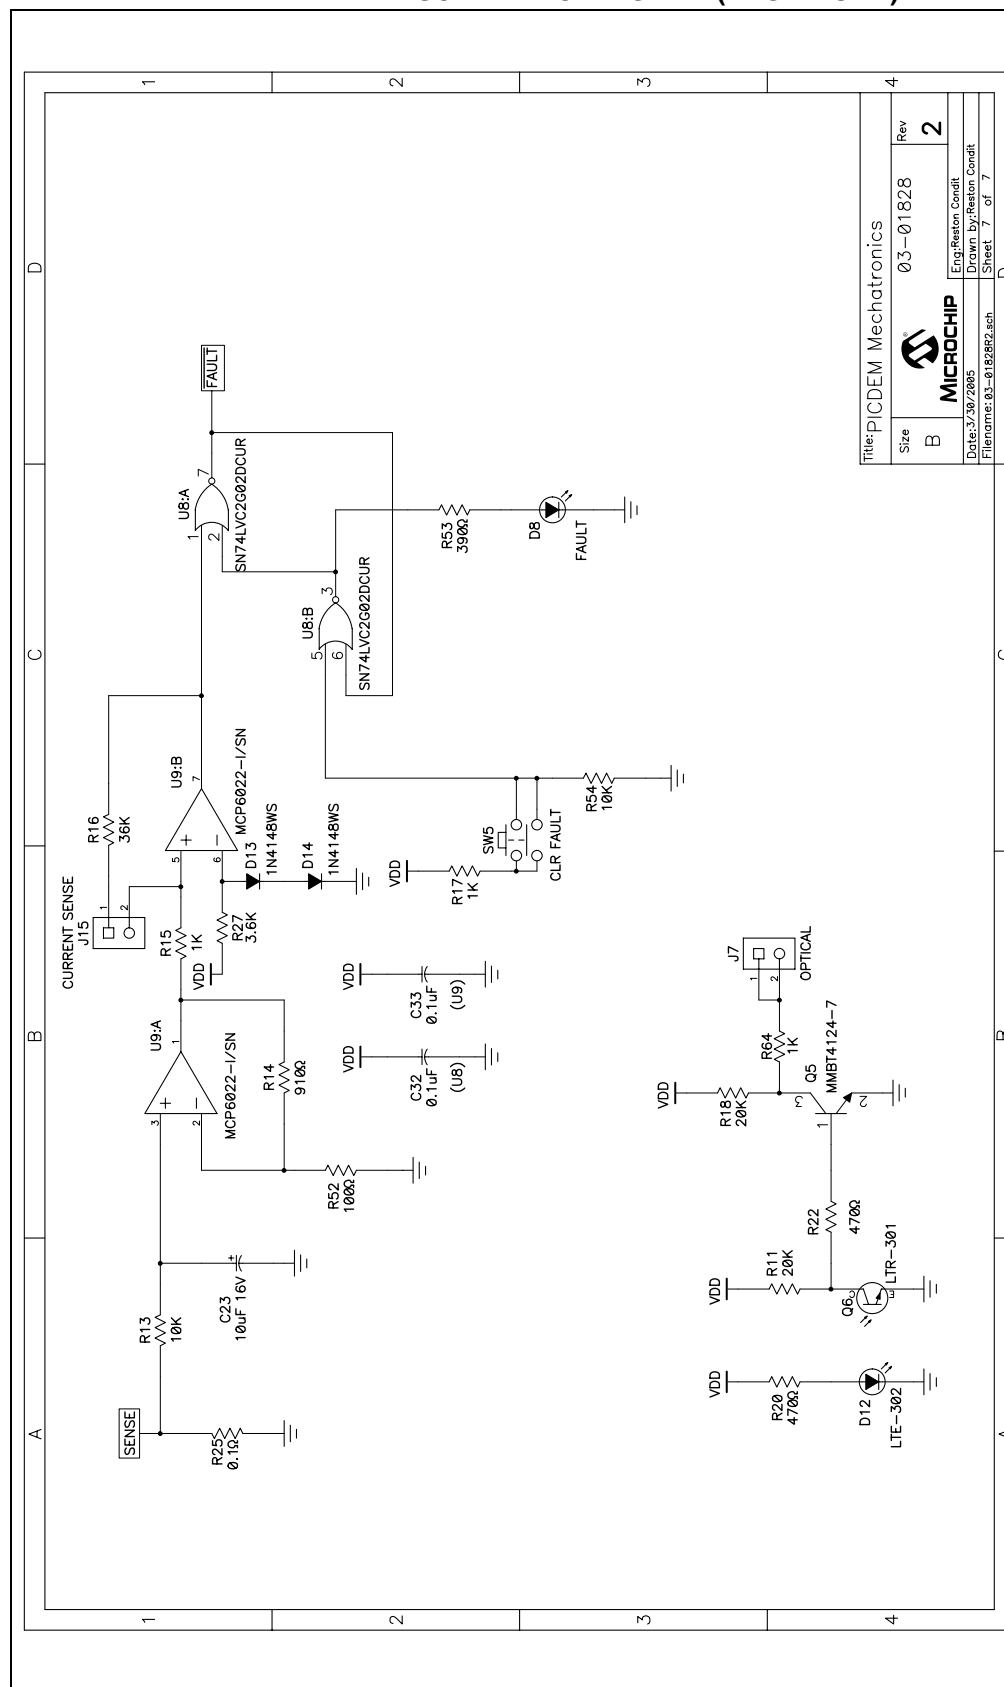



# PICDEM™ MECHATRONICS DEMO BOARD USER'S GUIDE

---

## Appendix B. LCD Segment Mapping Worksheet

---

### B.1 INTRODUCTION

This appendix contains the LCD Segment Mapping Worksheet.

# LCD Segment Mapping Worksheet

## APPENDIX B: LCD SEGMENT MAPPING WORKSHEET

LCD Function	COM0		COM1		COM2		COM3		Pin No. 28/40-pin	PORT	Alternate Functions
	LCDDATAx Address	LCD Segment	LCDDATAx Address	LCD Segment	LCDDATAx Address	LCD Segment	LCDDATAx Address	LCD Segment			
SEG0	LCDDATA0, 0	A	LCDDATA3, 0	V	LCDDATA6, 0	K	LCDDATA9, 0	Ω	21/33	RB0	INT
SEG1	LCDDATA0, 1	RC	LCDDATA3, 1	BATT	LCDDATA6, 1	-	LCDDATA9, 1	AC	22/34	RB1	
SEG2	LCDDATA0, 2	DH	LCDDATA3, 2	RH	LCDDATA6, 2	B-C	LCDDATA9, 2	4DP	23/35	RB2	
SEG3	LCDDATA0, 3	3A	LCDDATA3, 3	3F	LCDDATA6, 3	3E	LCDDATA9, 3	3D	24/36	RB3	
SEG4	LCDDATA0, 4		LCDDATA3, 4		LCDDATA6, 4		LCDDATA9, 4		6/6	RA4	C1OUT/T0CKI
SEG5	LCDDATA0, 5		LCDDATA3, 5		LCDDATA6, 5		LCDDATA9, 5		7/7	RA5	C2OUT/AN4/SS
SEG6	LCDDATA0, 6	2A	LCDDATA3, 6	2F	LCDDATA6, 6	2E	LCDDATA9, 6	2D	14/18	RC3	
SEG7	LCDDATA0, 7		LCDDATA3, 7		LCDDATA6, 7		LCDDATA9, 7		3/3	RA1	AN1
SEG8	LCDDATA1, 0		LCDDATA4, 0		LCDDATA7, 0		LCDDATA10, 0		18/26	RC7	RX/DT/SDI/SDA
SEG9	LCDDATA1, 1		LCDDATA4, 1		LCDDATA7, 1		LCDDATA10, 1		17/25	RC6	TX/CK/SCK/SCL
SEG10	LCDDATA1, 2		LCDDATA4, 2		LCDDATA7, 2		LCDDATA10, 2		16/24	RC5	T1CKI/CCP1
SEG11	LCDDATA1, 3	3B	LCDDATA4, 3	3G	LCDDATA7, 3	3C	LCDDATA10, 3	3DP	15/23	RC4	T1G/SDO
SEG12	LCDDATA1, 4		LCDDATA4, 4		LCDDATA7, 4		LCDDATA10, 4		2/2	RA0	AN0
SEG13	LCDDATA1, 5		LCDDATA4, 5		LCDDATA7, 5		LCDDATA10, 5		28/40	RB7	ICSPDAT/ICDDAT
SEG14	LCDDATA1, 6		LCDDATA4, 6		LCDDATA7, 6		LCDDATA10, 6		27/39	RB6	ICSPCK/ICDCK
SEG15	LCDDATA1, 7		LCDDATA4, 7		LCDDATA7, 7		LCDDATA10, 7		5/5	RA3	AN3/VREF+
SEG16	LCDDATA2, 0	S1	LCDDATA5, 0	S2	LCDDATA8, 0	m	LCDDATA11, 0	M	-/26	RD3	
SEG17	LCDDATA2, 1		LCDDATA5, 1		LCDDATA8, 1		LCDDATA11, 1		-/27	RD4	
SEG18	LCDDATA2, 2		LCDDATA5, 2		LCDDATA8, 2		LCDDATA11, 2		-/28	RD5	
SEG19	LCDDATA2, 3		LCDDATA5, 3		LCDDATA8, 3		LCDDATA11, 3		-/29	RD6	
SEG20	LCDDATA2, 4		LCDDATA5, 4		LCDDATA8, 4		LCDDATA11, 4		-/30	RD7	
SEG21	LCDDATA2, 5	2B	LCDDATA5, 5	2G	LCDDATA8, 5	2C	LCDDATA11, 5	2DP	-/8	RE0	AN5
SEG22	LCDDATA2, 6	1A	LCDDATA5, 6	1F	LCDDATA8, 6	1E	LCDDATA11, 6	1D	-/9	RE1	AN6
SEG23	LCDDATA2, 7	1B	LCDDATA5, 7	1G	LCDDATA8, 7	1C	LCDDATA11, 7		-/10	RE2	AN7

# LCD Segment Mapping Worksheet

---

NOTES:



---

## WORLDWIDE SALES AND SERVICE

---

### AMERICAS

**Corporate Office**  
2355 West Chandler Blvd.  
Chandler, AZ 85224-6199  
Tel: 480-792-7200  
Fax: 480-792-7277  
Technical Support:  
<http://support.microchip.com>  
Web Address:  
[www.microchip.com](http://www.microchip.com)

#### Atlanta

Alpharetta, GA  
Tel: 770-640-0034  
Fax: 770-640-0307

#### Boston

Westborough, MA  
Tel: 774-760-0087  
Fax: 774-760-0088

#### Chicago

Itasca, IL  
Tel: 630-285-0071  
Fax: 630-285-0075

#### Dallas

Addison, TX  
Tel: 972-818-7423  
Fax: 972-818-2924

#### Detroit

Farmington Hills, MI  
Tel: 248-538-2250  
Fax: 248-538-2260

#### Kokomo

Kokomo, IN  
Tel: 765-864-8360  
Fax: 765-864-8387

#### Los Angeles

Mission Viejo, CA  
Tel: 949-462-9523  
Fax: 949-462-9608

#### San Jose

Mountain View, CA  
Tel: 650-215-1444  
Fax: 650-961-0286

#### Toronto

Mississauga, Ontario,  
Canada  
Tel: 905-673-0699  
Fax: 905-673-6509

### ASIA/PACIFIC

**Australia - Sydney**  
Tel: 61-2-9868-6733  
Fax: 61-2-9868-6755

**China - Beijing**  
Tel: 86-10-8528-2100  
Fax: 86-10-8528-2104

**China - Chengdu**  
Tel: 86-28-8676-6200  
Fax: 86-28-8676-6599

**China - Fuzhou**  
Tel: 86-591-8750-3506  
Fax: 86-591-8750-3521

#### China - Hong Kong SAR

Tel: 852-2401-1200  
Fax: 852-2401-3431

**China - Shanghai**  
Tel: 86-21-5407-5533  
Fax: 86-21-5407-5066

**China - Shenyang**  
Tel: 86-24-2334-2829  
Fax: 86-24-2334-2393

**China - Shenzhen**  
Tel: 86-755-8203-2660  
Fax: 86-755-8203-1760

**China - Shunde**  
Tel: 86-757-2839-5507  
Fax: 86-757-2839-5571

**China - Qingdao**  
Tel: 86-532-502-7355  
Fax: 86-532-502-7205

### ASIA/PACIFIC

**India - Bangalore**  
Tel: 91-80-2229-0061  
Fax: 91-80-2229-0062

**India - New Delhi**  
Tel: 91-11-5160-8631  
Fax: 91-11-5160-8632

**Japan - Kanagawa**  
Tel: 81-45-471- 6166  
Fax: 81-45-471-6122

**Korea - Seoul**  
Tel: 82-2-554-7200  
Fax: 82-2-558-5932 or  
82-2-558-5934

**Malaysia - Penang**  
Tel: 011-604-646-8870  
Fax: 011-604-646-5086

**Philippines - Manila**  
Tel: 011-632-634-9065  
Fax: 011-632-634-9069

**Singapore**  
Tel: 65-6334-8870  
Fax: 65-6334-8850

**Taiwan - Kaohsiung**  
Tel: 886-7-536-4818  
Fax: 886-7-536-4803

**Taiwan - Taipei**  
Tel: 886-2-2500-6610  
Fax: 886-2-2508-0102

**Taiwan - Hsinchu**  
Tel: 886-3-572-9526  
Fax: 886-3-572-6459

### EUROPE

**Austria - Weis**  
Tel: 43-7242-2244-399  
Fax: 43-7242-2244-393

**Denmark - Ballerup**  
Tel: 45-4450-2828  
Fax: 45-4485-2829

**France - Massy**  
Tel: 33-1-69-53-63-20  
Fax: 33-1-69-30-90-79

**Germany - Ismaning**  
Tel: 49-89-627-144-0  
Fax: 49-89-627-144-44

**Italy - Milan**  
Tel: 39-0331-742611  
Fax: 39-0331-466781

**Netherlands - Drunen**  
Tel: 31-416-690399  
Fax: 31-416-690340

**England - Berkshire**  
Tel: 44-118-921-5869  
Fax: 44-118-921-5820